


gen4-4DCAPE Series

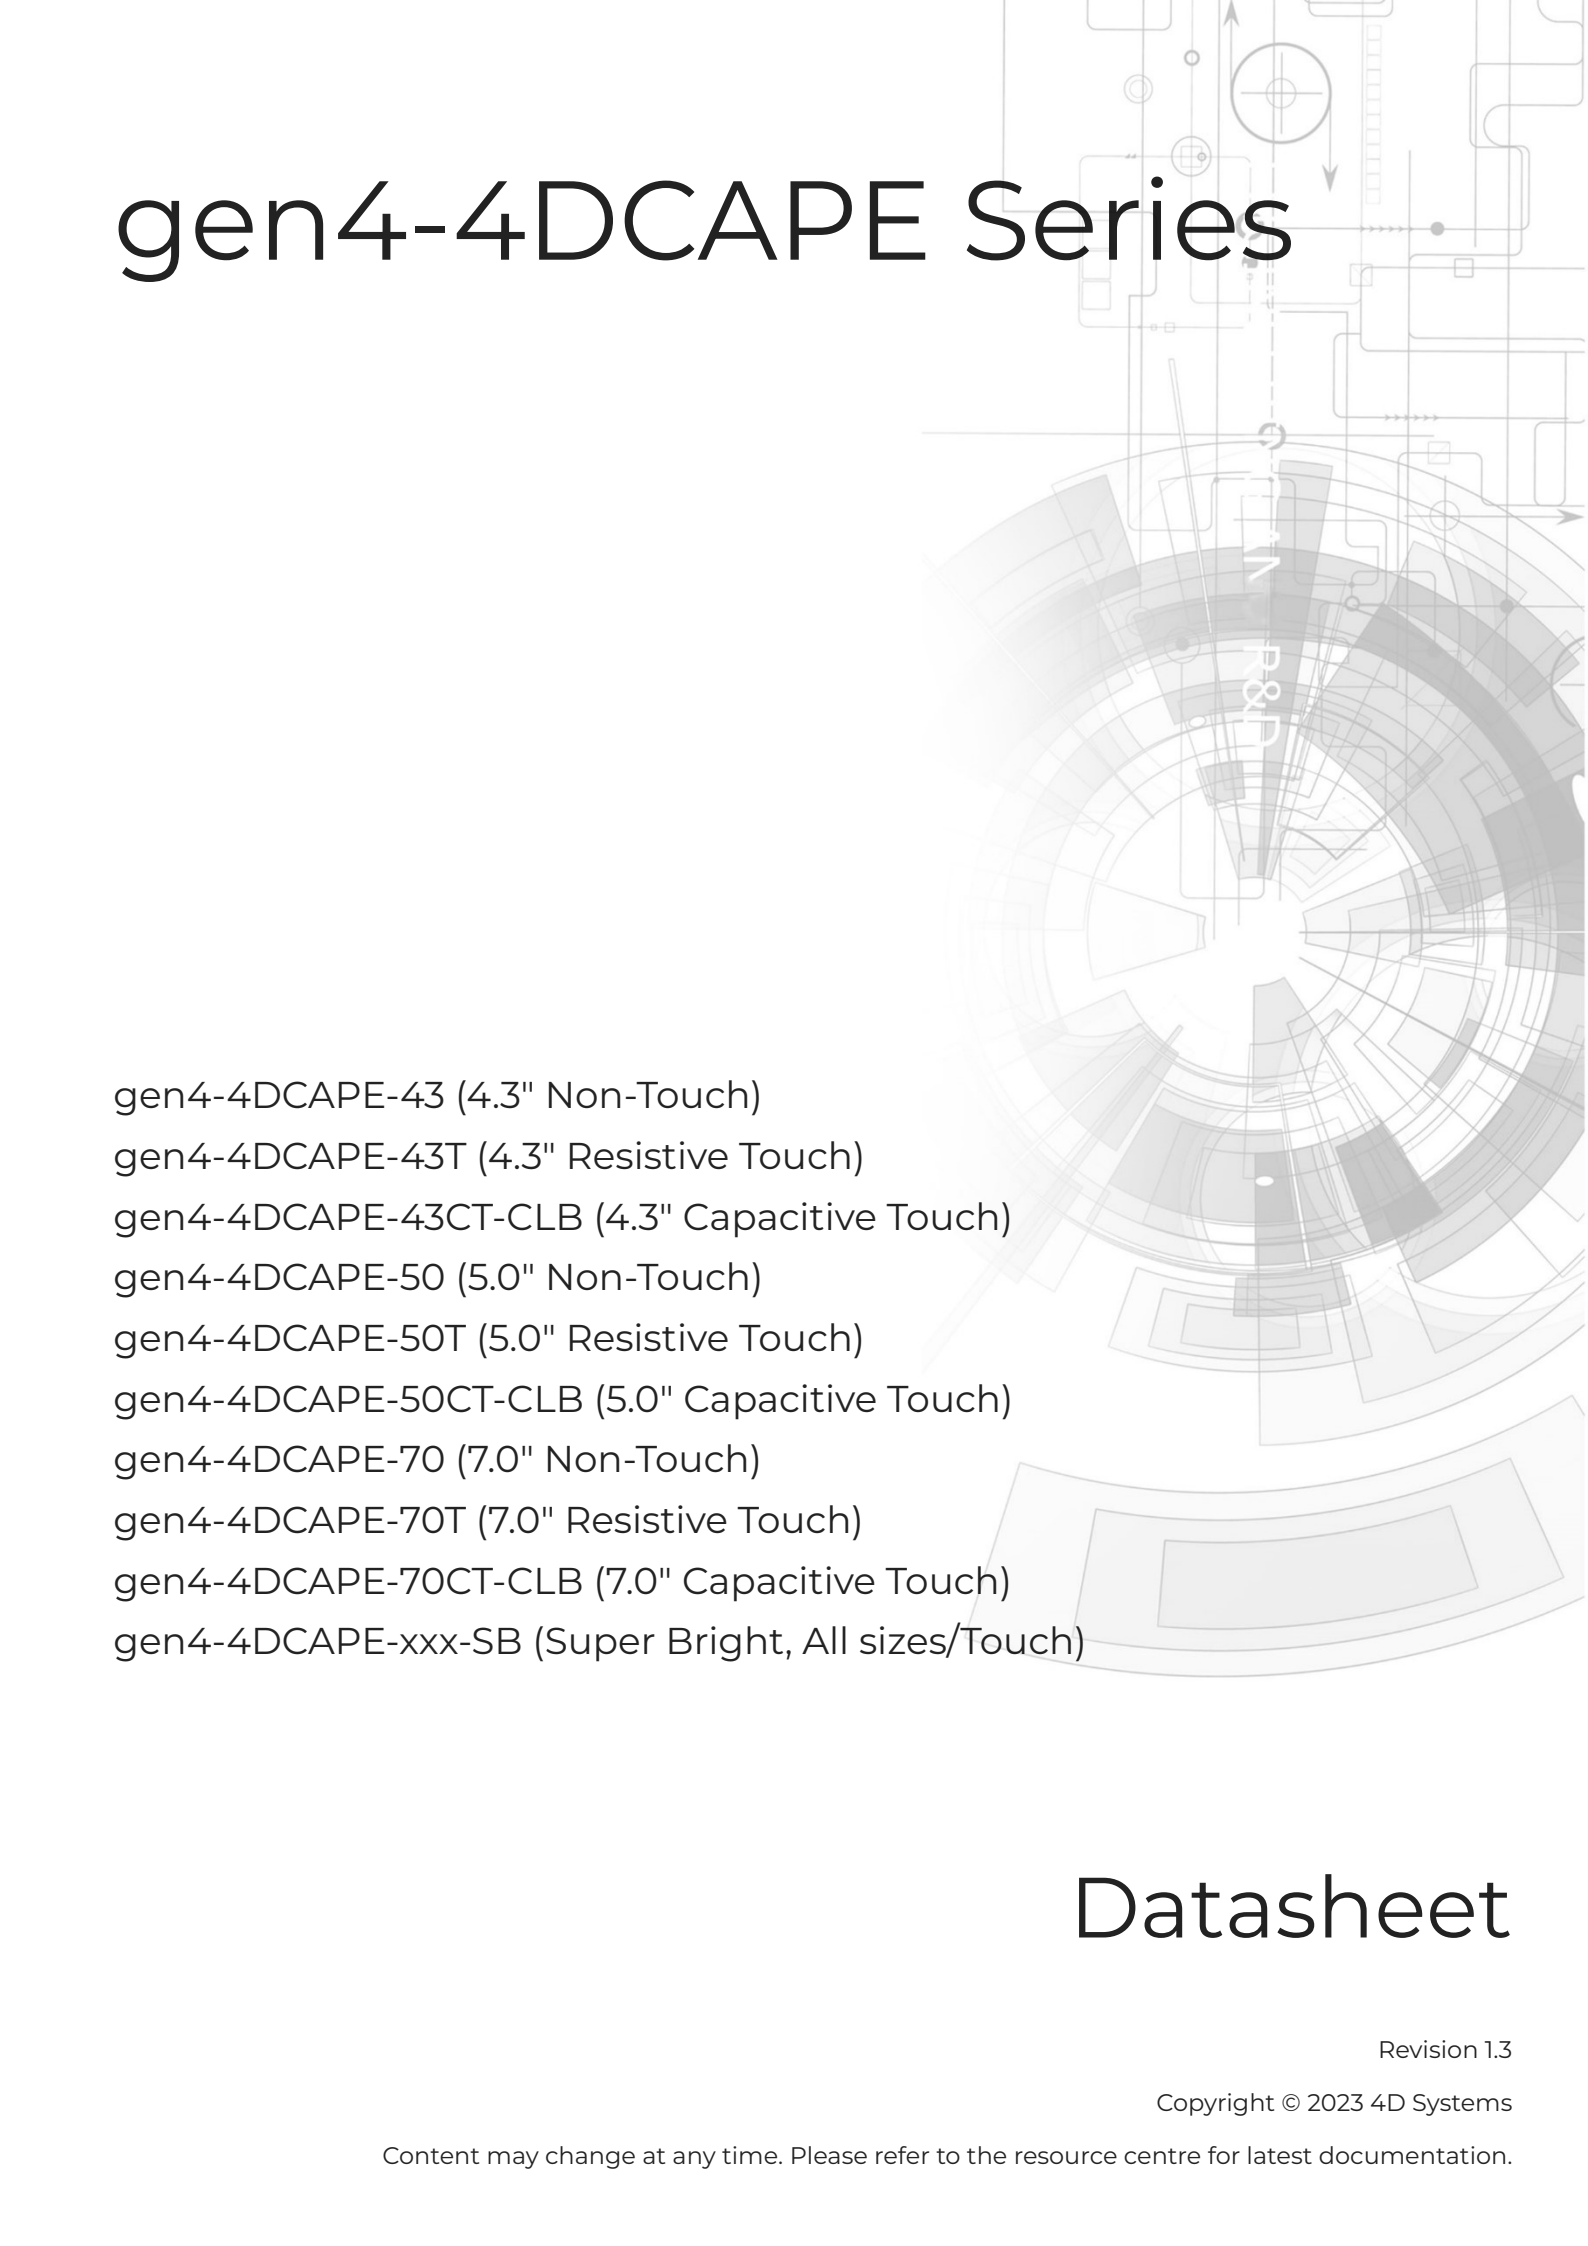

gen4-4DCAPE-43 (4.3" Non-Touch)
gen4-4DCAPE-43T (4.3" Resistive Touch)
gen4-4DCAPE-43CT-CLB (4.3" Capacitive Touch)
gen4-4DCAPE-50 (5.0" Non-Touch)
gen4-4DCAPE-50T (5.0" Resistive Touch)
gen4-4DCAPE-50CT-CLB (5.0" Capacitive Touch)
gen4-4DCAPE-70 (7.0" Non-Touch)
gen4-4DCAPE-70T (7.0" Resistive Touch)
gen4-4DCAPE-70CT-CLB (7.0" Capacitive Touch)
gen4-4DCAPE-xxx-SB (Super Bright, All sizes/Touch)

Datasheet

Revision 1.3

Copyright © 2023 4D Systems

Content may change at any time. Please refer to the resource centre for latest documentation.

Contents

1. Description	4
2. Features	5
3. Getting Started	6
3.1. Requirements	6
3.2. How to Use the GEN4-4DCAPE	6
3.3. Changing the brightness (Debian)	7
3.4. Calibrating resistive touch (Debian)	8
4. EEPROM Details	8
5. Hardware Drivers	8
6. Display Precautions	9
7. Optional Button Board	9
8. Power Source	10
9. Display Module Part Numbers	11
10. Cover Lens Bezel - Tape Spec	11
11. Standard FFC Specifications	12
12. Mechanical Details - 4.3" (Non-Touch & Resistive Touch)	13
13. Mechanical Details - 4.3" (Capacitive Touch)	14
14. Mechanical Details - 5.0" (Non-Touch & Resistive Touch)	15
15. Mechanical Details - 5.0" (Capacitive Touch)	16
16. Mechanical Details - 7.0" (Non-Touch & Resistive Touch)	17
17. Mechanical Details - 7.0" (Capacitive Touch)	18
18. Mechanical Details (gen4-4DCAPE Adaptor)	19
19. Mechanical Details (gen4-4DCAPE Button Board)	20
20. Schematic Diagram (gen4-4DCAPE)	21
21. Schematic Diagram (gen4-4DCAPE Adaptor)	22
22. Schematic Diagram (gen4-4DCAPE Button Board - OPTIONAL)	23
23. Specifications	24

24. Revision History	28
25. Ordering Information	29

1. Description

The gen4-4DCAPE range is specifically designed for the Beagle Bone Black* (BBB), and provides a 4.3", 5.0" or 7.0" primary display for the BBB for direct user interaction and information display.

Available in both Resistive Touch (GEN4-4DCAPE-xxT), Capacitive Touch (GEN4-4DCAPE-xxCT-CLB) and non-touch (GEN4-4DCAPE-xx) via a special request - the non-touch version may be subject to MOQ.

Note

(xx refers to 43, 50 and 70 accordingly)

The gen4-4DCAPE is **NOT** compatible with the previous Beagle Bone (Beagle Bone White) and was designed to only be used with the Beagle Bone Black. It has successfully been used with the Beaglebone Green, and the Beaglebone Black Wireless by customers also.

The gen4-4DCAPE features an onboard Microchip AR1021 resistive touch controller (Resistive Touch version only), which talks to the BBB over I2C. This enables a robust and reliable resistive touch platform, compared to previous gen4-4DCAPE models which used the BBB's analog inputs, which were prone to external noise and open-source software. The Capacitive Touch version uses a Focaltech capacitive touch controller, which also communicates over I2C.

The Beagle Bone Black connects directly to an adaptor CAPE, which then connects to the display module using a 30-way FFC ribbon cable, enabling multiple mounting options. Everything the LCD CAPE requires such as power and display signals are provided from the BBB directly, via the Adaptor and FFC ribbon cable.

The gen4 4DCAPE features an optional push buttons connector, providing the capability for an external button board. Please contact Sales regarding this item, it is a special order item only.


Mounting of the 4DCAPE is achieved with the 4x 4mm mounting holes present on the Display Module (Resistive and Non-Touch), enabling standard screws to fasten the GEN4 4DCAPE as required, or via the adhesive supplies on the Cover Lens Bezel which is part of the Capacitive Touch version.

Note



The Beaglebone, Beaglebone Black and Beagleboard remain the property of beaglebone.org. All references to the words Beaglebone, Beaglebone Black, and Beagleboard are licensed under a Creative Commons Attribution-Share Alike 3.0 license.

2. Features

- 4.3", 5.0" and 7.0" TFT LCD CAPE options for the Beagle Bone Black
- Available in 3 models, Resistive Touch (GEN4-4DCAPE-xxT), Capacitive Touch (GEN4-4DCAPE-xxCT) and Non-Touch (GEN4-4DCAPE-xx) where xx is 43, 50 and 70.
- 480x272 Resolution 4.3" TFT LCD Display, or 800x480 Resolution 5.0" and 7.0" TFT LCD Display
- 7 optional push buttons via an external button board are available on request, enabling LEFT, RIGHT, UP, DOWN, ENTER, RESET and POWER functionality. This push button board is only available on request and is made to order.
- EEPROM CAPE ID selection via DIP switch
- 4x 4.0mm Mounting holes on Non-Touch and Resistive Touch modules, or via adhesive for Capacitive Touch model.
- RoHS and CE Compliant

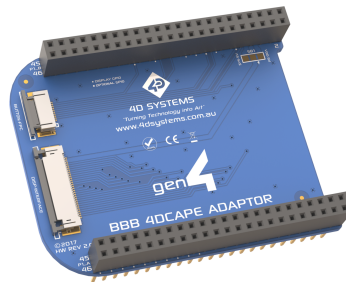

GEN4-4DCAPE Adaptor

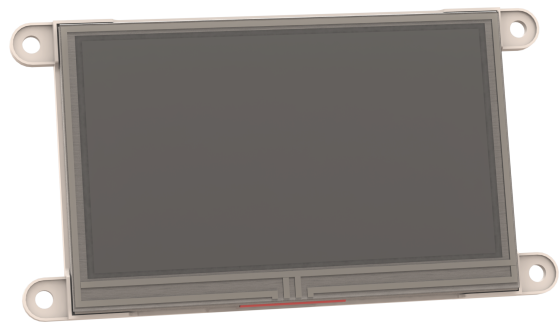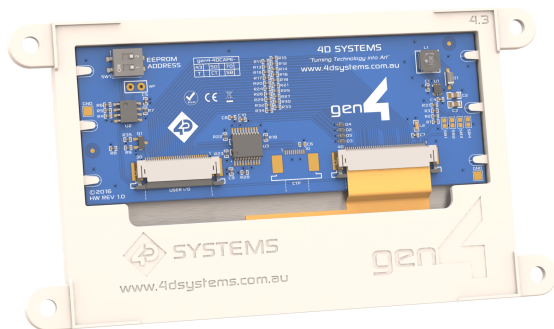

GEN4-4DCAPE 4.3" Resistive Touch Display

Note

CE EMC has not been conducted on these modules.

3. Getting Started

3.1. Requirements

The gen4-4DCAPEs are designed to work with the Debian Operating System supplied for the Beagle Bone Black. It could however be adapted to work on other distributions by the User.

The Requirements for use are:

- gen4-4DCAPE + Adaptor + FFC Cable
- Beagle Bone Black (BBB) with suitable distribution loaded
- 5V DC Supply suitable for the Beagle Bone Black (using DC Jack), recommended 2A @ 5V.
- A Stylus is recommended for accurate touch, however, is not required.

3.2. How to Use the GEN4-4DCAPE

The following steps should be all that is required to use the gen4-4DCAPE:

1. Connect the gen4-4DCAPE Adaptor to the Beagle Bone Black while the Beagle Bone Black is not powered.
2. Connect the 30-way FFC cable to the gen4-4DCAPE Adaptor and the gen4-4DCAPE Display. The 30-way FFC connectors are 'Upper Contact' meaning the blue stiffener on the FFC cable should be against the PCB, with the metal pads on the cable facing upward.
3. If using with other capes on your BBB, ensure the gen4-4DCAPE is not conflicting pin-wise to any other cape installed.
4. Ensure the EEPROM ID switch on the gen4-4DCAPE is set to a different EEPROM ID than any other capes.
5. Ensure your Beagle Bone Black is loaded with a suitable Linux distribution that is compatible with 4D Systems gen4-4DCAPEs. Debian is the distribution shipping with current BBB boards now and can be installed onto older BBBs. If the distribution you wish to use is not supporting 4D Systems gen4-4DCAPEs by default, the supplied source files can be used, please refer to our Product Page.
6. Connect a 5V Supply to the DC Jack of the Beagle Bone Black. It is recommended to use a 2A supply to ensure sufficient supply. By default, the gen4-4DCAPE requires power via the DC Jack, as the onboard power management of the BBB may be overloaded depending on other systems installed. So, the USB jack will not supply power to the gen4-4DCAPE unless the Solder Bridge jumper on the top of the gen4-4DCAPE Adaptor board, is cut and resoldered. (Discussed further in a later section)
7. Once power is connected, something should be displayed on the gen4-4DCAPE a few moments after it has started to boot. Each distribution will behave differently and require different input from the User. It is recommended to have a keyboard attached while setting the system up, as login details etc may be required. Some distributions may prompt for LCD calibration, while others may prompt for Username/Password.

If there is no output, check the bootloader version of the BBB by running the following in the command terminal:

```
$ sudo /opt/scripts/tools/version.sh | grep bootloader
```

The version of the bootloader in the microSD and eMMC should be later than 2018.13 and the microSD's bootloader must be older than what is loaded in the eMMC for the CAPE to work properly.

A quick fix is to always remove the version of u-boot from the eMMC, for example, this clears out the first 10Mb of the drive:

```
$ sudo dd if=/dev/zero of=/dev/mmcblk1 bs=1M count=10
```

For support of the BBB and various distributions, please seek support from the respective websites associated with the BBB itself or the distributions - See the [Hardware Drivers](#).

A good place to start for information and support regarding the BBB and various distributions available is the [BeagleBoard](#) website.

This website details the latest firmware images for the BBB: <https://www.beagleboard.org/latest-images>.

This website details how to get started with the BBB: <https://www.beagleboard.org/getting-started>.

For support regarding the 4DCAPE [hardware](#) itself, please go to the [4D Systems website](#) or you can contact [Support](#) directly via a ticket.

3.3. Changing the brightness (Debian)

It is possible to change the backlight brightness as the backlight is PWM controlled.

Please note, these instructions may become obsolete as new versions of Debian are released, or if different distributions are used.

One method is to SSH into the Beaglebone Black from your PC and set the backlight value that way. Note this does not persist over restarts, so this would need to be entered into a startup script if the setting is required to be set for each startup.

At the command prompt, type the following:

```
sudo su
cd /sys/class/backlight/backlight
echo 50 > brightness
```

Where 50 represents 50%, this can be changed to any number from 0 to 100 as required.

The exact path may vary with distributions, so check the `/sys/class/backlight` path to see what backlight file exists.

3.4. Calibrating resistive touch (Debian)

When a distribution is used for the first time with a gen4-4DCAPE, often an LCD calibration application will start automatically. However, depending on the distribution in use, this may or may not happen. Some distributions may not even come with a calibration application loaded.

For ones that do have the calibration program loaded by default, and if the calibration is input incorrectly and it is required to be set again, it can generally be started from the 'Start' menu.

Note

This may change as newer distributions become available, or if different distributions are used, so these instructions may become obsolete or inaccurate.

4. EEPROM Details

On the gen4-4DCAPE Display Module, there is an EEPROM that the BBB reads and uses to determine which drivers/modules to load based on overlay files that exist on that specific distribution.

There is a DIP Switch on the top left corner of the 4DCAPE Display Module, which allows the EEPROM ID to be set to 4 different values, so 4 different CAPES can be added to a single BBB if required. Only 1 LCD CAPE can be installed at once, however.

The EEPROM ID will change from 0x57 when both switches are OFF, 0x56 when the left-hand side (A0) is ON, 0x55 when the right-hand side (A1) is ON, and 0x54 when both are ON.

5. Hardware Drivers

The gen4-4DCAPE features the AR1021 resistive touch IC, made by Microchip, and a driver is supplied for this by 4D Systems for use with Linux systems such as Debian. Communications to the AR1021 are via I2C, specifically using the I2C #1 channel on the BBB. Please refer to the Schematic Diagram for more information about its connections.

The gen4-4DCAPE also features the TI TPS61165 backlight drive IC, which implements a 1-wire communications protocol between the BBB and the Driver IC, enabling software commands to be sent from the BBB rather than PWM signals, to vary the backlight brightness. This results in lower noise and a more stable backlight system. A Driver for this is supplied by 4D Systems for use with Linux systems such as Debian.

The Capacitive Touch version of the gen4-4DCAPE features a Focaltech Capacitive Touch controller built into the display. This communicates to the BBB using the I2C #1 channel. A Driver for this is supplied by 4D Systems for use with Linux systems such as Debian.

6. Display Precautions

- Avoid having to display the same image/object on the screen for lengthy periods. This will cause a burn-in which is a common problem with all types of display technologies. Blank the screen after a while or dim it very low by adjusting the contrast. Better still; implement a screen saver feature.
- Moisture and water can damage the display. Moisture on the surface of a powered display will cause the electrodes to corrode. Wipe off any moisture gently or let the display dry before usage.
- Dirt from fingerprint oil and fat can easily stain the surface of the display. Gently wipe off any stains with a soft lint-free cloth. -The performance of the display will degrade under high temperatures and humidity. Avoid such conditions when storing.
- Do not tamper with the display flex cable that is connected to the control board. This may affect the connection between the display and the driving circuitry and cause failure. Under no circumstances should the display flex be disconnected from the PCB and power applied to the PCB, as this could result in the instant failure of the CAPE.
- Displays are susceptible to mechanical shock and any force exerted on the module may result in deformed zebra stripes, a cracked display cell and broken backlight.
- Always use the mounting holes (where applicable) on the module to mount the display.

7. Optional Button Board

The gen4-4DCAPE has the option to use an external button board, for actions such as up, down, left, right, enter/return, power and reset, or as required by the User.

Alternatively, any momentary push buttons can be attached, as they are simply a connection between a GPIO and GND to form the button press connection. 4D Systems provides a button board that can be used if required and supplied/sold on request. It is not offered as part of the module as standard.

The gen4-4DCAPE button board is a small PCB with a row of 7 momentary push buttons on the front, and a 10-way FFC connector designed for a 10-way ribbon cable to attach to, and then connect to the gen4-4DCAPE Adaptor board.

The 10-way FFC connectors for the gen4-gen4-4DCAPE Button Board are Bottom Contact, meaning the terminals need to be towards the PCB, and the stiffener needs to be facing upwards (opposite to the main 30-way FFC cable to the display).

8. Power Source

The gen4-4DCAPE power source comes from the BBB, via the gen4-4D CAPE Adaptor board which plugs on top of the BBB itself.

The Adaptor board taps into the VDD_5V bus power on the BBB, which is connected to the DC Barrel Jack on the BBB. **It will not receive power when the BBB is powered from USB**, as the USB power goes via the BBB power management IC, which then is supplied on the SYS_5V bus.

It has been designed this way by default as the SYS_5V system has finite capabilities and depending on what else the BBB is doing and what other gen4-CAPES/Devices are connected, there may not be sufficient power left to supply the gen4-4DCAPE. Also, if an SB (Super Bright) version of the gen4-4DCAPE is used, it is very likely the USB power management system would not supply enough power even if nothing else was connected. It however is possible to modify the gen4-4DCAPE Adaptor board to use the SYS_5V bus, if required.

On the top of the gen4-4DCAPE Adaptor is a Solder Jumper, which has 3 pads. By default, there is a track connecting the centre pad to the side marked VDD_5V. If SYS_5V is required instead, then this VDD_5V track must be cut between these 2 pads, and a solder blob is added instead between the centre pad and the pad marked SYS_5V. DO NOT have both sides connected to the centre pad at once, or else your BBB may be damaged.

A sharp craft knife, a soldering iron and solder are required ideally for this modification.

Take care when doing this modification, as warranty claims will not apply due to damage to the product while undertaking this modification.

9. Display Module Part Numbers

The following is a breakdown of the part numbers and what they mean.

Example:

• gen4-4DCAPE-70CT-CLB-SB

gen4 - gen4 Display Range

4DCAPE - Display Family

70 - Display size (7.0")

T - Resistive Touch

CT - Capacitive Touch

CLB - Cover Lens Bezel

SB - Super Bright Display

Note

- For part numbers that do not include T or CT, these are non-touch variants.
- Cover Lens Bezels (CLB) are glass fronts for the display module with overhanging edges, which allow the display module to be mounted directly into a panel using special adhesive on the overhanging glass. These are available for Capacitive Touch only.

10. Cover Lens Bezel - Tape Spec

The perimeter of the CLB display modules features double-sided adhesive tape, designed to stick directly onto a panel, enclosure, box etc without the need for any mounting screws or hardware.

The tape used is 3M 9495LE tape, which uses well-known and strong 3M 300LSE adhesives.

The double-sided adhesive has a thickness of 0.17mm once the backing has been removed.

More information on this adhesive can be found on the 3M website.

11. Standard FFC Specifications

Between the gen4-4DCAPE-Adaptor and the gen4-CAPE Display Module, the following FFC cable is supplied:

30 Pin Flexible Flat Cable, 150mm Long, 0.5mm (0.02") pitch

Cable Type: AWM 20624 80C 60V VW-1

Heat Resistance 80 Degrees Celsius

Connections on the opposite side at each end (Type B)

Between the gen4-4DCAPE-Adaptor and the gen4-4DCAPE Button Board (when purchased via Sales Dept), the following FFC cable is supplied:

10 Pin Flexible Flat Cable, 150mm Long, 0.5mm (0.02") pitch

Cable Type: AWM 20624 80C 60V VW-1

Heat Resistance 80 Degrees Celsius

Connections on the opposite side at each end (Type B)

Technical drawing of the gen4 4.3" CAPE Primary Display, showing front, side, and back views with dimensions.

Front View Dimensions:

- Overall Width: 127.6mm
- Overall Height: 69.3mm
- Display Area Width: 117.6mm
- Display Area Height: 53.86mm
- Bottom Panel Width: 106mm (APP PCB)
- Bottom Panel Height: 18.6mm
- Bottom Panel Width (excluding mounting holes): 15.5mm
- Mounting Hole Diameter: Ø4
- Mounting Hole Spacing: 10mm

Side View Dimensions:

- Overall Thickness: 6.8mm (Non Touch) / 7.9mm (Resistive Touch)
- Mounting Hole Depth: 1.1mm
- Display Area Depth: 66.2mm
- Bottom Panel Thickness: 0.7mm
- Bottom Panel Depth: 3mm
- Bottom Panel Width: 7.2mm (Resistive Touch) / 6.1mm (Non Touch)

Back View Dimensions:

- Overall Width: 58.8mm
- Overall Height: 27.3mm
- Mounting Hole Diameter: Ø4
- Mounting Hole Spacing: 10mm

Internal Components:

- 4D SYSTEMS logo
- gen4 logo
- www.4dsystems.com.au
- 4.3" label
- 4D SYSTEMS logo (bottom left)
- gen4 logo (bottom right)
- www.4dsystems.com.au (bottom left)
- 4.3" label (top right)

Notes:

- UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS
- SURFACE FINISH: 0.3mm
- TOLERANCES: LINEAR: 0.3mm
- ANGULAR: 0.3mm

Table:


NAME	DATE
4D	05/10/2016

Revision Table:

REVISION	DATE
1.0	05/10/2016

4D SYSTEMS logo

13. Mechanical Details - 4.3" (Capacitive Touch)

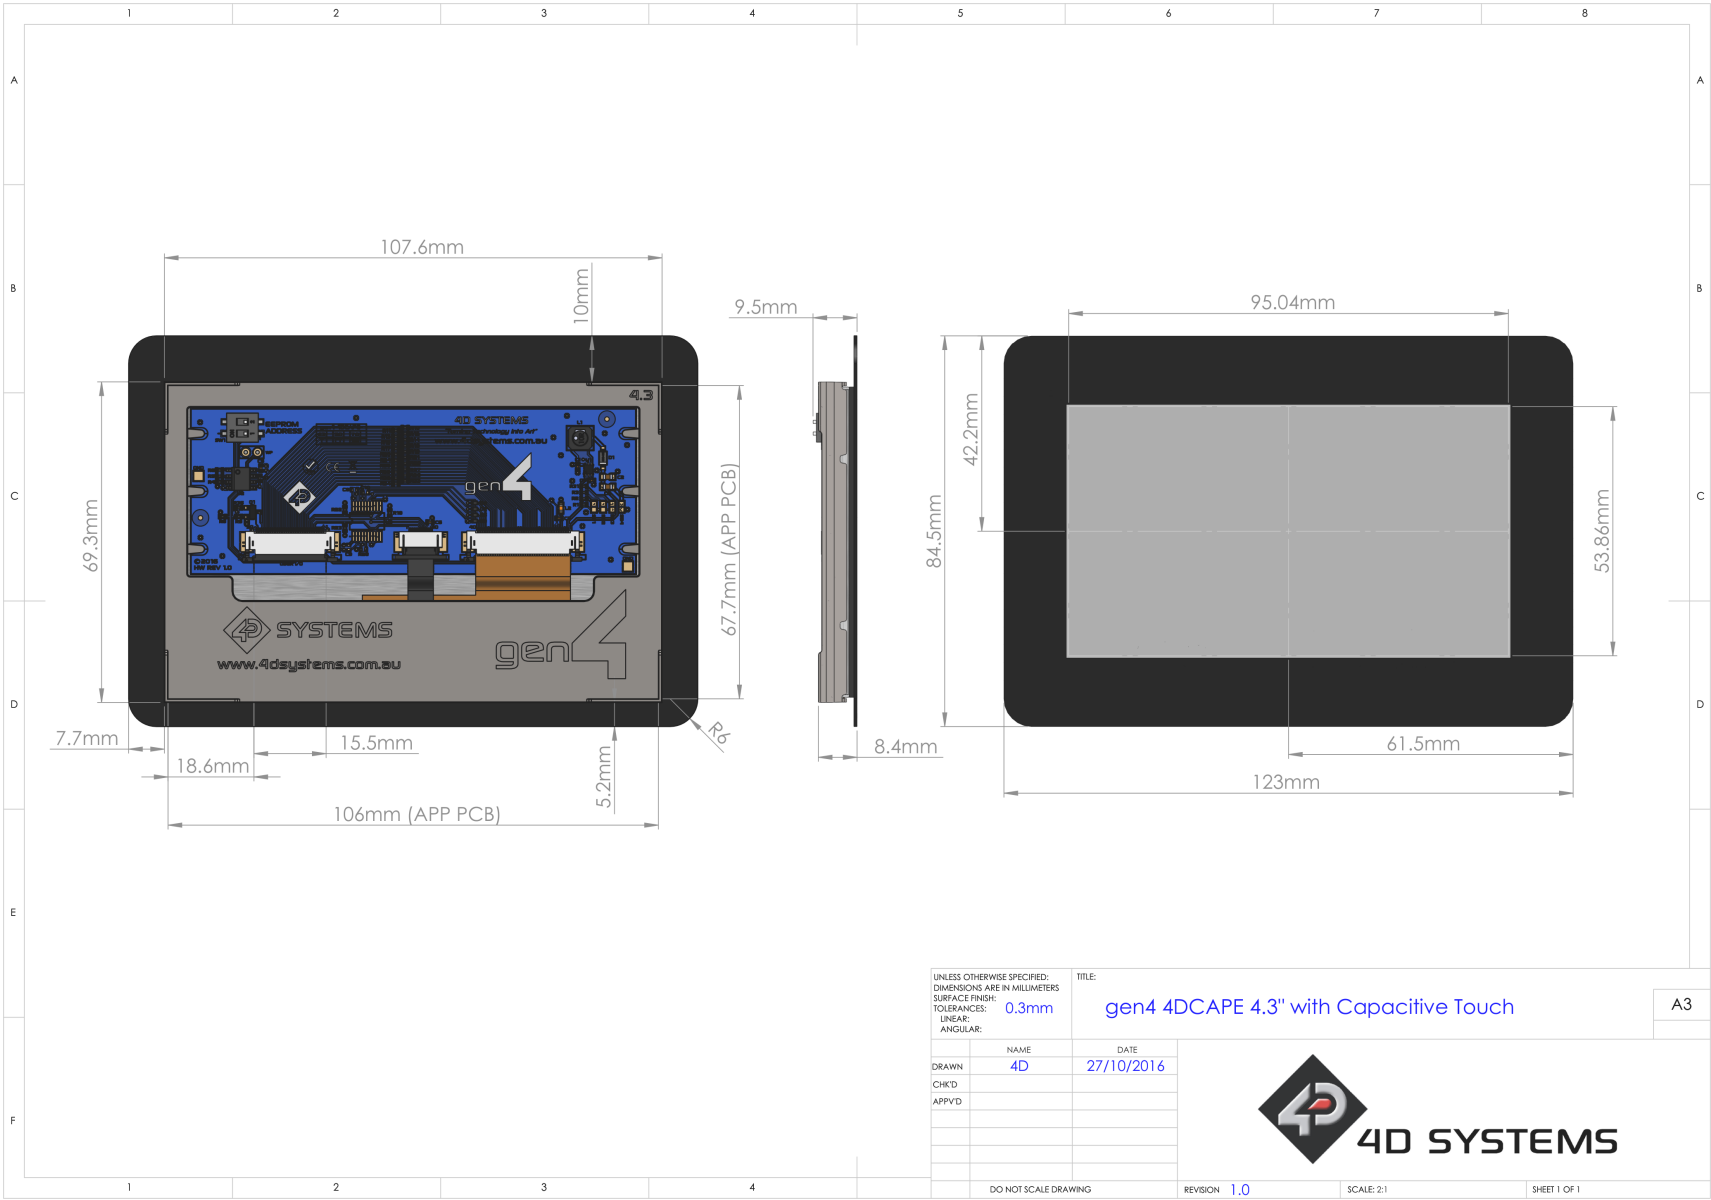

1 2 3 4 5 6 7 8

A

B

C

D

E

F

1 2 3 4 5 6 7 8

9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

77.9mm
67.9mm

142.8mm
132.8mm

76.3mm (APP PCB)

5.0

26.4mm
15.5mm
121.2mm (APP PCB)

4D SYSTEMS
www.4dsystems.com.au
gen4

5.0

6.6mm (Non-Touch)
7.8mm (Resistive Touch)

1.1mm

66.5mm

31.8mm

75.3mm

0.7mm

3mm

7.1mm (Resistive Touch)
5.9mm (Non-Touch)

108mm
64.80mm

8.5mm
9.9mm

10mm

Ø4

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN MILLIMETERS
SURFACE FINISH:
TOLERANCES:
LINEAR: 0.3mm
ANGULAR:

TITLE:
gen4 5.0" CAPE Primary Display

DRAWN: 4D
CHKD:
APPVD:

NAME: 4D
DATE: 14/10/2016

DO NOT SCALE DRAWING


REVISION: 1.0

SCALE: 2:1

SHEET 1 OF 1

4D SYSTEMS

16. Mechanical Details - 7.0" (Non-Touch & Resistive Touch)

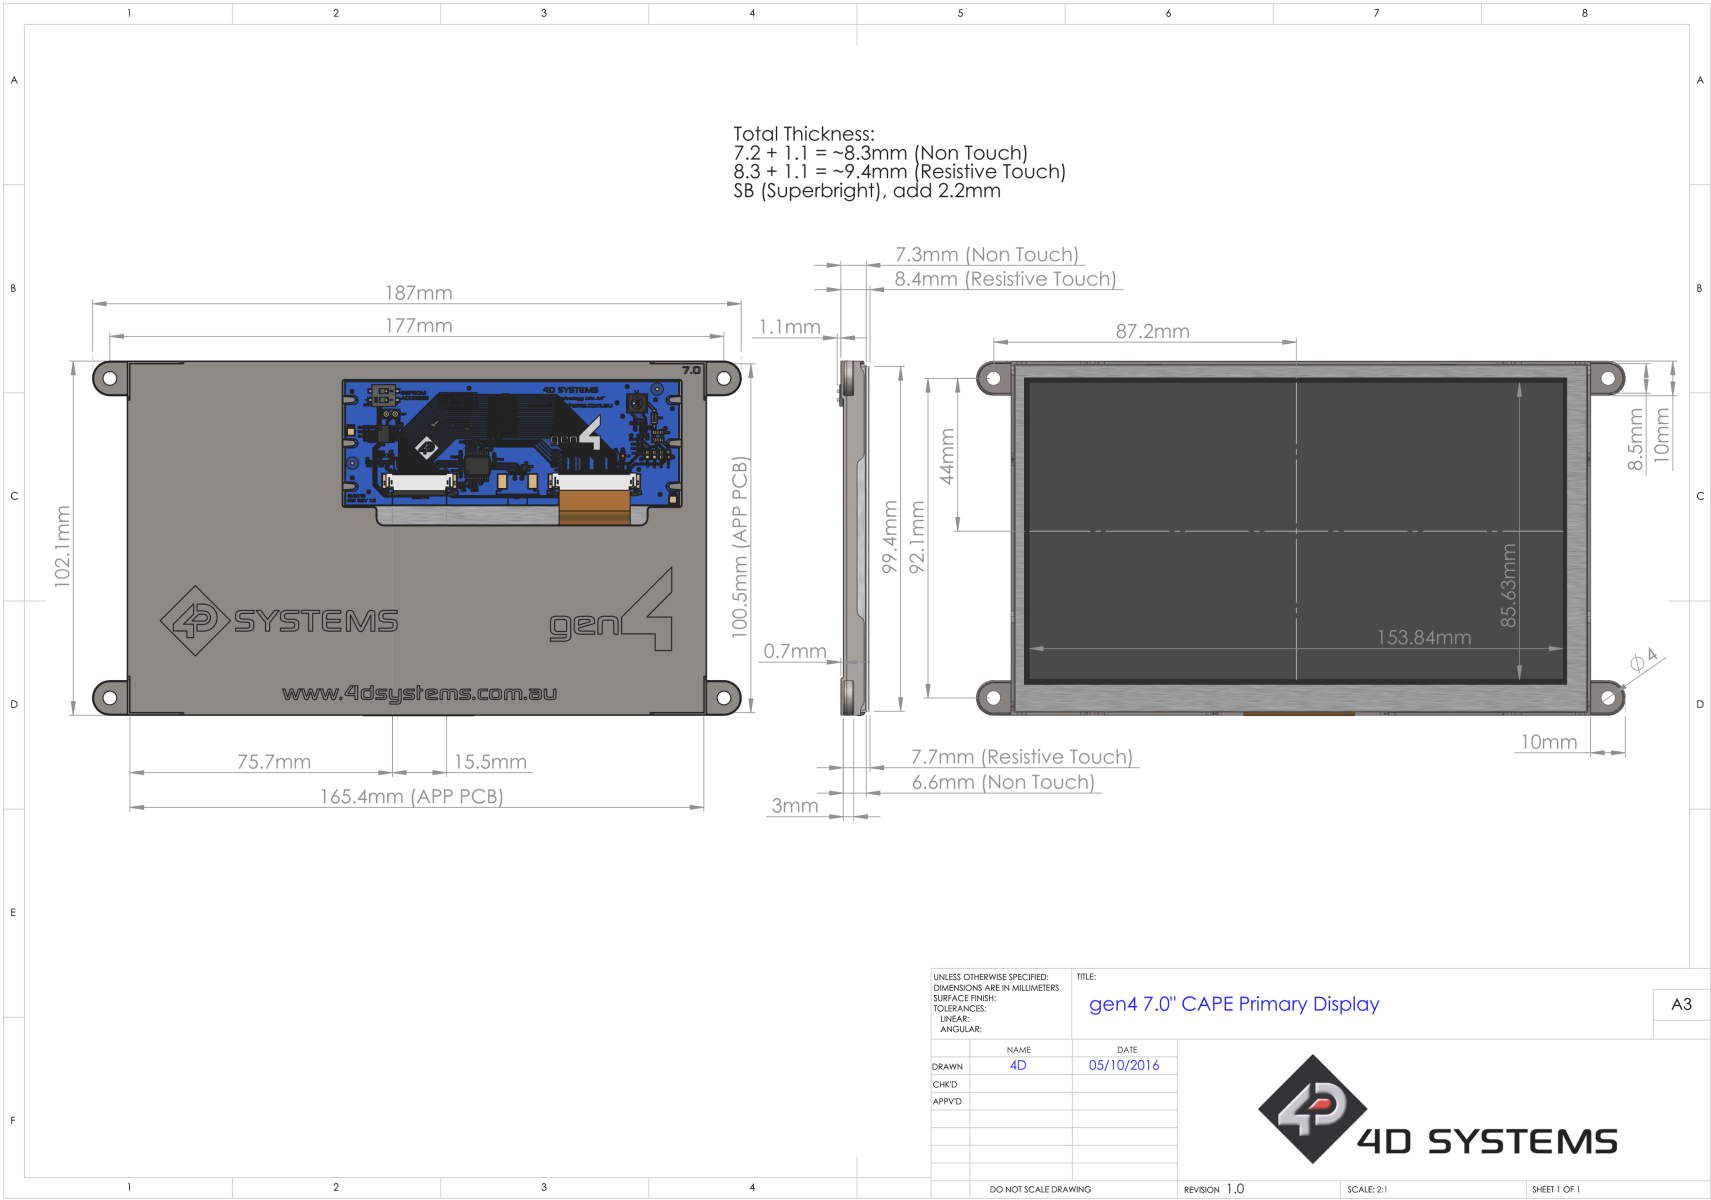

This technical drawing provides detailed dimensions for the gen4 4DCAPE 7.0" with Capacitive Touch. The drawing includes three views: a top view, a side view, and a front view.

Top View Dimensions:

- Overall width: 167mm
- Overall height: 102.1mm
- Internal width (APP PCB): 165.5mm
- Internal height (APP PCB): 100.5mm
- Top-left corner radius: R6
- Distance from left edge to internal width start: 75.7mm
- Distance from internal width start to right edge: 15.5mm
- Distance from top edge to internal height start: 10.2mm
- Distance from internal height start to bottom edge: 11.9mm
- Distance from bottom edge to internal height end: 12.8mm

Side View Dimensions:

- Overall thickness: 10mm
- Internal thickness: 0.7mm
- Bottom flange thickness: 9mm

Front View Dimensions:

- Overall width: 190.1mm
- Overall height: 121.9mm
- Internal width: 153.84mm
- Internal height: 85.6mm
- Top-left corner radius: R6

Text and Logos:

- Top-left corner: 4D SYSTEMS logo
- Top-right corner: gen4 logo
- Bottom center: www.4dsystems.com.au

Table:

UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS SURFACE FINISH: TOLERANCES: LINEAR: ANGULAR:		TITLE: gen4 4DCAPE 7.0" with Capacitive Touch	
DRAWN	4D	DATE	28/10/2016
CHKD			
APPVD			

DO NOT SCALE DRAWING


REVISION 1.0

SCALE: 2:1

SHEET 1 OF 1


4D SYSTEMS

18. Mechanical Details (gen4-4DCAPE Adaptor)

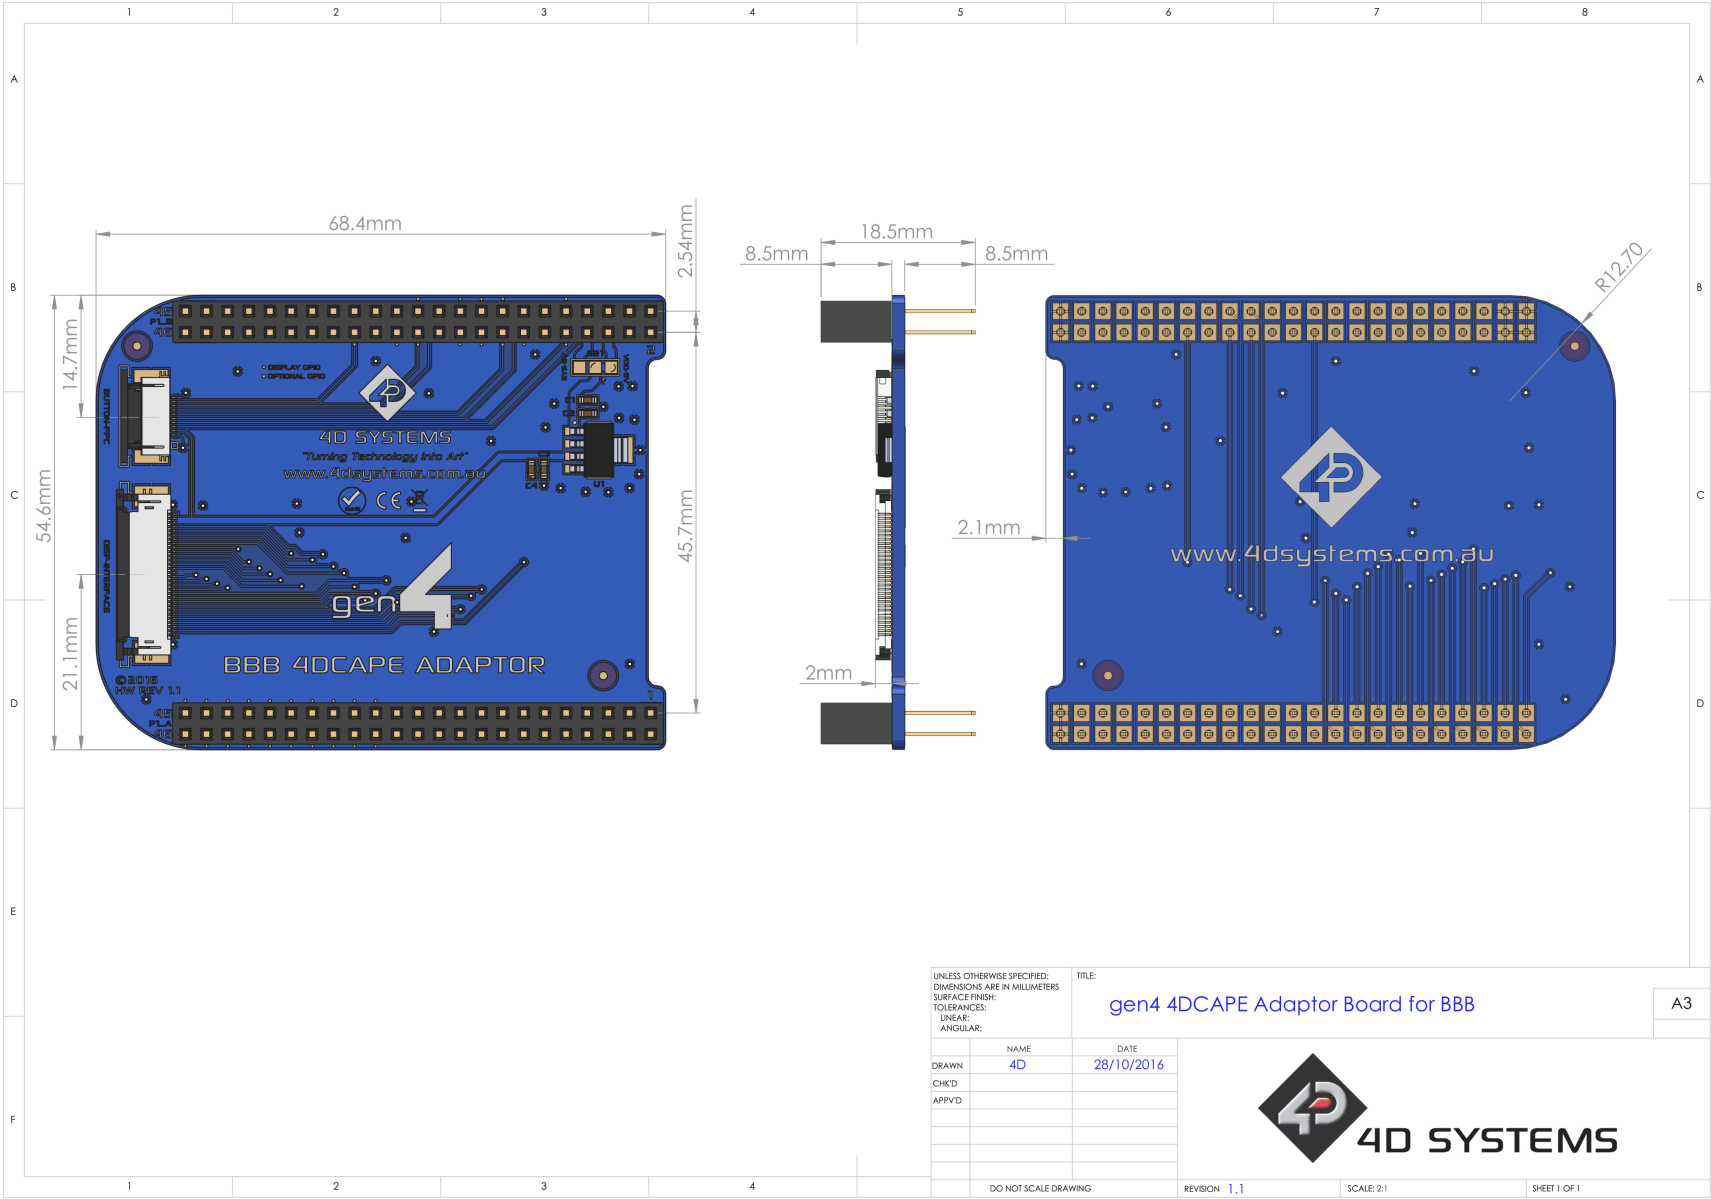


[illegible]


20. Schematic Diagram (gen4-4DCAPE)

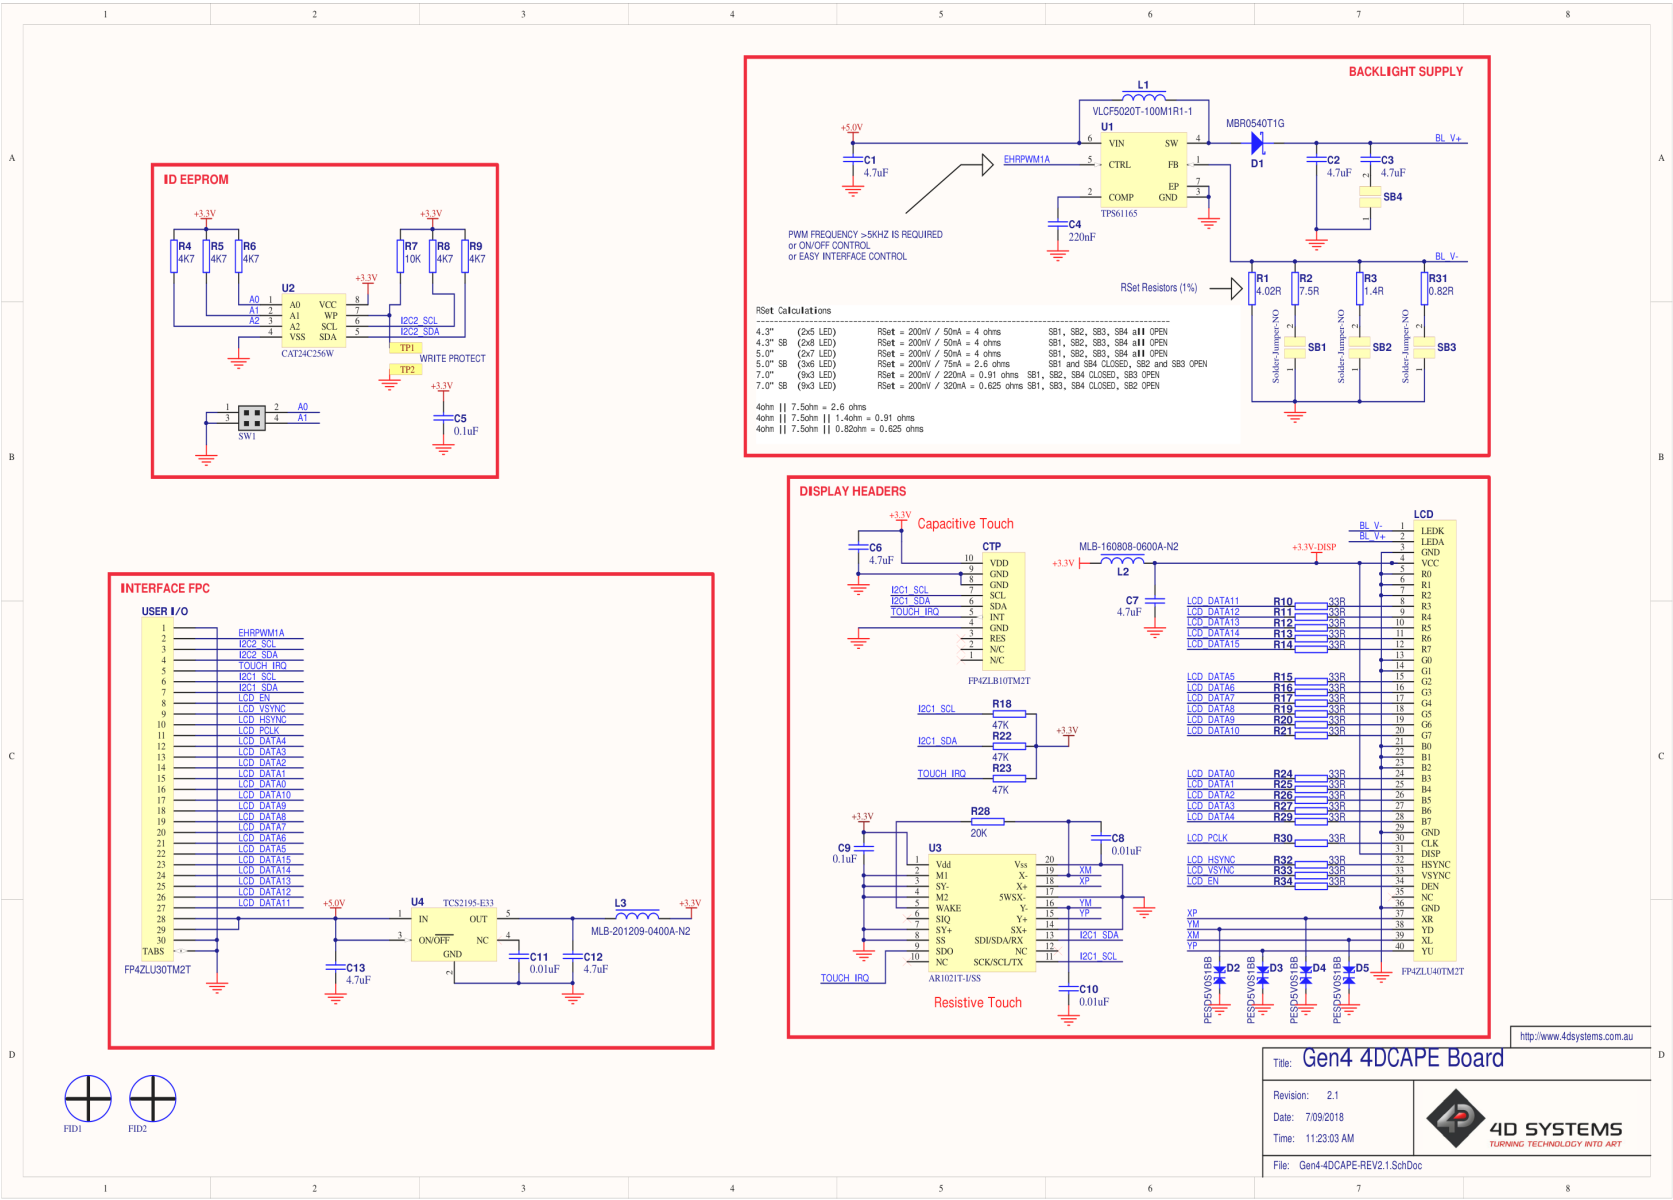

21. Schematic Diagram (gen4-4DCAPE Adaptor)

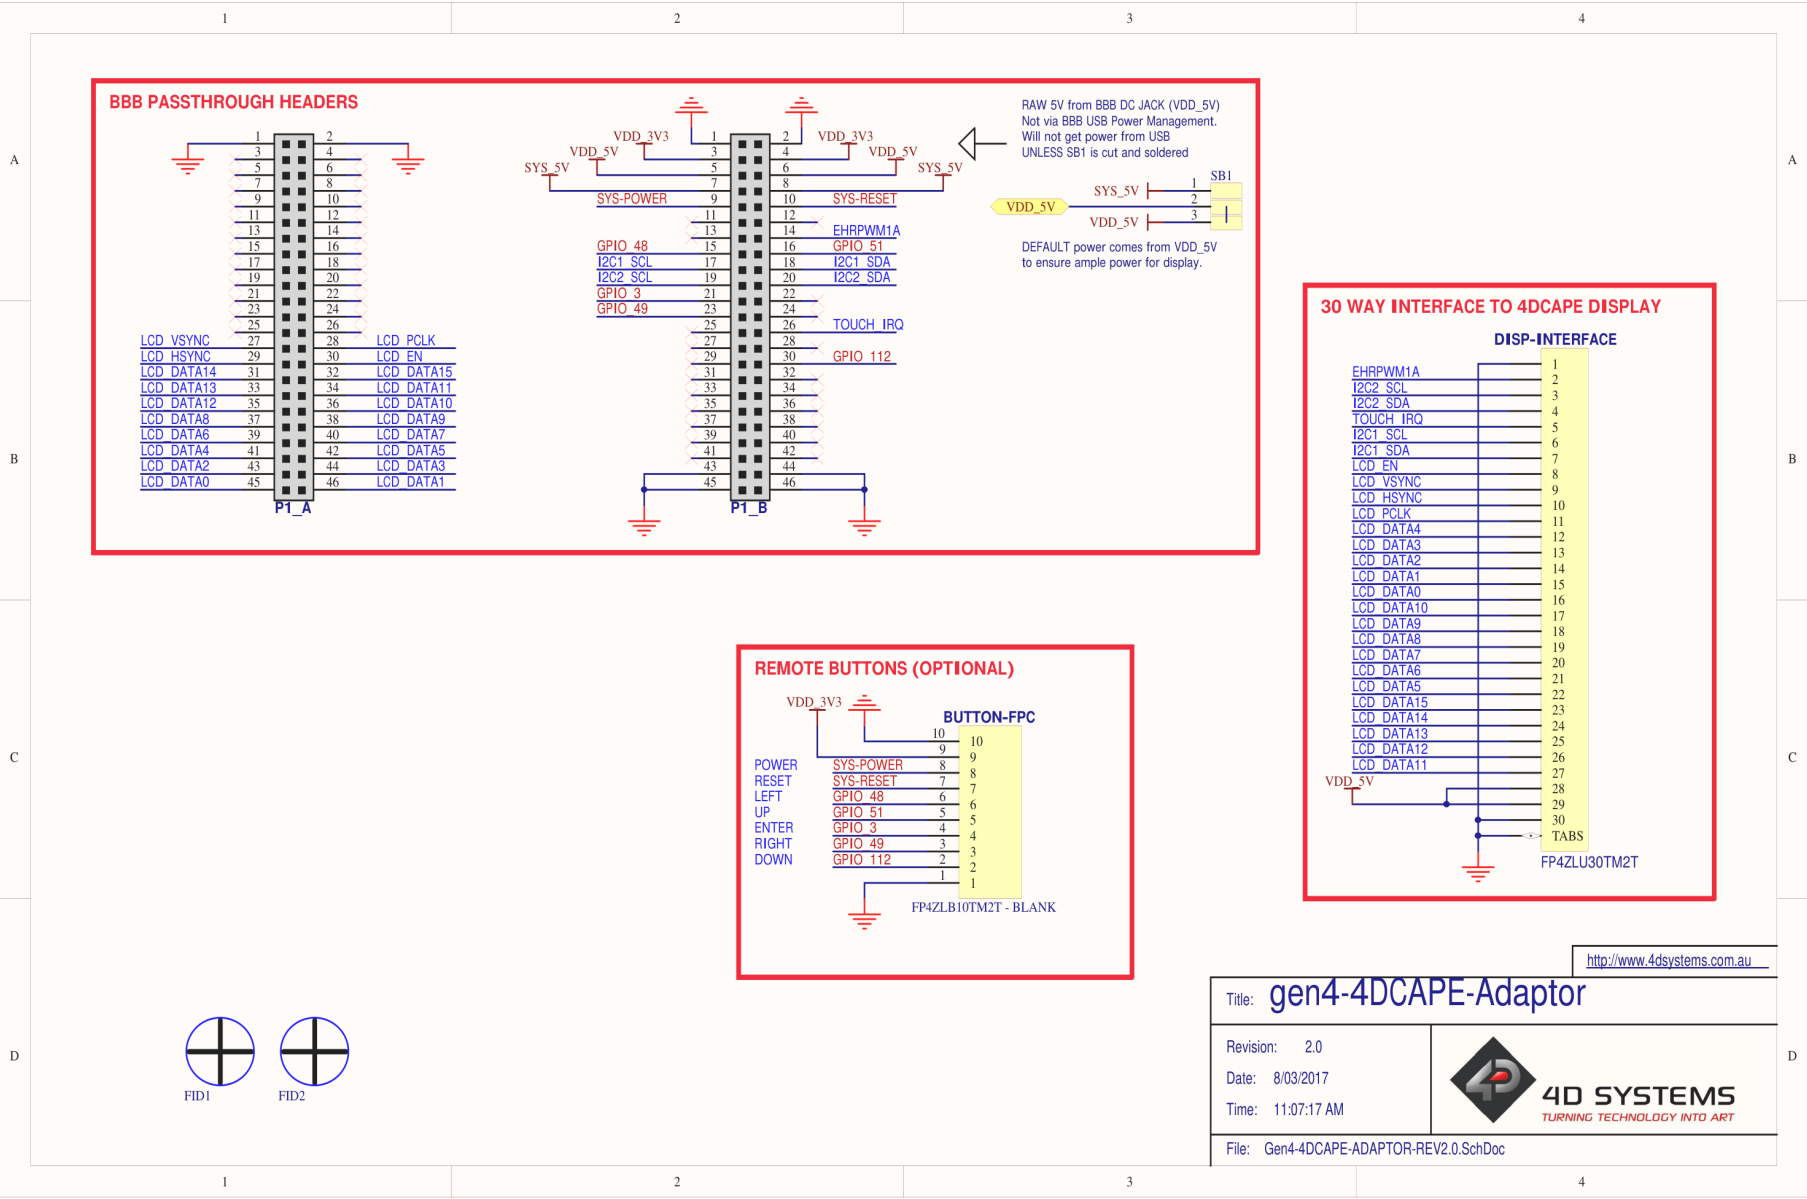

22. Schematic Diagram (gen4-4DCAPE Button Board - OPTIONAL)

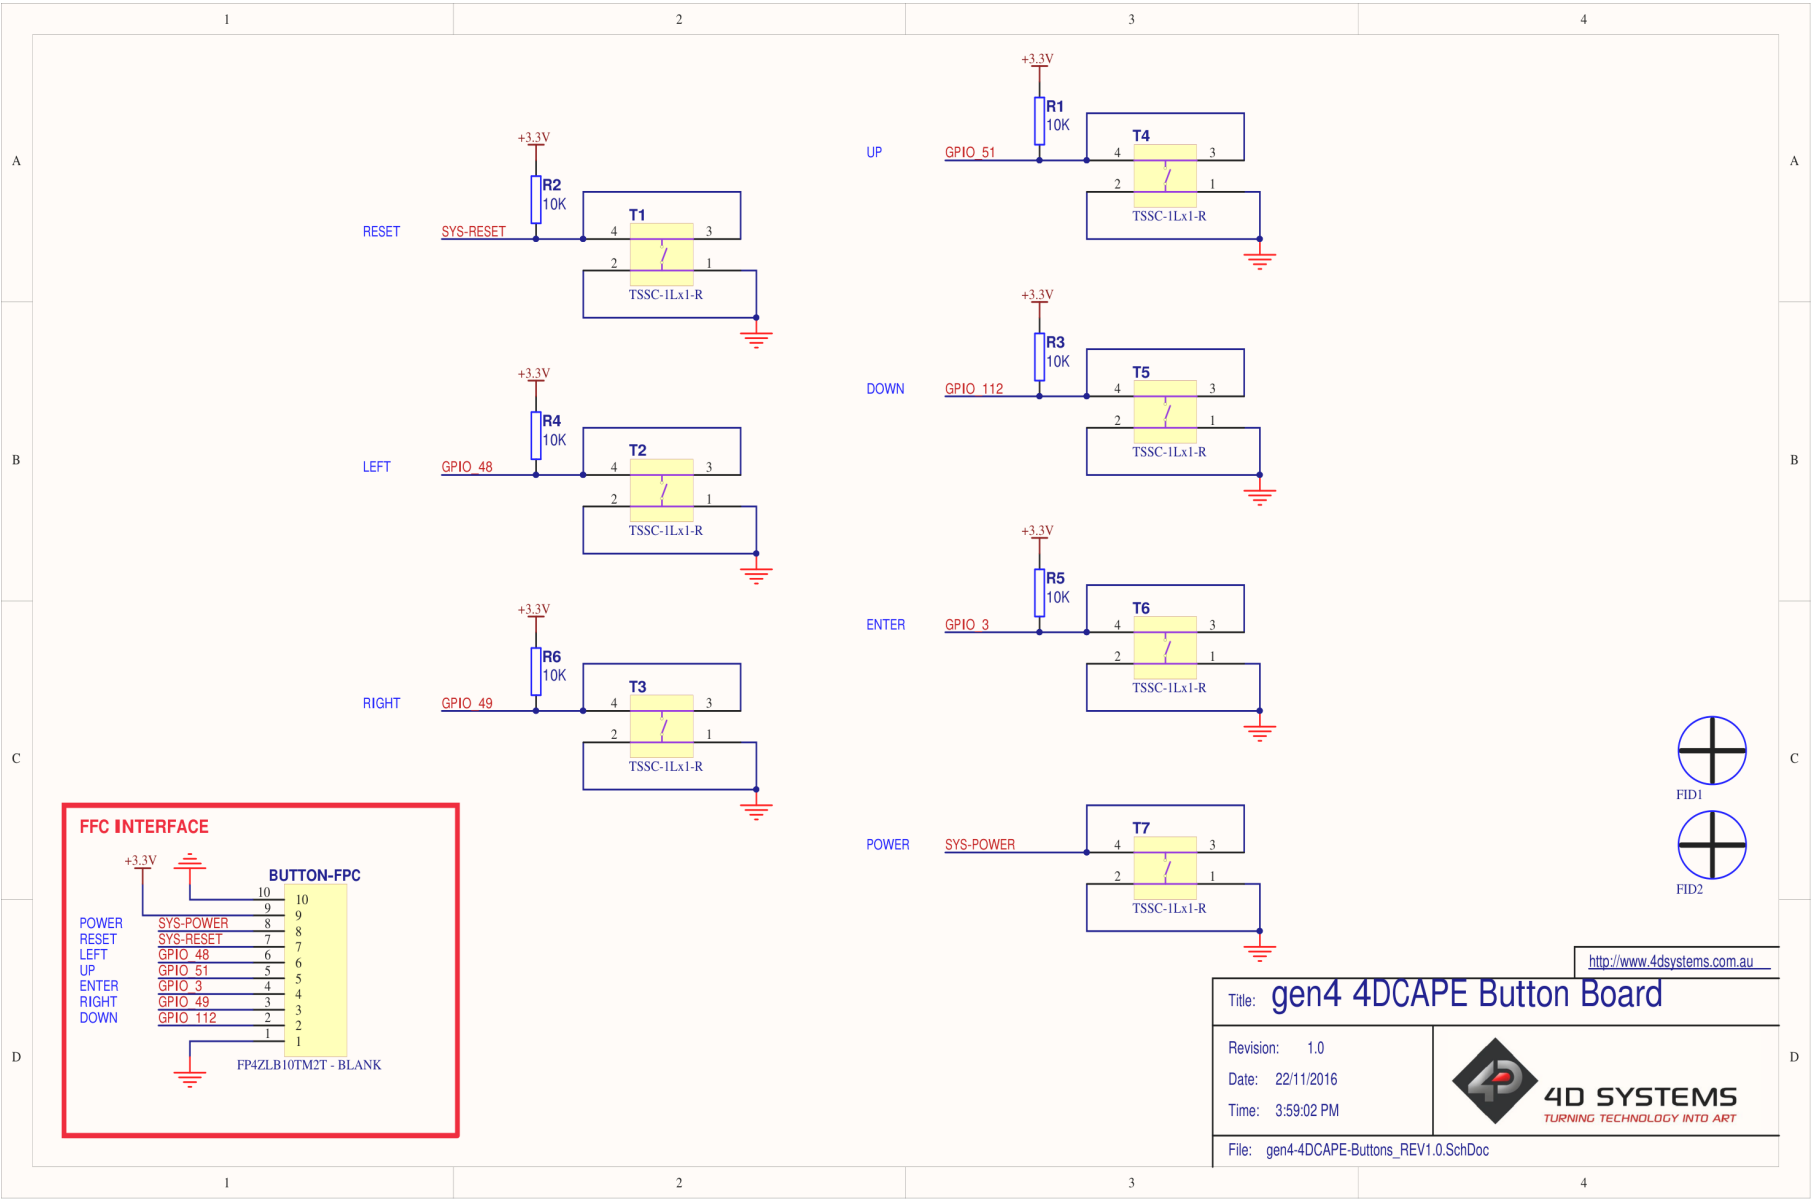

23. Specifications



Absolute Maximum Ratings

Operating ambient temperature	-20°C to +70°C
Storage temperature	-30°C to +80°C



Note

Stresses above those listed here may cause permanent damage to the device. This is a stress rating only and functional operation of the device at those or any other conditions above those indicated in the recommended operation listings of this specification is not implied. Exposure to maximum rating conditions for extended periods may affect device reliability.

Global Characteristics Based on Operating Conditions

Parameter	Conditions	Min	Typ	Max	Units
Supply Current (5V bus of BBB) (INCLUDES POWER BBB USES ALSO – NOTE)					
	gen4-4DCAPE-43 (Max Brightness)	--	590	--	mA
	gen4-4DCAPE-43T (Max Brightness)	--	600	--	mA
	gen4-4DCAPE-43CT (Max Brightness)	--	620	--	mA
	gen4-4DCAPE-43-SB (Max Brightness)	--	690	--	mA
	gen4-4DCAPE-43T-SB (Max Brightness)	--	700	--	mA
	gen4-4DCAPE-43CT-SB (Max Brightness)	--	720	--	mA
	gen4-4DCAPE-50 (Max Brightness)	--	700	--	mA
	gen4-4DCAPE-50T (Max Brightness)	--	710	--	mA
	gen4-4DCAPE-50CT (Max Brightness)	--	720	--	mA
	gen4-4DCAPE-50-SB (Max Brightness)	--	830	--	mA
	gen4-4DCAPE-50T-SB (Max Brightness)	--	840	--	mA
	gen4-4DCAPE-50CT-SB (Max Brightness)	--	850	--	mA
	gen4-4DCAPE-70 (Max Brightness)	--	980	--	mA
	gen4-4DCAPE-70T (Max Brightness)	--	990	--	mA
	gen4-4DCAPE-70CT (Max Brightness)	--	1100	--	mA

Parameter	Conditions	Min	Typ	Max	Units
	gen4-4DCAPE-70-SB (Max Brightness)	--	1190	--	mA
	gen4-4DCAPE-70T-SB (Max Brightness)	--	1200	--	mA
	gen4-4DCAPE-70CT-SB (Max Brightness)	--	1220	--	mA
Display Endurance	Hours of operation,measured to when display is 50% original brightness	30000	--	--	H
Touch Screen Endurance (Resistive Touch)	Number of touches/hits with a 12.5mm tip at a rate of 2x per second with 250gf force	--	1M	--	Touches
	Slide stylus on screen, 100gf force, 60mm/s speed with a 0.8mm polyacetal tip stylus pen	--	100K	--	Slides
Touch Screen Transparency	Resistive Touch	82	--	--	%
	Capacitive Touch	90	--	--	%
Touch Screen Operational Force (Resistive Touch)	Only use Finger or Stylus, do not use anything sharp or metal	20	--	100	Gf
CLB Hardness (Capacitive Touch)	Cover Lens Bezel Glass Hardness	--	6	--	H

LCD DISPLAY INFORMATION (TN DISPLAY)

Parameter	Conditions	Specification
Display Type	All displays produced before the IPS release date in the IPS table below, or any modules not specified are therefore TN type displays	TN - TFT Transmissive LCD
Display Sizes		4.3", 5.0" or 7.0" Diagonal
Display Resolution		480 x 272 (Landscape Viewing) – 4.3" 800 x 480 (Landscape Viewing) – 5.0" & 7.0"
Display Brightness	gen4-4DCAPE-43 (Max Brightness)	500 cd/m2
	gen4-4DCAPE-43T (Max Brightness)	400 cd/m2
	gen4-4DCAPE-43CT (Max Brightness)	475 cd/m2
	gen4-4DCAPE-43-SB (Max Brightness)	1020 cd/m2
	gen4-4DCAPE-43T-SB (Max Brightness)	825 cd/m2
	gen4-4DCAPE-43CT-SB(Max Brightness)	880 cd/m2

Parameter	Conditions	Specification
	gen4-4DCAPE-50 (Max Brightness)	500 cd/m2
	gen4-4DCAPE-50T (Max Brightness)	400 cd/m2
	gen4-4DCAPE-50CT (Max Brightness)	475 cd/m2
	gen4-4DCAPE-50-SB (Max Brightness)	820 cd/m2
	gen4-4DCAPE-50T-SB (Max Brightness)	650 cd/m2
	gen4-4DCAPE-50CT-SB (Max Brightness)	705 cd/m2
	gen4-4DCAPE-70 (Max Brightness)	500 cd/m2
	gen4-4DCAPE-70T (Max Brightness)	400 cd/m2
	gen4-4DCAPE-70CT (Max Brightness)	475 cd/m2
	gen4-4DCAPE-70-SB (Max Brightness)	844 cd/m2
	gen4-4DCAPE-70T-SB(Max Brightness)	679 cd/m2
	gen4-4DCAPE-70CT-SB (Max Brightness)	758 cd/m2
Display Contrast Ratio	Typical	500:1
Display Viewing Angles	Above Centre	70 Degrees
	Below Centre	60 Degrees
	Left of Centre	70 Degrees
	Right of Centre	70 Degrees
Display Viewing Direction		12 O'clock Display (Optimal viewing is from above when in Landscape/Wide mode)
Display Backlighting	gen4-4DCAPE-43xx Models	2x5 Parallel LED's
	gen4-4DCAPE-43xx-SB Models	2x8 Parallel LED's
	gen4-4DCAPE-50xx Models	2x6 Parallel LED's
	gen4-4DCAPE-50xx-SB Models	3x6 Parallel LED's
	gen4-4DCAPE-70xx Models	9x3 Parallel LED's
	gen4-4DCAPE-70xx-SB models	9x3 Parallel LED's
Pixel Pitch	4.3"	0.198 x 0.198mm (Square pixels)
	5.0"	0.135 x 0.135mm (Square pixels)
	7.0"	0.1925 x 0.179mm (non-Square pixels)

Parameter	Conditions	Specification
Pixel Density	4.3"	128 DPI/PPI
	5.0"	183 DPI/PPI
	7.0"	132 DPI/PPI (Horizontal) 142 DPI/PPI (Vertical)

LCD DISPLAY INFORMATION (IPS DISPLAY)

Parameter	Conditions	Specification
Display Type	gen4-4DCAPE-43 - March 2021 onwards. gen4-4DCAPE-43T – Modules produced March 2021 onwards. gen4-4DCAPE-43CT-CLB – Modules produced March 2021 onwards. gen4-4DCAPE-50T – Modules produced January 2021 onwards. gen4-4DCAPE-50T – Modules produced March 2021 onwards. gen4-4DCAPE-50CT-CLB – Modules produced September 2020 onwards	IPS - TFT Transmissive LCD
Display Sizes		4.3", 5.0" or 7.0" Diagonal
Display Resolution		480 x 272 (Landscape Viewing) – 4.3" 800 x 480 (Landscape Viewing) – 5.0" & 7.0"
Display Brightness	gen4-4DCAPE-43 (Max Brightness)	600 cd/m2
	gen4-4DCAPE-43T (Max Brightness)	510 cd/m2
	gen4-4DCAPE-43CT-CLB (Max Brightness)	540 cd/m2
	gen4-4DCAPE-50 (Max Brightness)	600 cd/m2
	gen4-4DCAPE-50T (Max Brightness)	510 cd/m2
	gen4-4DCAPE-50CT-CLB (Max Brightness)	540 cd/m2
Display Contrast Ratio	gen4-4DCAPE-43xx - Typical	800:1
	gen4-4DCAPE-50xx - Typical	1000:1
Display Viewing Angles	Above Centre	80 Degrees
	Below Centre	80 Degrees
	Left of Centre	80 Degrees
	Right of Centre	80 Degrees
	IPS Displays	ALL (Viewing from all directions)

Parameter	Conditions	Specification
Display Viewing Direction		
Display Backlighting	gen4-4DCAPE-43xx Models	2x5 Parallel LED's
	gen4-4DCAPE-50xx Models	3x6 Parallel LED's
Pixel Pitch	4.3"	0.198 x 0.198mm (Square pixels)
	5.0"	0.135 x 0.135mm (Square pixels)
Pixel Density	4.3"	128 DPI/PPI
	5.0"	183 DPI/PPI

24. Revision History



Hardware Revision History (4D CAPE)

Revision Number	Date	Description
1.0	28/10/2016	Initial Public Release Version – ONLY FOR 4.3" MODEL
2.1	23/11/2016	- Updated Version – For All Models, including SB - Fixed bottleneck with power supply, apparent on 5.0" and higher selection - Added local 3.3V regulator - Removed FET Polarity Protection



Hardware Revision History (4D CAPE Adaptor)

Revision Number	Date	Description
1.0	28/10/2016	Initial Public Release Version – ONLY FOR 4.3" MODEL
1.1	23/11/2016	- Updated Version – For All Models, including SB - Fixed bottleneck with power supply, apparent on 5.0" and higher - Removed 3.3V Regulator, changed FFC to use 5V rather than 3.3V



Datasheet Revision

Revision Number	Date	Description
1.0	08/03/2017	Initial Public Release
1.1	14/03/2019	Cosmetic Changes to gen4 Datasheet range
1.2	01/07/2021	Adding missing IPS display information Specifications
1.3	20/12/2022	Modified datasheet for web-based documentation

25. Ordering Information

Order Code:
GEN4-4DCAPE-43 (Non-Touch)
GEN4-4DCAPE-43T (Resistive Touch)
GEN4-4DCAPE-43CT-CLB (Capacitive Touch with Cover Lens Bezel)
GEN4-4DCAPE-50 (Non-Touch)
GEN4-4DCAPE-50T (Resistive Touch)
GEN4-4DCAPE-50CT-CLB (Capacitive Touch with Cover Lens Bezel)
GEN4-4DCAPE-70 (Non-Touch)
GEN4-4DCAPE-70T (Resistive Touch)
GEN4-4DCAPE-70CT-CLB (Capacitive Touch with Cover Lens Bezel)
Packaging: Module sealed in antistatic foam padded 4D Systems Box

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

4D Systems:

[gen4-4DCAPE-50T](#) [gen4-4DCAPE-70CT-CLB](#) [gen4-4DCAPE-70T](#) [gen4-4DCAPE-43CT-CLB](#) [gen4-4DCAPE-50CT-CLB](#) [gen4-4DCAPE-43T](#) [gen4-4DCAPE-ADAPTOR](#) [4DCAPE BUTTON BOARD](#)