

ZSC31210 / ZSSC3122 / ZSSC3123 SSC Modular Evaluation Kit Description

Important Note

Restrictions in Use

The hardware and the software for the cLite™ SSC Modular Evaluation Kit are designed for IC evaluation, laboratory setup, and module development only.

The hardware and the software for the cLite™ SSC Modular Evaluation Kit must not be used for module production or production test setups.

Disclaimer

IDT shall not be liable for any damages arising out of defects resulting from:

- (i) delivered hardware and software
- (ii) non-observance of instructions contained in this manual, or
- (iii) misuse, abuse, use under abnormal conditions or alteration by anyone other than IDT.

To the extent permitted by law, IDT hereby expressly disclaims and user expressly waives any and all warranties, whether express, implied, or statutory, including, without limitation, implied warranties of merchantability and of fitness for a particular purpose, statutory warranty of non-infringement and any other warranty that may arise by reason of usage of trade, custom, or course of dealing.

Contents

1	Kit (Contents	. 4
2	USE	B Drivers	. 5
3	cLite	e™ SSC Evaluation Board	. 6
	3.1	Overview	. 6
		Installing the Communication and Calibration Software	
	3.3	Connections to the cLite™	. 7
	3.4	Power Supply to the Board	. 7
	3.5	Reset Switch	. 7
4	cLite	e™ SSC Evaluation Software	. 8
	4.1	Overview	. 8
	4.1.	1 User Files	. 8
	4.1.2	2 Data File calibration.db	. 8
	4.2	"Setup" Menu	10
	4.2.	· · · · · · · · · · · · · · · · · · ·	
	4.2.2	2 Special Feature "Find I2C Address"	10
	4.2.3		
	4.2.4	4 Special Feature "Communication Type"	10
	4.3	"Open Port" Button	10
	4.4	Display Selection	11



4	4.5 "Master I2C Addr" Section	11
	4.6 Sensor and Temperature Display	11
	4.7 "Log File" Field	11
	4.8 Normal Operation Section	11
	4.8.1 "Run" Button	12
	4.8.2 "Rate" Field	12
	4.8.3 "VDD" Field	12
	4.9 "Start CM" Button	12
	4.10 "Start NOM" Button	12
	4.11 EEPROM Editor Section	12
	4.11.1 "Read" Button	13
	4.11.2 "Save" Button	13
	4.11.3 "Load" Button	13
	4.12 "Configuration" Section	13
	4.12.1 IDT Config	14
	"Meas Mode" Menu	14
	"Update Rate" Menu	14
	"Output Mode" Menu	14
	"Lock EEPROM" Checkbox	14
	"Lock I2C Addr" Checkbox	14
	"SotTC 2x"	14
	"GainC 4X" Checkbox	14
	"Third Order Corr" Checkbox	
	4.12.2 Customer Config	15
	"Device ID" Field	15
	"Alarm High" Menu	15
	"Alarm Low" Menu	15
	"SPI Phase" Menu	15
	"Ready Open Drain" Checkbox	15
	"Fast Start Up" Checkbox	15
	4.12.3 AFE Config Section	15
	4.13 "Commands" Section	16
5	Dry Run Calibration	18
;	5.1 Steps for the Dry Run Calibration	18
6	Verify Calibration with PDM_C Output	
(6.1 Measuring the PDM_C Output using the cLite™ Software	21
7	Calculation of Calibration Coefficients Off-Line	21
8	clite™ SSC Evaluation Software with the IDT SSC Terminal	23




8.1 Protocol	23
8.2 IDT SSC Terminal	23
9 Pin Configuration and Package – TSSOP14 Samples	25
10 Related Documents	27
11 Definitions of Acronyms	27
12 Document Revision History	28
Appendix A: Schematic cLite™ SSC Evaluation Board	29



1 Kit Contents

- a) SSC Communication Board V4.1 with cable (USB cable)*
- b) ZSC31210 cLite SSC Evaluation Board with TSSOP-14 samples—operates with the ZSC31210, ZSSC3122, and ZSSC3123
- c) SSC Test Board V1.0 (a small unpopulated circuit board for facilitating user prototypes)
- d) SSC Kit Start Up Information

Figure 1.1 cLite™ SSC Evaluation Kit

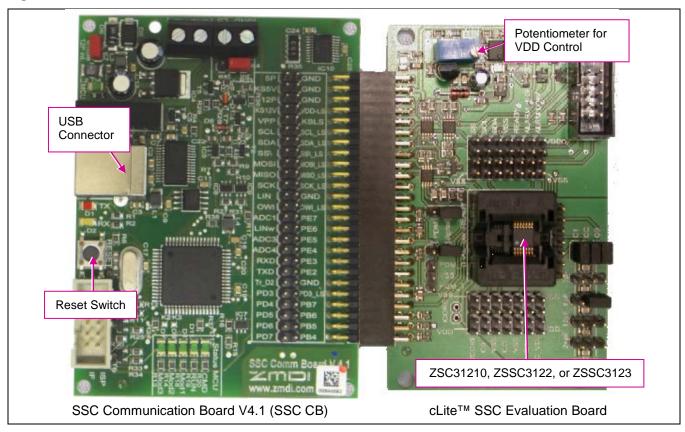

The cLite™ SSC Modular Evaluation Kit contains the hardware needed for communication and calibration of a cLite™ family sensor signal conditioning IC, including the ZSC31210, ZSSC3122, and ZSSC3123. A PC can communicate with the cLite™ socketed on the cLite™ SSC Evaluation Board via the SSC Communication Board (SSC CB) through a USB connection. The kit does not include the cLite™ SSC Evaluation Software, which must be downloaded from the IDT website (www.IDT.com) to ensure receiving the latest release, as described in section 4. The software should function on any Windows® 2000 / XP / Vista / Windows® 7/ Windows® 8 system. The cLite™ SSC Evaluation Board can connect to a capacitive sensor or provide on-board capacitors for simulating input from a capacitive sensor. (See Figure 3.1.)

^{*} This document applies to cLite™ SSC Modular Evaluation Kits with the SSC Command Board V4.1 with firmware version 4.04 or higher. See section 4.13 regarding the "GetRevision" command. Periodically check IDT's website (www.IDT.com/SSC-COMM-BD) for updates to the firmware.



2 USB Drivers

If using Windows[®]7 or Windows[®]8, the user's system will automatically download and use the latest approved USB driver from Microsoft, so the following procedures to install the USB drivers are not applicable. In this case, ensure that a connection to the internet is established before connecting the SSC Communication Board V4.1 to a free USB port.

For the Windows® 2000, XP, or Vista operating systems, the cLite™ SSC Modular Evaluation Kit requires installation of two USB drivers. To install the drivers, the user's system must meet these requirements:

- x86-compatible PC
- 64 MB RAM
- · Hard drive with 20MB free space
- USB port

The two USB device drivers are available on the IDT website (see www.IDT.com/SSC-COMM-BD). These drivers will make the PC's USB port appear as a virtual COM port (typically COM3 or COM4 on most computers). The SSC Evaluation Kit software accesses the SSC Evaluation Board through the SSC CB as if it were a COM (RS232) port. These drivers will not affect the operation of any other USB peripherals.


Refer to SSC_AN_CommunicationBoard_Driver_Installation_Rev_X_x.pdf for instructions on installing these two drivers and for determining the virtual COM port for the SSC Evaluation Kit, which is needed for setting up the kit.



3 cLite™ SSC Evaluation Board

3.1 Overview

Figure 3.1 SSC Evaluation Board Overview

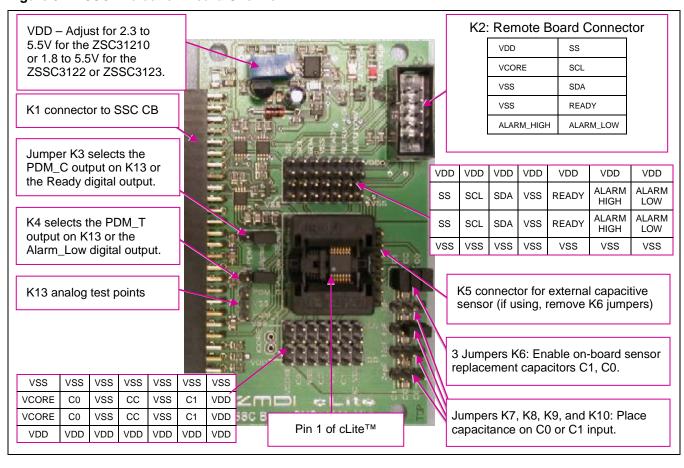

The main purpose of the cLite™ SSC Modular Evaluation Kit is communication between the PC and the cLite™. The PC sends commands and data via the USB / SSC CB (virtual COM port). The microcontroller on the SSC CB interprets these commands and relays them to the cLite™ in the I²C™ bus standard format (K1 Pin 11 / SCL; Pin 13/ SDA). The microcontroller will also forward any data bytes from the cLite™ chip back to the PC via the USB connection. These bytes can be sensor and temperature readings to be displayed by the PC software; raw ADC readings used during calibration; or EEPROM content bytes.

[†] I²C[™] is a trademark of NXP.



3.2 Installing the Communication and Calibration Software

The cLite™ SSC Modular Evaluation Kit does not include the software, which must be downloaded from the IDT website (<u>www.IDT.com</u>) to ensure receiving the latest release. To download the software, navigate to either of the following product pages (same software applies to the ZSC31210, ZSSC3122, and ZSSC3123):

• ZSSC3122: www.IDT.com/ZSSC3122

• ZSSC3123: www.IDT.com/ZSSC3123

On the product page, click on the link titled "cLite Evaluation Software Rev. X" (where X is the current revision) and follow the dialog instructions as needed to download the zip file for the software.

Open the zip file and extract the cLiteSSC_Setup_vX.exe file.

To install the cLite[™] SSC Evaluation Kit software on the user's PC hard drive, double-click on the downloaded *cLiteSSC_Setup_vX.exe* file. Respond to the dialog box to select the installation directory, and the software will complete the installation, which results in a program shortcut on the desktop of the PC.

Note: When the cLite™ SSC Evaluation Kit software is activated for the first time, the kit type ("HW type") and product type (ZSC31210, ZSSC3122, or ZSSC3123) must be selected and the COM port must be entered as described in sections 4.2 and 4.3.

3.3 Connections to the cLite™

The SSC Evaluation Board has a TSSOP-14 socket for inserting the cLite[™]. There is an additional 10-pin header socket (K2; see Figure 3.1) for connection to a customer-supplied remote board.

The board can be used for in-circuit programming of the cLite™ in the user's calibration fixture using the VDD, VSS, SDA, SCL and READY connections on the K2 connector on the SSC Evaluation Board.

Note: Only one cLite[™] IC connection option can be used at a time.

3.4 Power Supply to the Board

The K1 connector to the SSC CB provides the power supply from the SSC CB's USB port to the SSC Evaluation Board. Using the power via the USB port, the maximum current that can be provided is 40mA. All functions of the board are operative down to 1.8V. The blue potentiometer regulates the supply voltage in a range from 1.8 to 5.5V.The board has a green LED labeled VSupply, which lights if the board has power.

3.5 Reset Switch

Use the push button on the SSC CB (see Figure 1.1) to reset communications if needed. When the SSC CB is reset using the push button, the COM port in the cLite[™] SSC Evaluation Software must be reopened (see section 4.3).



4 cLite[™] SSC Evaluation Software

4.1 Overview

The cLite™ SSC Modular Evaluation Kit is intended for demonstration purposes and calibration of single units. The installation folder is (*C:\program files\ZMDI\cLite SSC Evaluation Software*). IDT can provide the user with algorithms and assistance in developing full production calibration software. Figure 4.1 shows the main dialog window of the cLite SSC Evaluation Software.

The six types of text files that support the software user are described in sections 4.1.1 and 4.1.2.

4.1.1 User Files

User files are saved in [My Documents]\ZMDI\cLite SSC Evaluation Software and consist of status files, log files, and EEPROM files.

- A StatusLog.txt file lists all commands sent to the cLite[™], responses, and error messages. If software
 problems occur, this file can be used for detecting the root cause of the problem.
- When the software is activated, a CommunicationLog.txt file is saved. This file is a log of the
 communication to the cLite™ during the software session and can be saved after closing the software by
 renaming the file. Otherwise, it is overwritten the next time the software is opened.
- In Command Mode (CM), the user can save/load the EEPROM contents from an *.eep file to the EEPROM and vice versa.
- In Normal Operation Mode (NOM), the user can log capacitance and temperature readings to a text file (.txt) of the user's choice.
- The calibration is documented in the *CalibrationLog_ddMMMYYYY.txt* file. These files are cumulative, with a new file for each day to prevent them from getting too long.

4.1.2 Data File calibration.db

The *calibration.db* file is used by the software for calibration. Where the file is saved depends on the Windows system:

- For Windows 2000 and Windows XP, it is saved in C:\Documents and Settings\All Users\Application Data\ZMDI\cLite SSC Evaluation Software.
- For Windows® Vista, Windows® 7, and Windows® 8, it is saved in C:\ProgramData\ZMDI\cLite SSC Evaluation Software.



cLite SSC Evaluation Software Setup Display Master I2C Addr Calibrate COM4 ▼ Close Port I2C Addr: 0x28 ALARM LOW On At: 0 Off At: 0 Reading EEPROM Address 1a To setup communication, Set Address first select the "HW Type" and the "Product and ALARM HIGH Run Reading EEPROM Address 1c. Then enter the COM On At: 16383 Revision" under "Setup" ()rate: 1 port and click the Off At: 16383 Reading EEPROM A (see section 4.2). VDD: 5.00 ٧ adjacent button, MCB Control which toggles from Open Log DUT#1 Graph View Start CM Reading EEPROM Addre "Open Port" to "Close Select DUT Silicon Revision: c0 Start NOM Port" (section 4.3) Read Load data description Configuration Comman Verify communication 0000 CustID0 in the status window. 0000 CustID1 ZMDI Config ZMDIConfig 0ь01 Lock EEPROM Meas Mode Reserved Lock I2C Addr 🔻 GainC 4x Update Rate 00f0 Reserved Normal operation 05 0000 Reserved Third Order Corr Output Mode (NOM) section 06 0c16 **CConfig** Customer Config 07 0000 SotTco 08 0000 Тсо DeviceID 0x28 09 0000 SotTcg Alarm High Active High 0a 0000 0Ь 0000 Offset Active High 2000 SPI Phase Pos Edge 0d 0000 Sot1 Ready Open Drain E Fast Start 2000 Gain2 0e Of 0000 Sot2 AFE Config 10 7fff RawBreak Resolution Ct trim C Off Multiplier 11 8d92 **TConfig** □ 1 ▼ 14 **▼**][0 **▼**][2 **▼**][6 12 0000 OffsetT 13 2000 GainT □ 1 ▼ 14 ▼][6 ▼ 2 14 0000 SotT


Figure 4.1 cLite™ Software Main Menu



4.2 "Setup" Menu

After opening the cLite™ SSC Evaluation Software, the connected board type and the correct product and silicon revision must be selected under "Setup."

Figure 4.2 Setup Selection (Example for ZSSC3122)

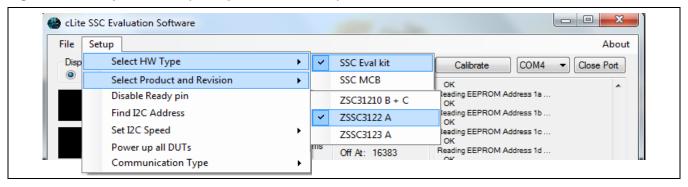

4.2.1 Special Feature "Set I2C Speed"

The "Set I2C Speed" feature sets the I²C™ speed to a different frequency (default value: 100kHz).

4.2.2 Special Feature "Find I2C Address"

The "Find I2C Address" feature determines the I²C™ address of the cLite™. This can be used if the address was accidentally changed and communication is locked.

4.2.3 Special Feature "Power up all DUTs"

This feature is only used for the Mass Calibration Board and is not applicable to the cLite™ SSC Modular Evaluation Kit.

4.2.4 Special Feature "Communication Type"

This feature allows the selection of the communication type. By default, this is set to "Automatic," which will select I^2C^{TM} , SPI negative edge, or SPI positive edge based on the contents in the EEPROM of the cLiteTM under test (DUT).

4.3 "Open Port" Button

The cLite™ SSC Evaluation Software provides a drop-down menu for selection of all available COM ports on the PC. Select the correct COM port from the drop-down menu (see section 2). To set up communication with the SSC CB, click on "Open Port" (see Figure 4.1), which then toggles to "Close Port." If the port is opened successfully, "Opened port COMx" will appear in the status window.



4.4 Display Selection

During normal operation, it is possible to display the sensor and temperature data output in one of three different formats. The "Display" section at the top left allows the user to select decimal, hexadecimal, or percent and degrees Celsius. The selected format is displayed in the sensor and temperature display boxes below the "Display" section (see section 4.6).

4.5 "Master I2C Addr" Section

Use the "I2C Addr" field at the top to enter the address that the SSC CB uses to communicate with the cLite™ installed in the socket on the SSC Evaluation Board. Then click "Set Address." Valid settings are 00_{HEX} to $7F_{HEX}$. The default is 28_{HEX} . See important notes in section 4.12.2 regarding settings when the communication address is locked.

4.6 Sensor and Temperature Display

The software displays two large readout windows for sensor and temperature values at the top left. The upper display window is the cLite[™] temperature reading in decimal/hexadecimal/°C. The window below the temperature is the sensor reading in decimal/hexadecimal/%. To adjust the rate at which data is read from the cLite[™], use the rate adjustment (see section 4.8).

If the cLite[™] has not been temperature calibrated, the displayed temperature is invalid.

The different colors of the display field indicate the cLite[™] mode:

Color		Green			Yellow
IC Mod	de/State	Valid value in Normal Operating Mode (NOM)	Valid in Command Mode (CM)	Diagnostic	Stale Data (NOM) [‡]

4.7 "Log File" Field

Sensor and temperature readings can be logged to a PC file. Use the "Open Log" button (below the sensor reading display window in Figure 4.1) to select the filename and directory where the file will be stored. Click the "Save" button to log every data sample displayed in the selected file with the date and time the sample was collected.

The resulting text file is a comma-delimited ASCII file (CSV) and can be imported into spreadsheet applications such as Microsoft Excel[®].

4.8 Normal Operation Section

The normal operation section (below the "Master I2C Addr" section) controls the collection of data when the $cLite^{TM}$ is in Normal Operation Mode (NOM).

[‡] For more details, refer to the appropriate datasheet (ZSC31210_cLite_Data_Sheet.pdf, ZSSC3122_cLite_ Data_Sheet.pdf), or ZSSC3123_cLite_ Data_Sheet.pdf).



4.8.1 "Run" Button

To start a continuous readout of sensor and temperature data, click the "Run" button. The button text will change to "Stop." Click again to stop data collection.

4.8.2 "Rate" Field

This field sets the period (ms) for the sample rate of the continuous read out. Valid settings are 10ms or longer. If this setting is less than the conversion time, stale data will occasionally be fetched (see section 4.6).

4.8.3 "VDD" Field

This field should be set match the VDD level used for powering the cLite™ DUT. The value is used to properly scale the A2D readings for display when using PDM output mode. If not using PDM, this field can be ignored.

4.9 "Start CM" Button

To communicate with the cLite[™], start the Command Mode (CM) by clicking "START CM" (see Figure 4.1). In this mode, the measurement cycle is stopped and the full command set is available.

4.10 "Start NOM" Button

To exit Command Mode and return the cLite[™] to Normal Operation Mode (NOM), click "START NOM" (see Figure 4.1). In this mode, the cLite[™] continually performs the measurement cycle: reading, conditioning, and transmitting sensor data.

4.11 EEPROM Editor Section

The EEPROM editor section (lower left in Figure 4.1) provides read and write access to all of the EEPROM locations within the cLite™ DUT. To read the EEPROM, click the "Read" button when the cLite™ is in Command Mode. To write to an individual EEPROM address, click on the data row of the desired address, type in the new EEPROM contents, and press the ENTER key on the keyboard. Newly written data will be displayed in gray, indicating that the Error Checking and Correction codes (ECC) have not yet been checked. To check the codes, perform an EEPROM read.



4.11.1 "Read" Button

To read EEPROM settings, click the "Read" button while in Command Mode. The "EEPROM" section displays all of the fields currently stored in the cLite™ EEPROM (non-volatile memory). Data that is read from EEPROM is displayed in one of four colors depending on the status of the ECC [§] check.

Color	Black	Gray	Orange	Red
ECC Status	Correct data	Data has not been checked	Corrected single-bit error	Uncorrectable double-bit error

4.11.2 "Save" Button

The EEPROM contents can be saved to a file in the [My Documents]\textsum IMDI\cLite SSC Evaluation Software directory by clicking the "Save" button. The standard Windows® dialog box for file saving results. All files will be saved with an ".eep" file extension.

4.11.3 "Load" Button

EEPROM contents that have been previously saved to a file can be written to the current EEPROM by clicking the "Load" button. The standard Windows® dialog box for loading a file results. The default folder for the saved file is [My Documents] \(\sum \text{ZMDI\clite} \) SSC Evaluation Software.

Note: The first byte of the data in the EEPROM address 04_{HEX} is masked to prevent overwriting required IDT factory settings.

4.12 "Configuration" Section

This section is used to expedite programming configuration and communication settings in the EEPROM of the cLite[™] DUT (see Figure 4.1). Each of the group boxes (*ZMDI_Config, Customer_Config, AFE_Config*) maps to an EEPROM address. The dialog items within the box represent individual bits within the configuration fields.

[§] For more details, refer to the appropriate datasheet (ZSC31210_cLite_Data_Sheet.pdf, ZSSC3122_cLite_Data_Sheet.pdf) or ZSSC3123_cLite_Data_Sheet.pdf)



4.12.1 IDT Config

"Meas Mode" Menu

This allows the user to select between Update Rate and Sleep Mode. Sleep Mode significantly reduces power consumption of the cLite™ by "sleeping" until a measurement request is received. Note that in Sleep Mode, PDM cannot be used.

"Update Rate" Menu

When operating in Update Mode, the update rate determines power consumption and response time. Select the update rate by clicking on one of the four update rates on the "Update Rate" drop-down menu.

Note: In Sleep Mode, this setting has no effect.

"Output Mode" Menu

Three output options are available on the "Output Mode" drop-down menu:

- I²CTM
- SPI
- PDM

Note: If the "Communication Type" setting in the "Setup" menu is set to "Automatic" the communication protocol of the SSC Communication board will be adjusted automatically to match the cLite™ DUT setting.

"Lock EEPROM" Checkbox

If "Lock EEPROM" is checked, EEPROM locations 0 through 15_{HEX} are permanently locked preventing any future changes.

"Lock I2C Addr" Checkbox

If needed, lock the slave I^2C^{TM} address selection by clicking the "Lock I2C Addr" checkbox. Without this lock, the cLiteTM will respond to all I^2C^{TM} addresses. If the address is locked, the "I2C Addr" setting (see section 4.5) must match the "DeviceID" programmed in EEPROM.

"SotTC 2x"

If "SotTC 2x" is checked, the SOT_tcg and SOT_tco values (EEPROM words 09_{HEX}, 07_{HEX}) are multiplied by a factor of 2. The check box is set by the calibration DLL as a result of the calculated calibration coefficients stored in the EEPROM.

"GainC 4X" Checkbox

If "GainC 4X" is checked, the *Gain_1* and *Gain_2* values (EEPROM words 0C_{HEX}, 0E_{HEX}) are multiplied by a factor of 4. The check box is set by the calibration DLL as a result of the calculated calibration coefficients stored in the EEPROM.

"Third Order Corr" Checkbox

If "Third Order Corr" is checked, the third order nonlinearity correction is selected instead of piece-wise correction with breakpoint math. Otherwise the piece-wise correction with break point math is enabled.



4.12.2 Customer Config

"Device ID" Field

When the cLiteTM is in I^2C^{TM} communication mode, the default slave address is 28_{HEX} . If a different slave address is required, program the part for the new address by entering the hexadecimal value of the new address in the "Device ID" field. The value is written to EEPROM when the field is unselected. The valid address range is 00_{HEX} to $7F_{HEX}$. The new I^2C^{TM} address will take effect on cycling power or entering Normal Operation Mode ("Start NOM").

Note: If "Lock I2C Addr" is on (see section 4.12.1), "DeviceID" must match the "I2C Addr" setting (see section 4.5).

"Alarm High" Menu

The "Alarm High" drop-down menu configures the Alarm High pin to be active low or active high and sets whether it is full push-pull or open drain.

"Alarm Low" Menu

The "Alarm Low" drop-down menu configures the Alarm Low pin to be active low or active high and sets whether it is full push-pull or open drain.

"SPI Phase" Menu

The "SPI Phase" drop-down menu configures whether the SPI master samples data on the negative edge or on the positive edge when using SPI communication.

"Ready Open Drain" Checkbox

If checked, "Ready Open Drain" configures the Ready pin to be an open-drain style driver instead of full push-pull.

"Fast Start Up" Checkbox

If checked, "Fast Start Up" sets the Command Window length to 3ms instead of 10ms.

4.12.3 AFE Config Section

The "AFE Config" section configures the analog front-end for both the sensor and internal temperature measurement. See the datasheet for details on how to configure this section properly.



4.13 "Commands" Section

The "Commands" section allows issuing commands to the cLite™. Click "START CM" first (Start Command Mode) before sending any commands to the cLite™. Note that EEPROM contents displayed in the main menu are not updated automatically if changed in this section. Figure 4.3 shows an example of an EEPROM read. A "DataFetch" must be sent next as shown in Figure 4.4. For more details, refer to section 4 of the data sheet regarding Command Mode and section 8.2 in this document.

data Select the specific Configuration Commands command 00 0002 CustID0 CustID1 EEPROM Read of addresses 0x00 to ux r 01 0000 WriteEEPROM After this command has been sent and executed, 02 ZMDIConfig Start Nom a 'DataFetch' must be performed. 03 0006 **GetRevision** More details for the GetID 04 00f0 Reserved StartCM commands 05 0000 WakeUp 06 0c16 **CConfia** DataFetch GetVoltage 07 0000 SotTco GetPDMC 80 0000 Тсо Specify command GetPDMT 09 0000 and data (see data 0a 0000 Tcg sheet, section 4.2) 0Ь 0000 Offset Gain1 2000 0c bО 0000 Sot1 Changes in SubCMD 2000 Gain2 0e and "Data" field will 0000 0f Sot2 be transferred here 10 RawBreak SubCmd 0x2 Data 0x0 8d92 12 0000 OffsetT iw_28003020000 Send Command 13 2000 GainT Click the "Send 14 0000 SotT Command" button

Figure 4.3 Send EEPROM Read Command (Example for Address 02)



addr data description Configuration Commands 0002 CustID0 ReadEEPROM WriteEEPROM StartNom 01 0000 CustID1 Fetches data using I2C or SPI from the par Select the specific 02 ZMDIConfig command 03 0006 Reserved GetRevision GetID Reserved StartCM 05 0000 Reserved WakeUp 06 0c16 CConfig Ξ GetVoltage GetPDMC 07 0000 SotTco 80 0000 Тсо GetPDMT 09 0000 SotTcg 0a 0000 Tcg 0ь 0000 Offset 0с 2000 Gain1 bО 0000 Sot1 0e 2000 Gain2 0f 0000 Sot2 10 RawBreak SubCmd 0x2 Data 0x0 11 8d92 TConfig 12 0000 OffsetT 81-0B-01-02 X Result of the EEPROM Send Command ir_28004 13 2000 GainT word address 2 reading (status byte 81_{HEX}, 14 0000 SotT contents 0B01_{HEX}; Click the "Send 4th byte can be ignored) Command" button

Figure 4.4 Send DataFetch Command



5 Dry Run Calibration

The following directions perform an example of a simple 3-point nonlinear calibration using the sensor replacement C0 (3pF, 6pF, 3+6pF) on the SSC board. The calibrated I^2C^{TM} output will be displayed as the calibration result (see section 4.6).

5.1 Steps for the Dry Run Calibration

- 1) Connect the SSC Communication (SSC CB) and cLite[™] SSC Evaluation Board. Insert the cLite[™] DUT in the 14-pin TSSOP socket taking care to align pin 1 as indicated in Figure 3.1).
- Connect a USB cable from the USB connector on the SSC CB to an available USB port on the PC. In the PC's Device Manager, check which COM port is connected to "ZMDI SSC Evaluation Kit." Verify that the green PWR LED is lit on the SSC CB.
- 3) Start the *cLite™* SSC Evaluation Software.
- 4) Select the proper "HW type" (SSC Eval Kit) and "Product" under the setup menu (see section 4.2)
- 5) Select the proper COM port. Click on "Open Port" (see section 4.3).
- 6) Click on "START CM." If the setup is correct, the current EEPROM contents are displayed in the "Response" field at the right and in the EEPROM section in the lower left bottom.
- 7) Click on the "Load" button and browse as needed to locate and load any *.eep file (see section 4.1). Using the capacitance on the cLite™ SSC Evaluation Board for this example, load the default EEPROM file provided with the software installation for the product and revision used (ZSC31210 Rev C Default.eep, ZSSC3122 Rev A Default.eep, or ZSSC3123 Rev A Default.eep). ".
- 8) Click on "Calibrate." The calibration window appears (see Figure 5.1).

[&]quot;The cLite™ software prevents overwriting reserved factory settings when loading this file.




cLite SSC Calibration _ D X Status: IC 1: Entering Command Mode IC 1: Reading EEPROM IC 1: Programming EEPROM IC 1: Initialization Complete IC 1: Collecting Raw data Data Collection Complete Tot_1 Sensor % Field Piecewise Correction Break Pt: 100.00 % raw 150.00 Temperature # ICs: 1 Sensor 10.000 Temp 0.000 Initialize Get ID Add Point Remove Point rawT Valid Channel ID Value 0000000000000009 ▼ 10.000 57.894 00.000 29.976 0000 CustID1 0000 ZMDIConfid 0ь01 ZMDIConfig2 0006 ZMDIConfia3 00f0 cLite™ ID Section

Figure 5.1 Calibration Window with 3-Point Calibration Example

- 9) For the 3-point calibration, choose the coefficients Gain_1, Offset_1 and Sot_1 by highlighting the coefficients in the upper middle section of the calibration window. The smaller graph above the coefficient list indicates the recommended pattern of three capacitive sensor readings at the same temperature.
- 10) For calibrations using a piece-wise correction, check "Piecewise Correction" and set a break point in the "Break Pt" field. For this example, no breakpoint is used, so leave the default value 100% as the setting.
- 11) Click on "Initialize" in the cLite™ ID section (lower left corner). The "Initialize Calibration" window appears (see Figure 5.2). Click "Browse" and select the same default EEPROM file as used in step 7). Click on "Initialize From File."

Figure 5.2 – Initialize Calibration Window (Example for the ZSC31210)

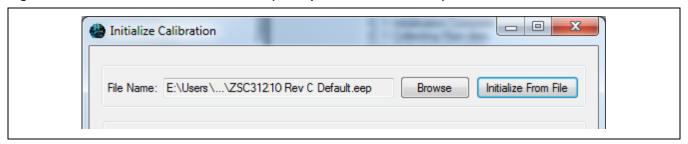



12) Next start data collection. Normally this would be done with a real capacitive sensor attached to the cLite[™] on a remote board in a controlled chamber. Instead, this dry run calibration uses the C0 sensor replacement as the input.

Note: The minimum number of calibration points is equal to the number of coefficients to be calculated. The software allows the user to collect more than the required number of calibration points. The user can select which points are used for calculating the calibration coefficients by checking the "Cal" column. Data points that are not selected in the "Cal" column will be used for validation of the output error shown the "Error" column.

- a) On jumper K7 on the SSC Evaluation Board, shunt C0 to CC for a 3pF capacitance input (see Figure 3.1).
- b) Enter 10% in the "Sensor %" field.
- c) Click on "Add New Point." The software obtains a raw reading from the part, graphs the new data point, and displays the values in the middle bottom section.
- Remove the 3pF shunt on K7. Shunt C0 to CC on the K8 jumper for a 6pF capacitance input.
- e) Enter 50% in the "Sensor %" field.
- f) Click on "Add New Point" again. The software obtains a new raw reading from the part and graphs the new data point.
- g) Add the 3pF shunt back onto K7 for a total of 9pF capacitance input.
- h) Enter 90% in the "Sensor %" field.
- Click on "Add New Point" again. The software obtains a new raw reading from the part and graphs the new data point.
- 13) Because this is a 3-point calibration, the software has all the necessary data for calculating and writing the coefficients. Click on "Calculate," which should now be active.
- 14) Close the calibration window. Click on "Start NOM" and then "Run" to display the digital output values in the lower display section.



6 Verify Calibration with PDM_C Output

In PDM mode, the cLite[™] must be programmed to be in Update Mode. A simple first-order RC filter is provided on the SSC Evaluation Board for creating an analog output by filtering the PDM signal (for more details refer to the data sheet, section 3.7). The analog output voltage can be measured in two different ways supported by the cLite[™] SSC Modular Evaluation Kit as described below. The calibration steps explained in section 5 are also valid for applications using the PDM_C output.

6.1 Measuring the PDM_C Output using the cLite™ Software

For this check, the 10-bit ADC of the microcontroller on the SSC CB reads the PDM_C voltage and displays the ratio of the measured output voltage to the supply voltage of the SSC CB (5V). In order to get an accurate reading, the VDD voltage on the cLite[™] SSC Evaluation Board must be known (the voltage can be adjusted via the blue potentiometer on the board). Record the voltage into the VDD field in the main window of the cLite[™] SSC Evaluation Software.

Follow the instructions in steps 1) through 14) of section 5, and then complete these additional steps.

- 15) Change the output mode selection in the main menu to PDM_C.
- 16) Enable PDM_C/PDM_T via the K3/K4 jumpers on the cLite™ SSC Evaluation Board.
- 17) Click on "Start NOM" and then "Run" to display the output voltage in [%] of the supply voltage.

7 Calculation of Calibration Coefficients Off-Line

Note This calculation is possible without connecting the kit boards to the PC. Raw and target values can copied using the copy and paste function of any spreadsheet program.

Steps for the Off-Line Calibration Coefficient Calculation:

- 1) Start the cLite™ SSC Evaluation Software.
- 2) Click on "Calibrate." The calibration window appears (see Figure 5.1).
- 3) Select the coefficients for the desired calibration method by highlighting the coefficients in the upper middle section of the calibration window. The smaller graph above the coefficient list indicates the recommended pattern of capacitive sensor readings and temperature readings.
- 4) For calibrations using a piece-wise correction, check "Piecewise Correction" and set a break point in the "Break Pt" field.


Note: This is a "blind" initialization because no part is connected.



- 6) Start data collection. The target and raw values can be written/copied in the related fields. The values are [%] for the capacitance target and raw readings and [°C] for the temperature target and raw readings.
 - a) Click on "Add New Point."
 - b) Enter the first target capacitance reading [%] in the "sensor" field and enter the raw value [%] in the "raw" field. For calibration with temperature compensation, also add the chamber temperature in the "temp" field and raw readings in the "rawT" fields.
 - c) Repeat a) and b) as needed until all calibration points are entered.

Note: See step 12) in section 5.1 for use of the "Cal" column shown in Figure 7.1.

Figure 7.1 Fields for Manually Entering Target and Raw Values

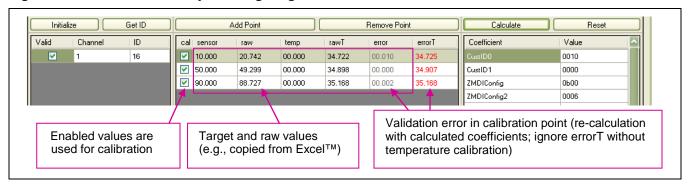

- 7) Check the "Valid" check box in the cLite™ ID section, and click on the "Calculate" button. The coefficients are stored in the CalibrationLog.txt file.
- 8) Click the "View Log" button to open this file. For each calibration point, the error for the point is calculated in the same file.
- 9) The calibration information can be exported to Microsoft Excel[™] or to a CSV file by clicking on the "Export" button. (Use the drop-down arrow to switch between Excel[™] and CSV file)

Note Instead of entering the raw and target values for the capacitance and temperature target and raw values, the user can transfer these values from an Excel[™] file using the copy/paste feature. The number of rows in the Excel[™] table must match the number of rows in the software. Ensure that the Excel[™] table includes only numbers in the correct format (Category: Number). Copying from formula results is not possible.



8 cLite[™] SSC Evaluation Software with the IDT SSC Terminal

8.1 Protocol

The microcontroller (type ATmega32) on the SSC Communication Board (SSC CB) enables communication with the cLiteTM SSC Evaluation Board/ cLiteTM using the *cLiteTM SSC Evaluation Software* running on the PC. The standard I^2C^{TM} protocol is implemented in the microcontroller's software. The USB_UART IC on the SSC CB transfers the signals from the microcontroller to the USB port of the PC.

For more details, see the SSC Communication Board Data Sheet.

8.2 IDT SSC Terminal

The IDT SSC Terminal is the lowest level of communication for transferring commands from the PC to the microcontroller on the SSC CB. Refer to the SSC Communication Board Data Sheet for instructions for downloading this program from the SSC Evaluation Tools web page on IDT's web site (www.IDT.com/SSC-COMM-BD). A full summary and detailed command description of the applicable controller commands are given in the SSC Communication Board Data Sheet.

For the cLite[™] communication mode, use the setting explained for I²C[™] or SPI.

Table 8.1 Character Order for IDT SSC Terminal


		Character Order				
	1 2 3 4,5 6,7,8		6,7,8	<dd></dd>		
cLite™	I	R or W	7 or _			
Comments		Read or Write	Trigger Power Cycle or Not	Slave address) (28 _{HEX} default)	Number of Bytes to Read and Write	Blank for Read; Data Bytes to Write
Examples	I	W	Τ	28	003	500000
	1	R	_	28	002	

Note: If "T" is sent for the 3rd position (instead of "_"), the cLite™ is powered off and then on. "T" should be used only if power cycling is necessary for operation (i.e., "Start Command Mode").



Figure 8.1 below shows a communication example. Write the command in the input line and press ENTER on the keyboard or click on "Send."

Figure 8.1 SSC Terminal Program Sample

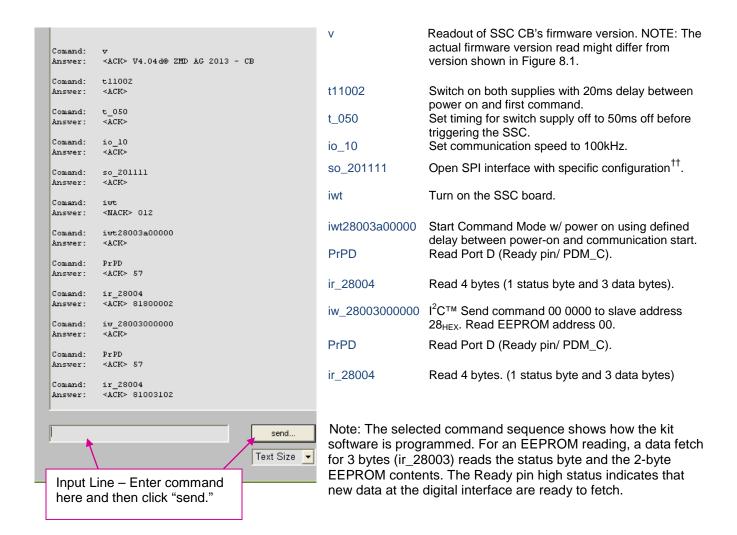

^{††} For more details, refer to the SSC Command Syntax Spreadsheet.



9 Pin Configuration and Package – TSSOP14 Samples

The ZSSC3122 and ZSSC3123 are available with production parts in the TSSOP14 package (4.4mm±0.1mm body wide with lead-pitch 0.65mm). The ZSC31210 is available in this package for samples only. The ZSC31210, ZSSC3122, and ZSSC3123 are pin compatible. See the notes in Table 9.2 regarding connection requirements.

Table 9.1 Storage and Soldering Condition

Storage and Soldering TSSOP14						
Parameter	Symbol	Conditions	Min	Тур.	Max	Units
Maximum Storage Temperature	T _{max_storage}	Less than 10hrs, before mounting			150	°C
Minimum Storage Temperature	T _{min_storage}	At original packing only	-55			°C
Maximum Dry Bake Temperature	T _{drybake}	Less than100hrs in summary, before mounting			125	°C
Soldering Peak Temperature	T _{peak}	Less than 30s (IPC/JEDEC-STD-020 Standard)			260	°C

Figure 9.1 ZSC31210, ZSSC3122, and ZSSC3123 cLite™ Pin-Out Diagram – TSSOP14

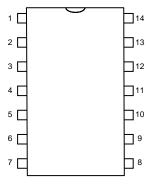




Table 9.2 ZSC31210, ZSSC3122, and ZSSC3123 cLite™ Pin Assignments – TSSOP14

Pin	Name	Description	Notes
1	VCORE	Core voltage	Always connect to an external capacitor to Gnd that is within the specifications given in data sheet section 1.3 for C _{VCORE_SM} and C _{VCORE_UM} . This is the only internal module pin. Refer to section 8 for ESD details.
2	C0	Capacitor input 0	
3	VSS	Ground supply	Connecting to GND for shielding is strongly recommended.
4	CC	Common capacitor input	
5	VSS	Ground supply	Connecting to GND for shielding is strongly recommended.
6	C1	Capacitor input 1	If not used, must be unconnected.
7	VDD	Supply voltage (2.3V to 5.5V for ZSC31210) (1.8V to 5.5V for ZSSC3122 and ZSSC3123)	Must connect to Vsupply.
8	Alarm_Low/ PDM_T	Low alarm output Temperature PDM (see data sheet for details)	If not used, must be unconnected.
9	Alarm_High	High alarm output	If not used, must be unconnected.
10	Ready/ PDM_C	Ready signal (conversion complete output) Capacitance PDM (see data sheet for details)	If not used, must be unconnected.
11	VSS	Ground supply	Must connect to GND.
12	SDA/MISO	I ² C TM data if in I ² C TM Mode Master-In-Slave-Out if in SPI Mode (see Table 3.8)	If not used, must connect to VDD.
13	SCL/SCLK	I ² C TM clock if in I ² C TM Mode Serial clock if in SPI Mode (see data sheet for details)	If not used, must connect to VDD.
14	SS	Slave Select (input) if in SPI Mode (see data sheet for details)	If not used, must be unconnected.



10 Related Documents

Document				
ZSC31210, ZSSC3122, and ZSSC3123 Common Documents				
SSC Communication Board Data Sheet*				
SSC Command Syntax Spreadsheet*				
SSC Evaluation Kits Feature Sheet* (includes ordering codes)				
SSC Communication Board Application Note—Driver Installation Instructions*				
ZSC31210 cLite™ Data Sheet				
ZSSC3122-Specific Documents				
ZSSC31222 cLite™ Data Sheet				
ZSSC3123-Specific Documents				
ZSSC3123 cLite™ Data Sheet				

Visit the product page for the ZSC31210, ZSSC3122, or ZSSC3123 on IDT's website www.IDT.com or contact your nearest sales office for the latest version of these documents. Documents marked with an asterisk are available at (www.IDT.com/SSC-COMM-BD).

11 Definitions of Acronyms

Term	Description	
ADC	Analog-to-Digital Converter	
CM	Command Mode	
ECC	Error Checking and Correction Codes	
NOM Normal Operation Mode		
SSC CB SSC Communication Board		
SSC Sensor Signal Conditioner		




12 Document Revision History

Revision	Date	Description
1.00	November 11, 2010	First release of document.
1.10	Updates for new version of software. Revision to add section 9, which provides the pin assignments for the TSSOF package used for the ZSC31210 samples (TSSOP-14 package is only availa samples with the Evaluation Kit; production parts are only available as die). Revision to Table 9.2 for the V _{CORE} pin. Revision to add the ZSSC3122 and ZSSC3123.	
1.20	November 19, 2013	Updates for new version of the software. SSC Communication board was updated to V4.1. Updates to contact information and imagery for cover and header. Minor updates for clarity.
	April 26, 2016	Changed to IDT branding.



Appendix A: Schematic cLite™ SSC Evaluation Board

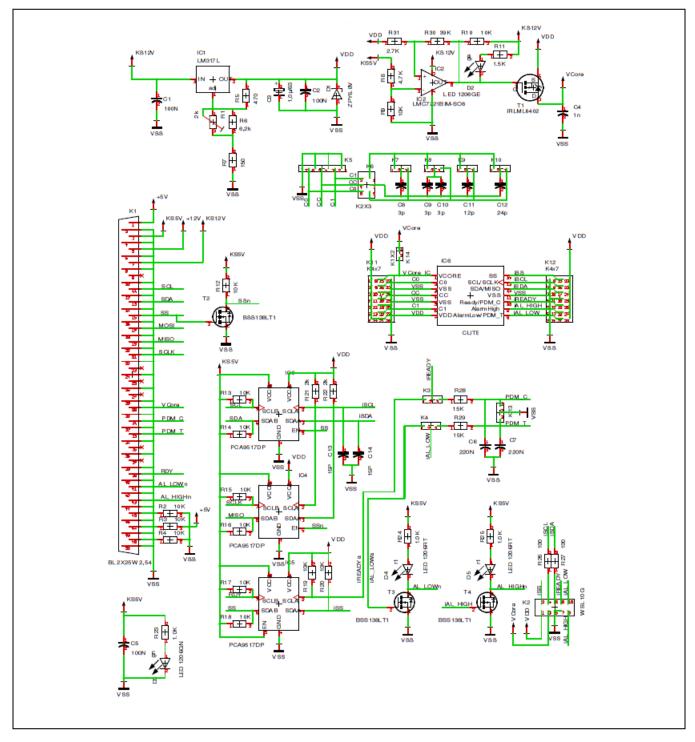

IMPORTANT NOTICE AND DISCLAIMER

RENESAS ELECTRONICS CORPORATION AND ITS SUBSIDIARIES ("RENESAS") PROVIDES TECHNICAL SPECIFICATIONS AND RELIABILITY DATA (INCLUDING DATASHEETS), DESIGN RESOURCES (INCLUDING REFERENCE DESIGNS), APPLICATION OR OTHER DESIGN ADVICE, WEB TOOLS, SAFETY INFORMATION, AND OTHER RESOURCES "AS IS" AND WITH ALL FAULTS, AND DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT OF THIRD-PARTY INTELLECTUAL PROPERTY RIGHTS.

These resources are intended for developers who are designing with Renesas products. You are solely responsible for (1) selecting the appropriate products for your application, (2) designing, validating, and testing your application, and (3) ensuring your application meets applicable standards, and any other safety, security, or other requirements. These resources are subject to change without notice. Renesas grants you permission to use these resources only to develop an application that uses Renesas products. Other reproduction or use of these resources is strictly prohibited. No license is granted to any other Renesas intellectual property or to any third-party intellectual property. Renesas disclaims responsibility for, and you will fully indemnify Renesas and its representatives against, any claims, damages, costs, losses, or liabilities arising from your use of these resources. Renesas' products are provided only subject to Renesas' Terms and Conditions of Sale or other applicable terms agreed to in writing. No use of any Renesas resources expands or otherwise alters any applicable warranties or warranty disclaimers for these products.

(Disclaimer Rev.1.01 Jan 2024)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu, Koto-ku, Tokyo 135-0061, Japan www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact Information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit www.renesas.com/contact-us/.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Renesas Electronics:

ZSSC312223KITV1P0 ZSSC31223123BOARDS