

Thin Film Pyroelectric Dual Channel Sensor

Introduction

Pyreos thin film pyroelectric IR sensors for gas detection and other substance concentration measurements offer exceptionally high responsivity, low microphonics and class leading thermal and electrical stability. This high performance current mode sensor achieves a signal to noise of ~10,000 and offers a fast, stable response over a wide operating frequency range. The sensor elements are built into a low noise circuit that has an internal CMOS op amp, with a 10 G Ω feedback resistor outputting a voltage signal centred around half the supply rail.





Sensor Characteristics		
Filter aperture	2.6 mm square	
Element size	1000 μm x 1000 μm	
Package	TO39	
Responsivity 1	150,000 V/W	
D* 1	3.5 x 10 ⁸ cm√Hz/ W	
Noise ¹	70 μV√Hz	


¹ 10 Hz, 500 K, room temperat	ure, without
window and optics	

Electrical Characteristics			
Max. Voltage	8.0 V		
Min. Voltage	2.7 V		
Output voltage normalised around mid-rail			
Microphonics	S _{vib} ~2 μV/ g at 10Hz		
Time Constant	~12 ms		
Operating Temperature	-40 to +85 °C		
Storage Temperature	-40 to +110 °C		
Filters	See "Filters Available"		

Frequency Characteristics

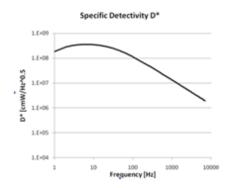

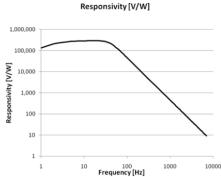

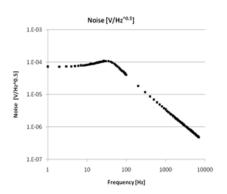

Please note: the information contained in this document is subject to change without further notification. Pyreos reserves the right to alter the performance and any resulting specification. Pyreos may choose not to supply any engineering sample devices as a commercial product. No responsibility is accepted for any consequential loss incurred. Pyreos Ltd, SMC, Alexander Crum Brown Road, Edinburgh EH9 3FF, UK. Tel: +441316507009, www.pyreos.com




Package Information

Filter window size 2.6 +0.05/-0 Age and after Sequence of the sequence of th

Note: Ensure that the sensor base is not in contact with the PCB in order to avoid shorts.

Recommended Circuit Diagram

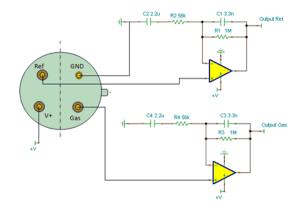

Please note: the information contained in this document is subject to change without further notification. Pyreos reserves the right to alter the performance and any resulting specification. Pyreos may choose not to supply any engineering sample devices as a commercial product. No responsibility is accepted for any consequential loss incurred. Pyreos Ltd, SMC, Alexander Crum Brown Road, Edinburgh EH9 3FF, UK. Tel: +441316507009, www.pyreos.com



Filters Available

Pyreos has a range of standard filters available.

Part number	Channel 1 CWL µm / (HPB nm)	Channel 2 (tab) CWL µm / (HPB nm)	Use
PY0317	3.91 / (90)	3.30 / (160)	CH ₄
PY2486	3.91 / (90)	3.33 / (160)	H-C
PY0261	3.91 / (90)	3.375 / (190)	H-C
PY0234	3.91 / (90)	4.26 / (180)	CO ₂
PY2343	3.70 / (110)	4.26 / (180)	CO ₂ (Medical)
PY1466	8.44 / (205)	4.26 / (180)	Anaesthesia
PY1943	3.91 / (90)	4.30 / (110)	CO ₂ (Narrow)
PY0238	3.91 / (90)	4.43 / (60)	CO ₂ (Special)
PY0305	3.91 / (90)	4.64 / (180)	CO
PY0259	3.91 / (90)	4.64 / (90)	CO (Narrow)
PY0304	3.91 / (90)	5.30 / (180)	NO
PY2055	3.91 / (90)	6.20 / (200)	NO_2
PY0303	3.91 / (90)	7.30 / (200)	SO ₂
PY0308	3.91 / (90)	10.6 / (240)	SF ₆ , Ethylene
PY1648	Refrigerant	Reference	Refrigerant R12 (Freon)
PY2197	Fat Reference	Fat	Food
PY2547	Lactose Reference	Lactose	Food
PY2550	Protein Reference	Protein	Food
PY2551	Reference	Sugar, Ethanol	Food, breath
PY1839	5.0 Long Pass	5.0 Long Pass	Broadband for bespoke filters

Note: An additional window may be required to provide high wavelength blocking.

Order Information

Please quote PY-ITV-DUAL—TO39(3+1) and your desired filter combination or quote specific part number PYXXX as per filter table. Contact: sales@pyreos.com

Please note: the information contained in this document is subject to change without further notification. Pyreos reserves the right to alter the performance and any resulting specification. Pyreos may choose not to supply any engineering sample devices as a commercial product. No responsibility is accepted for any consequential loss incurred. Pyreos Ltd, SMC, Alexander Crum Brown Road, Edinburgh EH9 3FF, UK. Tel: +441316507009, www.pyreos.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Pyreos:

PY2572 PY2486 PY1466 PY1839 PY2197 PY2547 PY2550 PY2580