

EMOSAFE EN-100

Product Datasheet

Network Isolators for PCB assembly

December 2015





1 FEATURES AND ADVANTAGES

- Suitable for PCB assembly: pluggable or solderable
- Ultra-compact
- Conforms to IEC 60601-1 (3rd Edition)
- 10/100/1000 Mbit/s Ethernet
- Outstanding Ethernet performance in accordance with ISO 11801 Class D
- UL Recognized Component
- Conforms to RoHS
- 4.6 kV AC dielectric strength
- 8.5 kV DC dielectric strength
- Transient voltage suppression on all signal lines
- Suitable for devices with supply voltages of up to 400 V AC
- 100% quality control testing

2 GENERAL DESCRIPTION

EMOSAFE EN-100 Network Isolators disconnect every electrically conducting connection (specifically the data and shield conductors) between devices connected together via a copper-based Ethernet network. The Network Isolators prevent current flow resulting from differences in electrical potentials, and also protect connected devices and their users from stray external voltages and power surges which may be directly or inductively coupled onto the network lines by causes such as installation errors, lightning, switching operations, and electrostatic discharge.

EMOSAFE EN-100 Network Isolators are intended for integration into printed circuit boards (PCBs) of electronic devices requiring advanced protection. Models are available with socket strips for plug-in assembly, and there are models that can be permanently soldered in place. Their extremely compact design allows them to be utilised in situations where there is limited physical space. A summary of the available variants can be found in section *4 SUMMARY OF VARIANTS*.





All EN-100 Network Isolators offer a particularly effective level of device protection. Voltage spikes on individual signal conductors are eliminated by means of a supplementary transient voltage suppression (TVS) diode circuit. These transient voltages cannot be repressed by conventional network isolators. However, even these are eliminated by the EN-100.

The entire EN-100 series meet the requirements of IEC 60601-1 (3rd Edition) and IEC 60601-1-2, and as such are suitable for providing medical electrical (ME) devices the required galvanic isolation for their Ethernet interfaces.

EMOSAFE Network Isolators transmit high-frequency signals through the principle of electromagnetic induction. Because of this, they do not require their own power supplies. There are no software drivers to be installed.

Low-frequency signal components are strongly attenuated, so that connected devices may, for example, be protected against ground loops.

3 APPLICATIONS

3.1 PATIENT PROTECTION

Electrical separation of Ethernet interfaces of medical electrical (ME) devices and systems, where patients must be protected from dangerous leakage currents, in conformity with applicable standards.

3.2 EQUIPMENT PROTECTION

Applications, in which valuable devices or those requiring special protection need to be protected against ripple, mains hum, and surge voltages from the network periphery.

3.3 MEASUREMENT TECHNOLOGY

Electrical measuring and monitoring equipment, which needs to be protected against external voltages and interference voltages arising from the Ethernet periphery.

3.4 AUDIO

Audio applications, in which the transmission of low frequency alternating current voltages (mains hum) over the network connection is to be reduced to an imperceptible level.





4 SUMMARY OF VARIANTS

EN-100 Network Isolators for PCB assembly	Name Article number	Special features	AC dielectric strength in kV	TVS diodes	10/100/1000 Mbit/s	Typical Return Loss in dB @ 100 MHz	Typical Insertion Loss in dB @ 100 MHz	Configuration
Pluggable EN-1007 A10049012345 emosystems de	EN-100T A10049	Extra-short length between inputs and outputs. Downwards-facing pins. In-circuit pluggable and solderable.	4.6	✓	√	17	0.8	
Pluggable EN-100L A10050012345 emosystems de	EN-100L A10050	Extra-short length between inputs and outputs. Upwards-facing pins. In-circuit pluggable and solderable.	4.6	✓	✓	17	0.8	
Solderable EN-1005 A70048012345 emosystems.de	EN-100S A10048	Extra-short length between inputs and outputs. Edge soldering receptacles for manual assembly. Solderable.	4.6	✓	✓	17	0.8	
Solderable EN-100C A10051012345 emosystems de	EN-100C A10051	Milling of PCB is not required. Edge soldering receptacles for manual assembly. Solderable.	4.6	✓	✓	17	0.8	



D1056-V40 Page 3 of 22 © 2015 EMO Systems GmbH



5 DRAWINGS

All dimensions in millimetres.

5.1 EN-100T

5.1.1 EN-100T MODULE DIMENSIONS

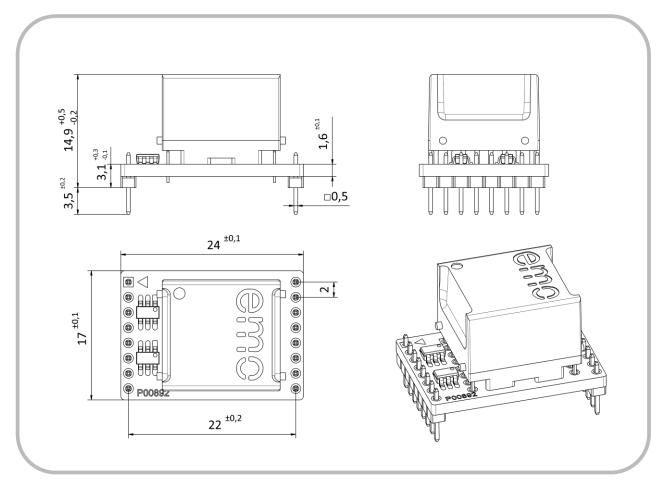


Figure 1. Physical dimensions of the EN-100T module.



PD1056-V40 Page 4 of 22 © 2015 EMO Systems GmbH



5.1.2 EN-100T ASSEMBLY DIMENSIONS

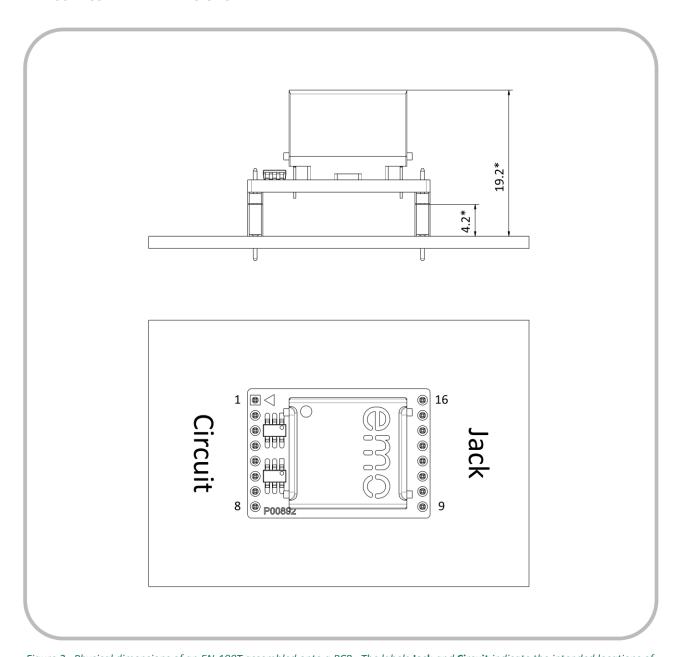


Figure 2. Physical dimensions of an EN-100T assembled onto a PCB. The labels Jack and Circuit indicate the intended locations of the RJ45 Ethernet Jack and the product circuitry, respectively.

TÜV SUD EN ISO 13485

D1056-V40 Page 5 of 22 © 2015 EMO Systems GmbH

^{*} The pin connectors may be directly soldered onto the PCB, or plugged into a pre-mounted socket strip. Figure 2 illustrates a socket strip with a height of 4.2 mm. The total assembly height is reduced by this amount when a socket strip is not used.



5.1.3 EN-100T PCB LAYOUT

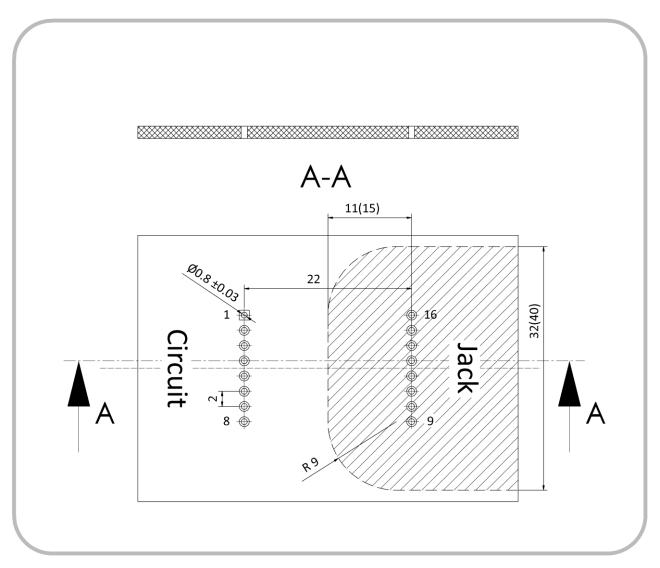


Figure 3. Suggested PCB layout for the EN-100T.

When fitting PCB socket strips, ensure that they are suitable for the EN-100T, and that they match the PCB holes.

Dimensions in parentheses indicate the clearances required for environments with voltages up to 400 V AC.

PCB traces and other conducting surfaces must not be present in the hatched area, except for those connecting the EN-100T to the Ethernet Jack. This is required in order to maintain the creepage and clearance distances.

The dimensions of the hatched area are based upon requirements for realising two means of patient protection (MOPP) for medical electrical (ME) devices. For such ME applications, those with operating voltages of up to 250 V AC require the dimensions indicated in Figure 3 to be met or exceeded, and those with operating voltages of up to 400 V AC require the dimensions indicated in parentheses in Figure 3 to be met or exceeded.

However, the actual requirements for the clearance and creepage distances vary with device and application, and must be determined and verified. The assembly of the Network Isolator in a manner that satisfies requirements and relevant standards is the responsibility of the device manufacturer.



D1056-V40 Page 6 of 22 © 2015 EMO Systems GmbH



5.2 EN-100L

5.2.1 EN-100L MODULE DIMENSIONS

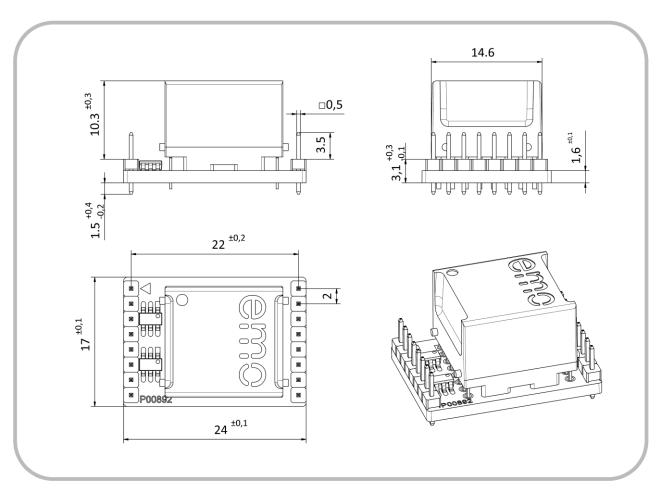


Figure 4. Physical dimensions of the EN-100L module.





5.2.2 EN-100L ASSEMBLY DIMENSIONS

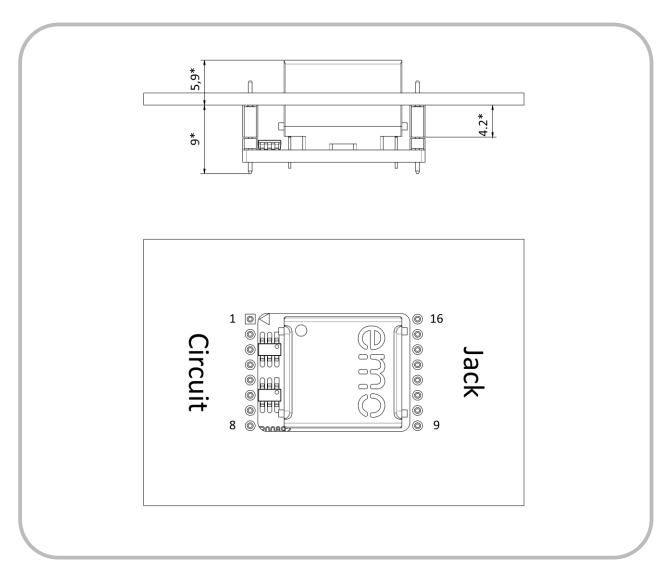


Figure 5. Physical dimensions of an EN-100L assembled onto a PCB. The labels **Jack** and **Circuit** indicate the intended locations of the RJ45 Ethernet Jack and the product circuitry, respectively.

TÜV

D1056-V40 Page 8 of 22 © 2015 EMO Systems GmbH

^{*} The pin connectors may be directly soldered onto the PCB, or plugged into a pre-mounted socket strip. Figure 5 illustrates a socket strip with a height of 4.2 mm. The final assembly position is changed by this amount when a socket strip is not used.



5.2.3 EN-100L PCB LAYOUT

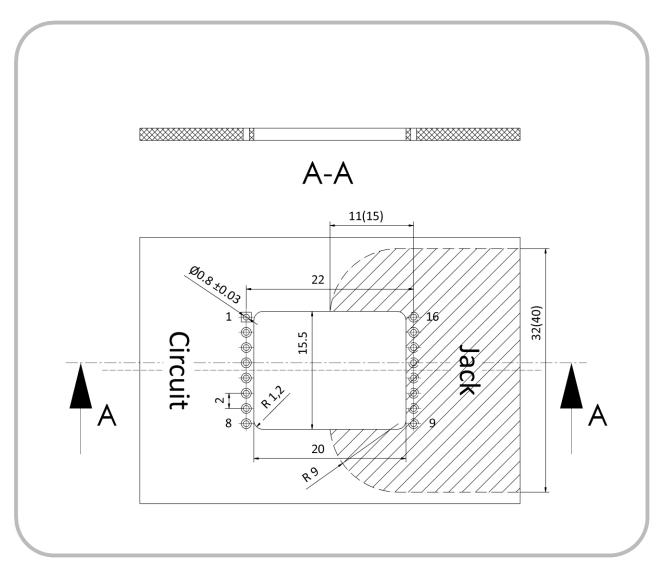


Figure 6. Suggested PCB layout for the EN-100L.

Pay careful attention to the required PCB cut-out area, as detailed.

When fitting PCB socket strips, ensure that they are suitable for the EN-100L, and that they match the PCB holes.

Dimensions in parentheses indicate the clearances required for environments with voltages up to 400 V AC.

PCB traces and other conducting surfaces must not be present in the hatched area, except for those connecting the EN-100L to the Ethernet Jack. This is required in order to maintain the creepage and clearance distances.

The dimensions of the hatched area are based upon requirements for realising two means of patient protection (MOPP) for medical electrical (ME) devices. For such ME applications, those with operating voltages of up to 250 V AC require the dimensions indicated in Figure 6 to be met or exceeded, and those with operating voltages of up to 400 V AC require the dimensions indicated in parentheses in Figure 6 to be met or exceeded.

However, the actual requirements for the clearance and creepage distances vary with device and application, and must be determined and verified. The assembly of the Network Isolator in a manner that satisfies requirements and relevant standards is the responsibility of the device manufacturer.

TÜV SUD ENISO 13485

D1056-V40 Page 9 of 22 © 2015 EMO Systems GmbH



5.3 EN-100S

5.3.1 EN-100S MODULE DIMENSIONS

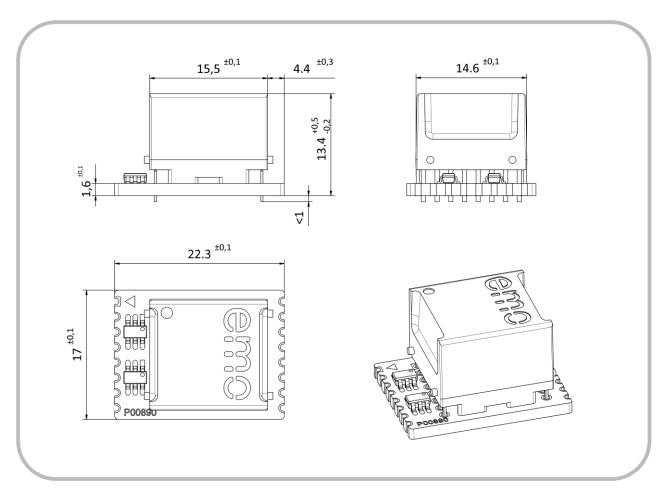


Figure 7. Physical dimensions of the EN-100S module.



PD1056-V40 Page 10 of 22 © 2015 EMO Systems GmbH



5.3.2 EN-100S ASSEMBLY DIMENSIONS

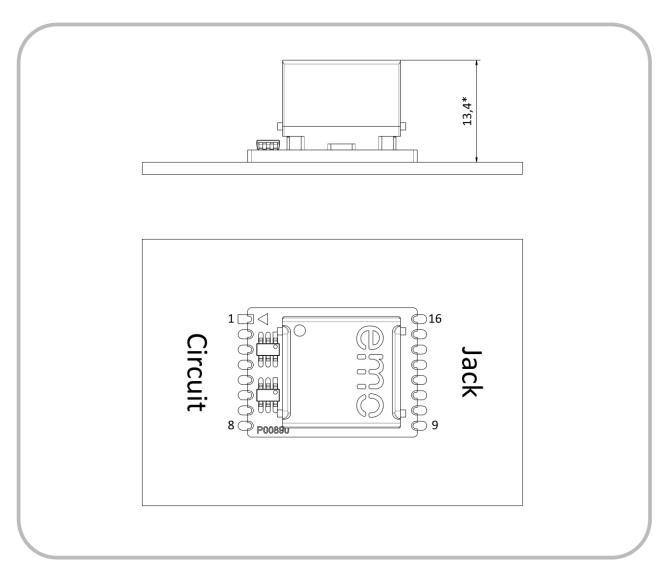


Figure 8. Physical dimensions of an EN-100S assembled onto a PCB. The labels **Jack** and **Circuit** indicate the intended locations of the RJ45 Ethernet Jack and the product circuitry, respectively.

The EN-100S solder receptacles are suitable for population onto PCBs with surface-mount style pads, but must however be manually soldered. Refer to section 6 HANDLING AND ASSEMBLY NOTES.

Page 11 of 22 © 2015 EMO Systems GmbH EMO Systems GmbH • Rungestr. 19 • 10179 Berlin • Germany • Phone: +49-30-4000-475-80 • Fax: +49-30-4000-475-90 • www.emosystems.de/en

^{*} The resulting component height of 13.4 mm is an expected dimension, and serves only as an indication.



5.3.3 EN-100S PCB LAYOUT

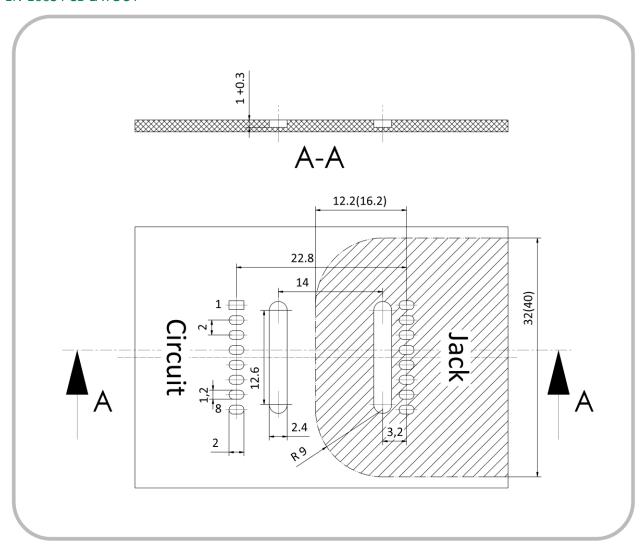


Figure 9. Suggested PCB layout for the EN-100S.

Pay careful attention to the two required Z-milling / cut-out areas, as detailed.

Dimensions in parentheses indicate the clearances required for environments with voltages up to 400 V AC.

Z-milling to a depth of 1 +0.3 mm is required in the rounded rectangular areas as shown in Figure 9, to accommodate the EN-100S.

PCB traces and other conducting surfaces must not be present in the hatched area, except for those connecting the EN-100S to the Ethernet Jack. This is required in order to maintain the creepage and clearance distances.

The dimensions of the hatched area are based upon requirements for realising two means of patient protection (MOPP) for medical electrical (ME) devices. For such ME applications, those with operating voltages of up to 250 V AC require the dimensions indicated in Figure 9 to be met or exceeded, and those with operating voltages of up to 400 V AC require the dimensions indicated in parentheses in Figure 9 to be met or exceeded.

However, the actual requirements for the clearance and creepage distances vary with device and application, and must be determined and verified. The assembly of the Network Isolator in a manner that satisfies requirements and relevant standards is the responsibility of the device manufacturer.

TÜV SÜD EN ISO 13465

P1056-V40 Page 12 of 22 © 2015 EMO Systems GmbH



5.4 EN-100C

5.4.1 EN-100C MODULE DIMENSIONS

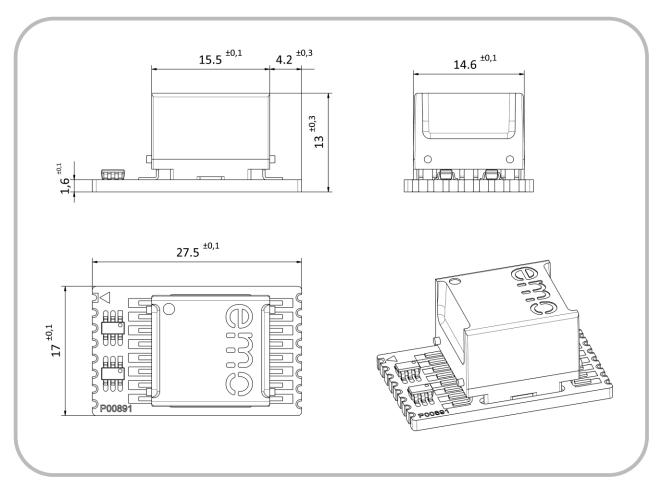


Figure 10. Physical dimensions of the EN-100C module.



D1056-V40 Page 13 of 22 © 2015 EMO Systems GmbH



5.4.2 EN-100C ASSEMBLY DIMENSIONS

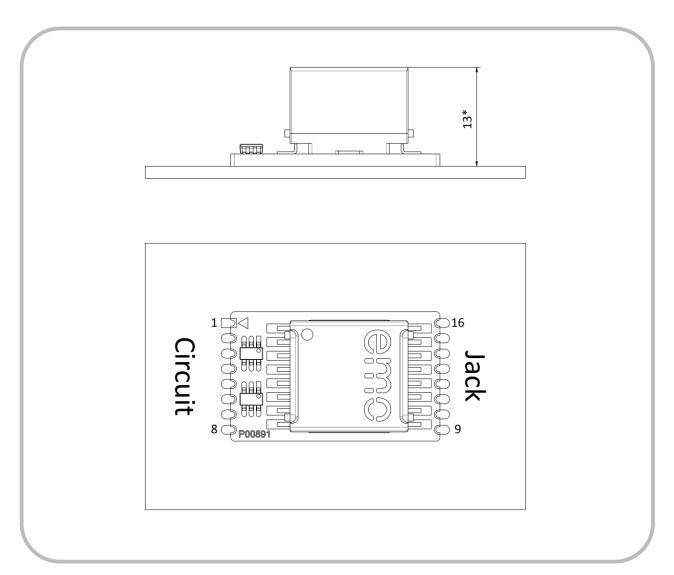


Figure 11. Physical dimensions of an EN-100C assembled onto a PCB.

The labels Jack and Circuit indicate the intended locations of the RJ45 Ethernet Jack and the product circuitry, respectively.

The EN-100C solder receptacles are suitable for population onto PCBs with surface-mount style pads, but must however be manually soldered. Refer to section *6 HANDLING AND ASSEMBLY NOTES*.

Q TÜV SUD ENISO 1485

D1056-V40 Page 14 of 22 © 2015 EMO Systems GmbH

^{*} The resulting component height of 13 mm is an expected dimension, and serves only as an indication.



5.4.3 EN-100C PCB LAYOUT

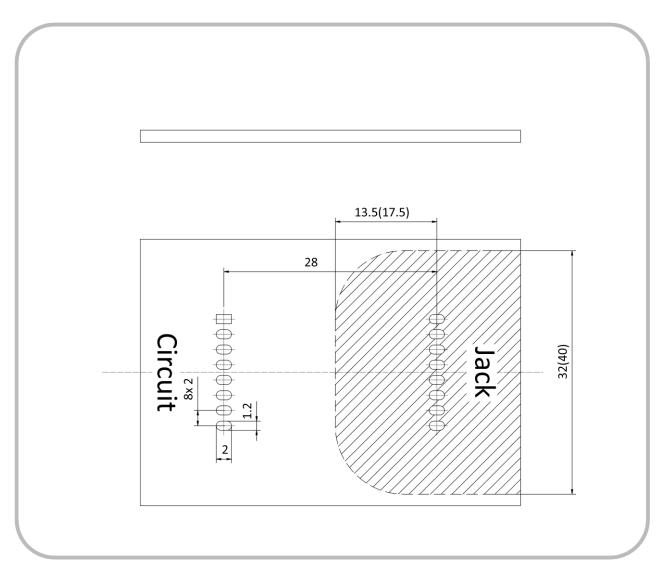


Figure 12. Suggested PCB layout for the EN-100C.

Dimensions in parentheses indicate the clearances required for environments with voltages up to 400 V AC.

PCB traces and other conducting surfaces must not be present in the hatched area, except for those connecting the EN-100C to the Ethernet Jack. This is required in order to maintain the creepage and clearance distances.

The dimensions of the hatched area are based upon requirements for realising two means of patient protection (MOPP) for medical electrical (ME) devices. For such ME applications, those with operating voltages of up to 250 V AC require the dimensions indicated in Figure 12 to be met or exceeded, and those with operating voltages of up to 400 V AC require the dimensions indicated in parentheses in Figure 12 to be met or exceeded.

However, the actual requirements for the clearance and creepage distances vary with device and application, and must be determined and verified. The assembly of the Network Isolator in a manner that satisfies requirements and relevant standards is the responsibility of the device manufacturer.

SUD EN ISO 13465

D1056-V40 Page 15 of 22 © 2015 EMO Systems GmbH



6 HANDLING AND ASSEMBLY NOTES

EN-100 Network Isolators are intended for manual soldering only. Assembly procedures using reflow ovens or wave soldering baths are not permissible as they may cause thermal damage to the potting material inside the transformer. Avoid exposing the transformer to ambient temperatures greater than 85°C.

7 APPLICATION INFORMATION

The EN-100 Network Isolators are designed for data transmission in the frequency range of 300 kHz to 100 MHz. Lower frequencies are strongly attenuated. For this reason, it is generally not possible to transmit the signals from nurse call systems, telephone systems or analogue audio / video signals over a Network Isolator.

The EN-100 Network Isolator can be used in a Power over Ethernet (PoE) network without restriction (however PoE devices downstream of the electrical isolation are not supplied with power).

8 SAFETY NOTICE

8.1 SAFETY INSPECTIONS

For the device or application fitted with EN-100, the test interval, as well as the requirements to be met for both regular safety inspections and post-repair inspections will be specified by the responsible organisation (e.g. manufacturer or operator as defined by the regulations), and based upon the applicable standards for the entire system.

8.2 CREEPAGE AND CLEARANCE DISTANCES

PCB layouts and applications that utilise EN-100 Network Isolators must be designed to meet or exceed the requirements of all applicable standards (for example, IEC 60601-1). Special attention must be paid to the required creepage and clearance distances.



P1056-V40 Page 16 of 22 © 2015 EMO Systems GmbH



9 SPECIFICATIONS

9.1 GENERAL

Category	Standards or Test Criteria	Properties		
Designation		EMOSAFE EN-100		
Construction		PCB Assembly		
Mounting Arrangement			oldering, plugging	
Input Interface			mm pin header older pad	
Output Interface			mm pin header older pad	
Weight		approximately 6 g		
Mean Time To Failure (MTTF)	SN 29500 Standard Temperature: 25°C Duty cycle: 100% (24 hours, 7 days)	3,250 years		
wear time to tandre (witti)	SN 29500 Standard Temperature: 40°C Duty cycle: 100% (24 hours, 7 days)	3,080 years		

9.2 ETHERNET PERFORMANCE

Category	Standards or Test Criteria	EN-100
Transmission Speeds	10 Mbit/s, 10Base-T (IEEE802.3 Cl.14)	✓
and Supported Network Proto-	100 Mbit/s, 100Base-Tx (IEEE802.3 Cl.25)	✓
cols	1000 Mbit/s, 1000Base-T (IEEE802.3 Cl.40)	✓
Performance Category	ISO 11801, Permanent Link (PL)	Class D
Incortion Loss (absolute)	Typical:	0.8 dB @ 100 MHz
Insertion Loss (absolute)	Maximum:	1.0 dB @ 100 MHz
Datum Lass (absolute)	Typical:	17.0 dB @ 100 MHz
Return Loss (absolute)	Minimum:	14.0 dB @ 100 MHz



D1056-V40 Page 17 of 22 © 2015 EMO Systems GmbH



9.3 ELECTRICAL

Category	Standards or Test Criteria		EN-100
AC Dielectric Strength	at 50 Hz, for 60 seconds	at 50 Hz, for 60 seconds 4.6 kV	
DC Dielectric Strength	for 60 seconds	8.5 kV	
Reinforced Isolation	IEC 60601-1	√	
Coupling Capacitance per Channel		37.5 pF ±25%	
Total Coupling Capacitance		150 pF ±25%	
Total Lookaga Current	275 V AC at 50 Hz	Typical:	12.0 μΑ
Total Leakage Current	Maximum:		16.0 μΑ
TVS diode circuitry	Suppression of transient	✓	

9.4 OPERATING CONDITIONS AND AREA OF APPLICATION

Category	Standards or Test Criteria	EN-100		
Pollution Degree	IEC 61010	2 *		
Overvoltage Category	IEC 60664-1		III	
Maximum Working Voltage †	Maximum mains voltage o devices, in accordance with	400 V AC 450 V DC		
Townsambure		Minimum:	-10°C	
Temperature		Maximum:	+70°C	
Ain II. maidite	New condensine	Minimum:	10%	
Air Humidity	Non-condensing	Maximum:	90%	
Air Dunnanum		Minimum:	700 hPa	
Air Pressure	Maximum:		1,060 hPa	
Altitude	Maximum:		3,200 m	

9.5 ENVIRONMENTAL CONDITIONS: STORAGE AND TRANSPORTATION

Category	Standards or Test Criteria	EN-100	
Tomporatura		Minimum:	-40°C
Temperature		Maximum:	+70°C
Air Humidity	Non condensing	Minimum:	10%
All Hullilaity	Non-condensing	Maximum:	90%
Air Pressure		Minimum:	500 hPa
All Plessure		Maximum:	1,060 hPa

TÜV SÜD ENISO 13465

PD1056-V40 Page 18 of 22 © 2015 EMO Systems GmbH

^{*} Normally only nonconductive pollution occurs. Temporary conductivity caused by condensation is to be expected.

[†] The Network Isolator can be permanently exposed to this voltage level.



9.6 CERTIFICATES

All Network Isolators from EMO Systems GmbH are additionally registered by UL International as Recognized Components, under the file numbers E249126 and E362969. They are therefore suitable for application in American and Canadian markets.

Furthermore, the compliance of our Network Isolators with the standard specifications IEC 60601-1 (3rd Ed.), ANSI/AAMI ES60601-1 and CAN/CSA-C22.2 No. 60601-1 has been confirmed by an independent, accredited laboratory. To view a copy of these certificates, please visit the UL Online Directory or contact us directly.

The certification of our products to the requirements of the IEC 60601-1-2 has also been confirmed by an external laboratory. The test report can be obtained upon request.

Our Declaration of Conformity can be found on our website, which confirms the compliance of our products with the requirements of the Low Voltage Directive, the Electromagnetic Compatibility Directive, and the Restriction of Hazardous Substances Directive (RoHS).

Category	Standards or Test Criteria	EN-100
UL Recognized Component		✓
UL File No.		E246126 E362969
IEC 60601-1	Complies with the requirements of a galvanic separator in accordance with IEC 60601-1 (Ed. 3.1)	✓
IEC 60601-1-2	Complies with the requirements of IEC 60601-1-2	✓
ANSI/AAMI ES 60601-1	Complies with the requirements of ANSI/AAMI ES60601-1	✓
CAN/CSA-C22.2 No. 60601-1	Complies with the requirements of CAN/CSA-C22.2 No. 60601-1	✓
Low Voltage Directive	Complies with the requirements of the directive 2014/35/EU	√
EMC Directive	Complies with the requirements of the directive 2004/108/EU	✓
RoHS Directive	Complies with the requirements of the directive 2011/65/EU	√
Lead-free	Contains no lead-containing substances, and is manufactured with lead-free solder	✓



D1056-V40 Page 19 of 22 © 2015 EMO Systems GmbH



9.7 ISOLATION DIAGRAM

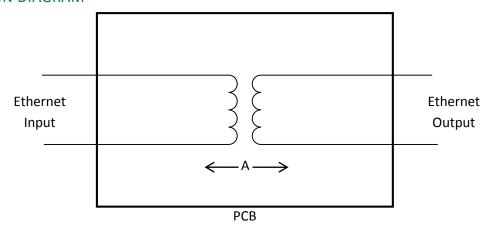


Figure 13. Isolation diagram of an EN-100 Network Isolator. Applies to all variants.

Area	Number and type of Means of Protection	Material Group (from CTI)		mum g Voltage V _{peak}	Required creepage distance (mm)	Required clearance distance (mm)	Measured creepage distance (mm)	Measured clearance distance (mm)
Α	2 MOPP *	IIIb †	400	565	12.0	7.0	12.5	12.5

9.8 FREQUENCY RESPONSE

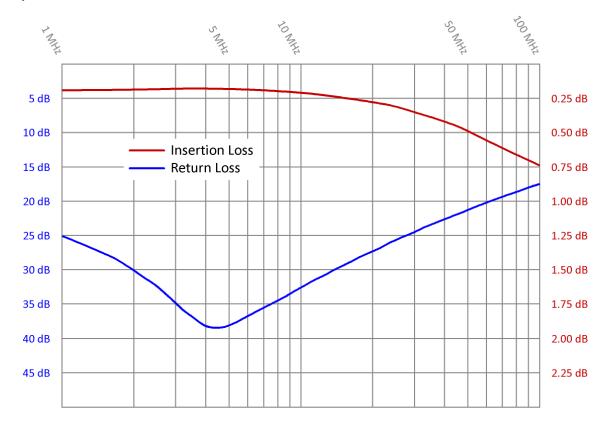


Figure 14. Typical frequency response for Insertion Loss and Return Loss of an EMOSAFE EN-100C Network Isolator.

TÜV SÜD EN ISO 13465

D1056-V40 Page 20 of 22 © 2015 EMO Systems GmbH

^{*} MOPP = Means of Patient Protection

[†] Materials in the Material Group IIIb have a Comparative Tracking Index (CTI) value between 100 and 175.



10 CIRCUIT DIAGRAM

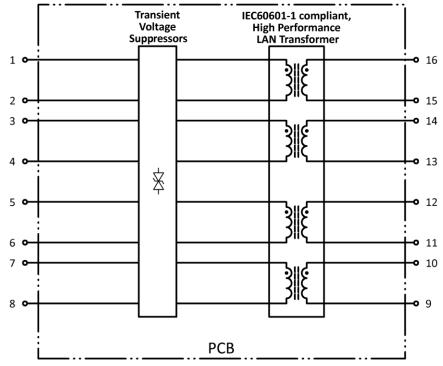


Figure 15. Circuit diagram for all EN-100 variants.

11 PACKAGING

Contents:

Network Isolator. One of: EN-100C, EN-100L, EN-100S, EN-100T

A packaging label provides the following information:

- Article description
- Quantity
- Date of Manufacture
- Serial number
- The serial number is printed as a 1D- (Code 128) and 2D barcode (Data Matrix).



PD1056-V40 Page 21 of 22 © 2015 EMO Systems GmbH



12 PRODUCT MARKINGS

CE	This mark certifies conformity of the product with all applicable EU Directives.
c 71. us E249126	Designates the product as a UL "Recognised Component"; File number E249126 and E362969.
	The product may not be disposed of in domestic waste.
PQ	This product contains no substances containing lead, and is manufactured using lead-free solder.
RoHS	This product meets the requirements of EU Directive concerning the limitation of the use of certain hazardous substances in electrical and electronic equipment.

13 MAINTENANCE

When used as directed, EMOSAFE Network Isolators are maintenance-free.

14 ENVIRONMENTAL PROTECTION INFORMATION

This device contains electronic components. At the end of its service life, it is to be returned to the manufacturer for disposal.

15 QUALITY

EMO Systems operates a certified quality management system for development and production in accordance with ISO 9001 and ISO 13485. Prior to delivery, each Network Isolator is subjected to a comprehensive quality inspection. This inspection ensures, among other factors, that the attained values for leakage currents, dielectric withstand strengths, insertion losses, return losses, and near end crosstalk values all meet the specified requirements.

16 CONTACT AND SUPPORT

Please find our up-to-date contact details on our website:

http://www.emosystems.de/en/contact

Or send us an e-mail at the following address:

support@emosystems.de

17 LEGAL NOTICE

The information provided above in this datasheet has been compiled with all due care, and is believed to be accurate and reliable. However, we cannot guarantee that the information contained is completely free from error. The end user is responsible and liable for the proper use of this product; EMO Systems assume no liability. We reserve the right to make changes to this datasheet without notice.

SUD EN ISO 13465

PD1056-V40 Page 22 of 22 © 2015 EMO Systems GmbH

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

EMO Systems:

EN-100L EN-100T EN-100C EN-100S