



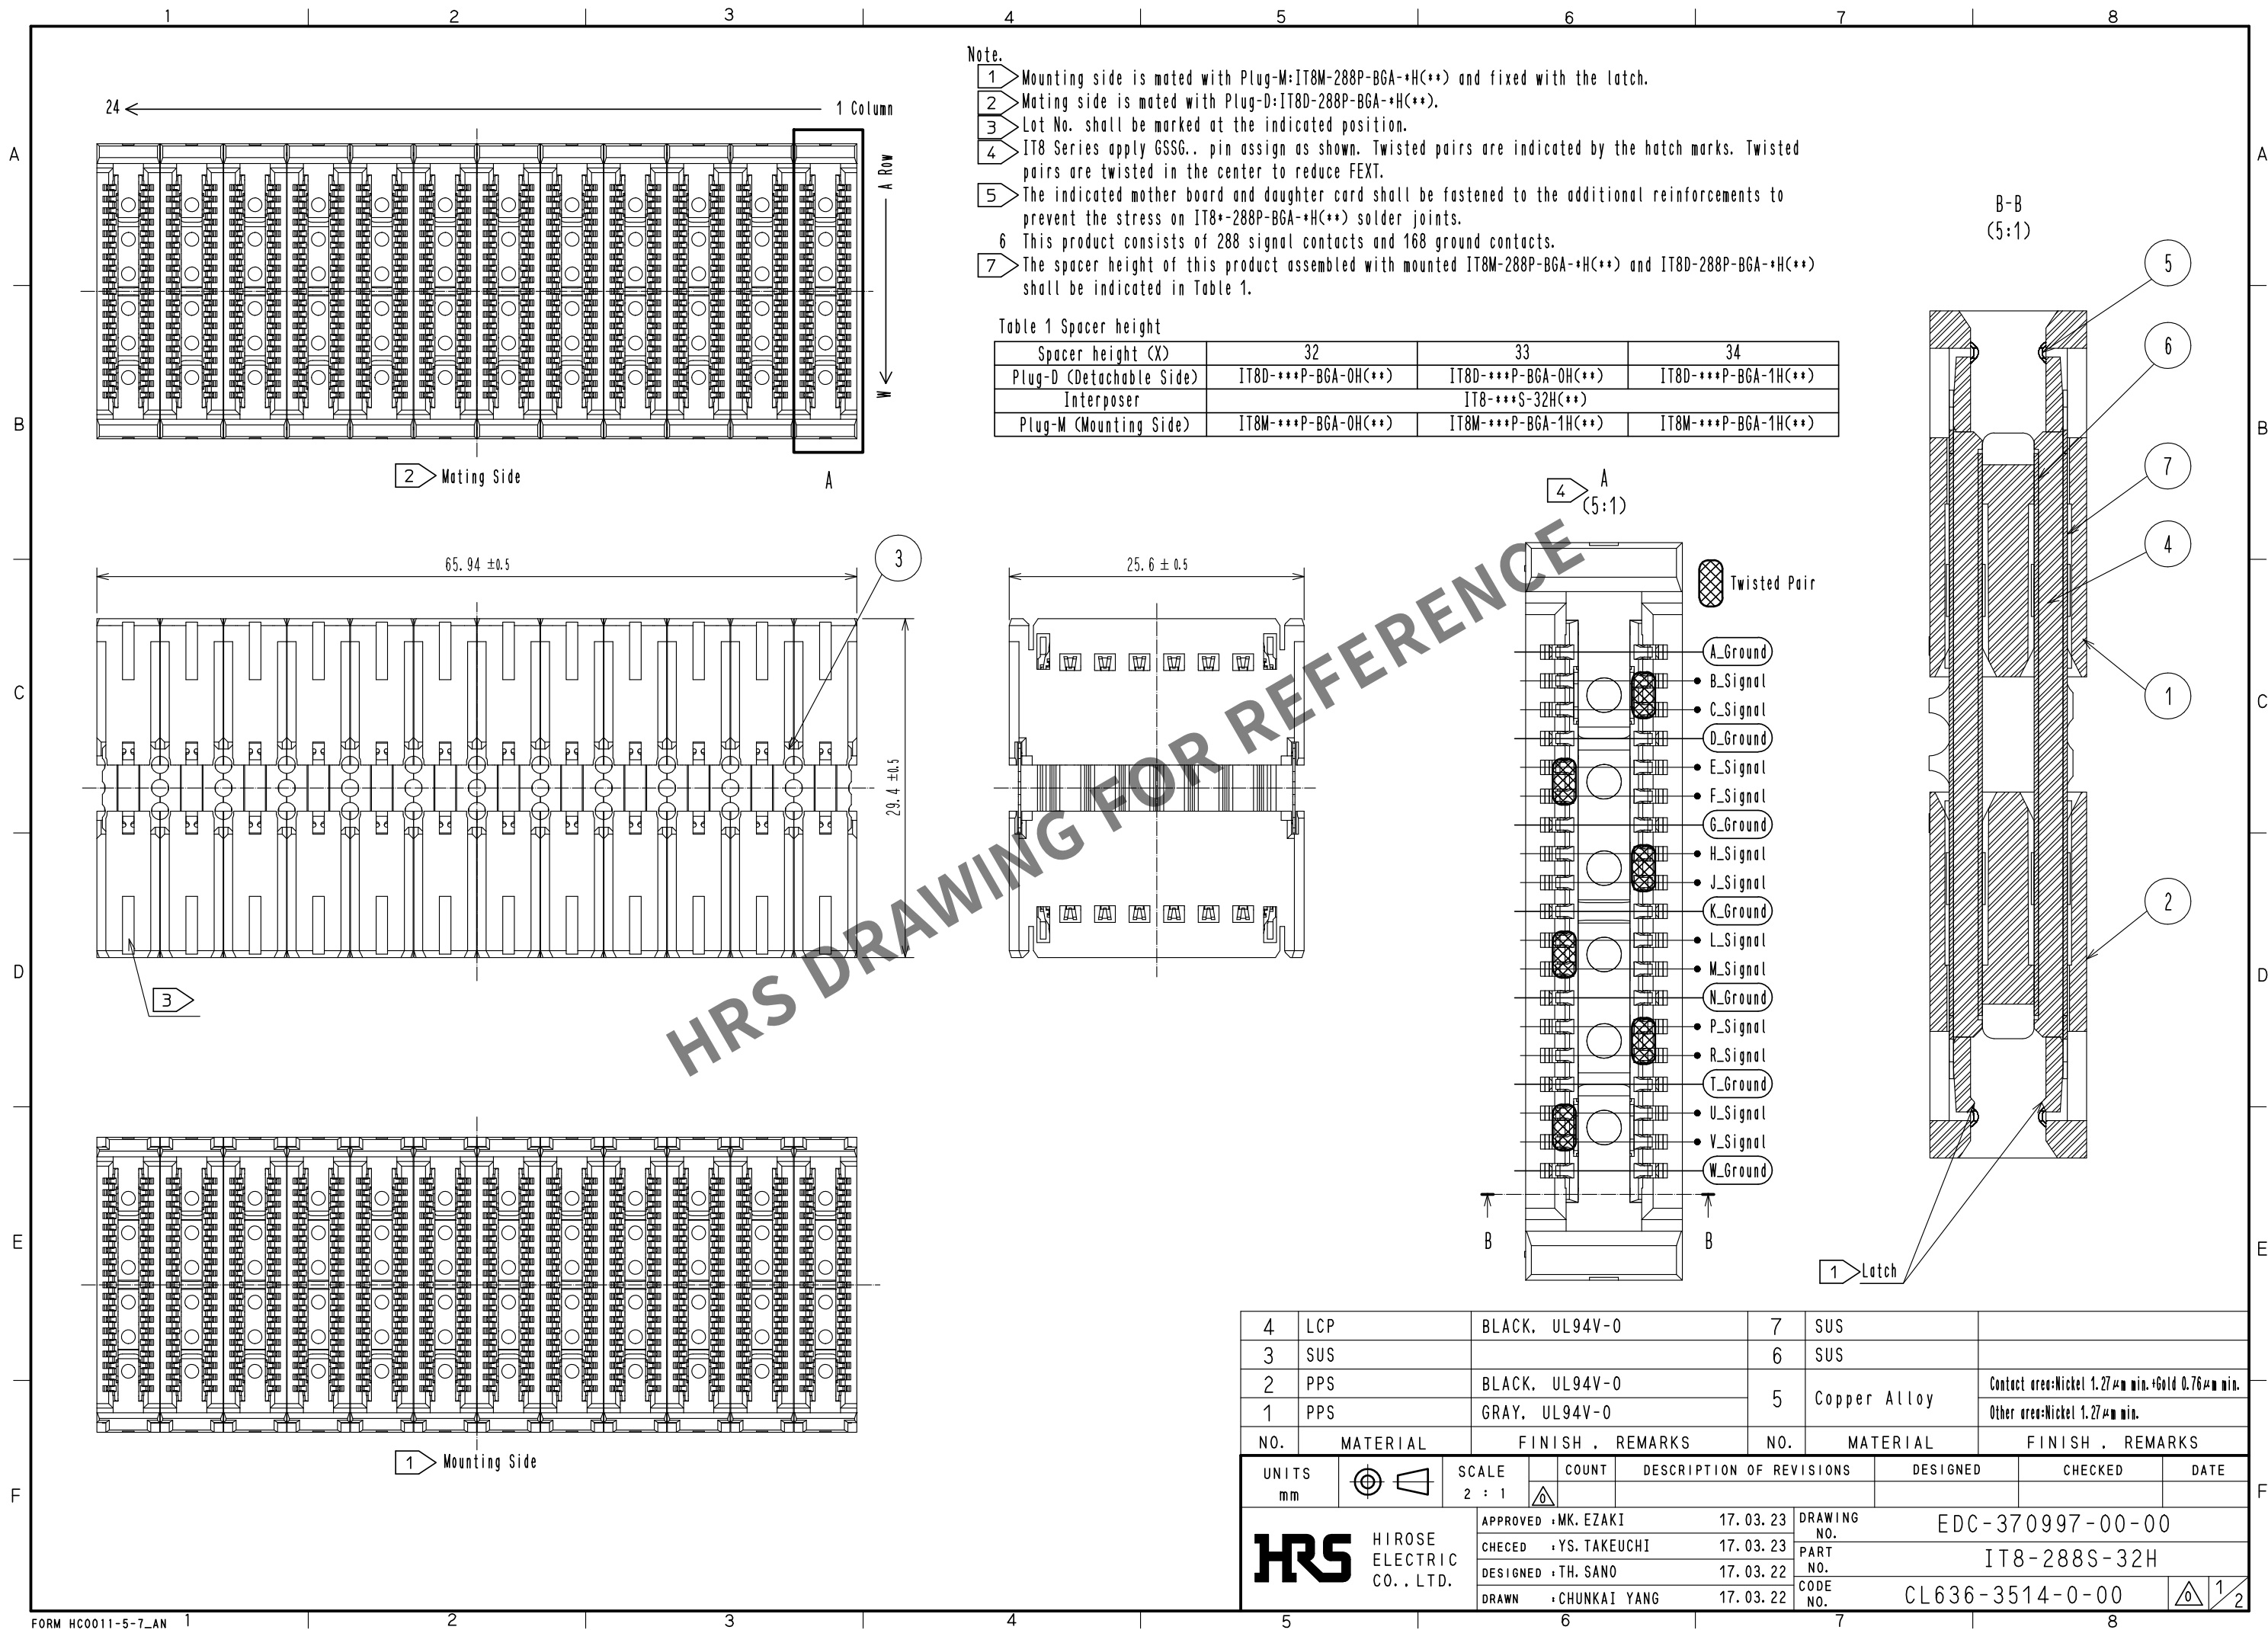

IT8 Assembly Process

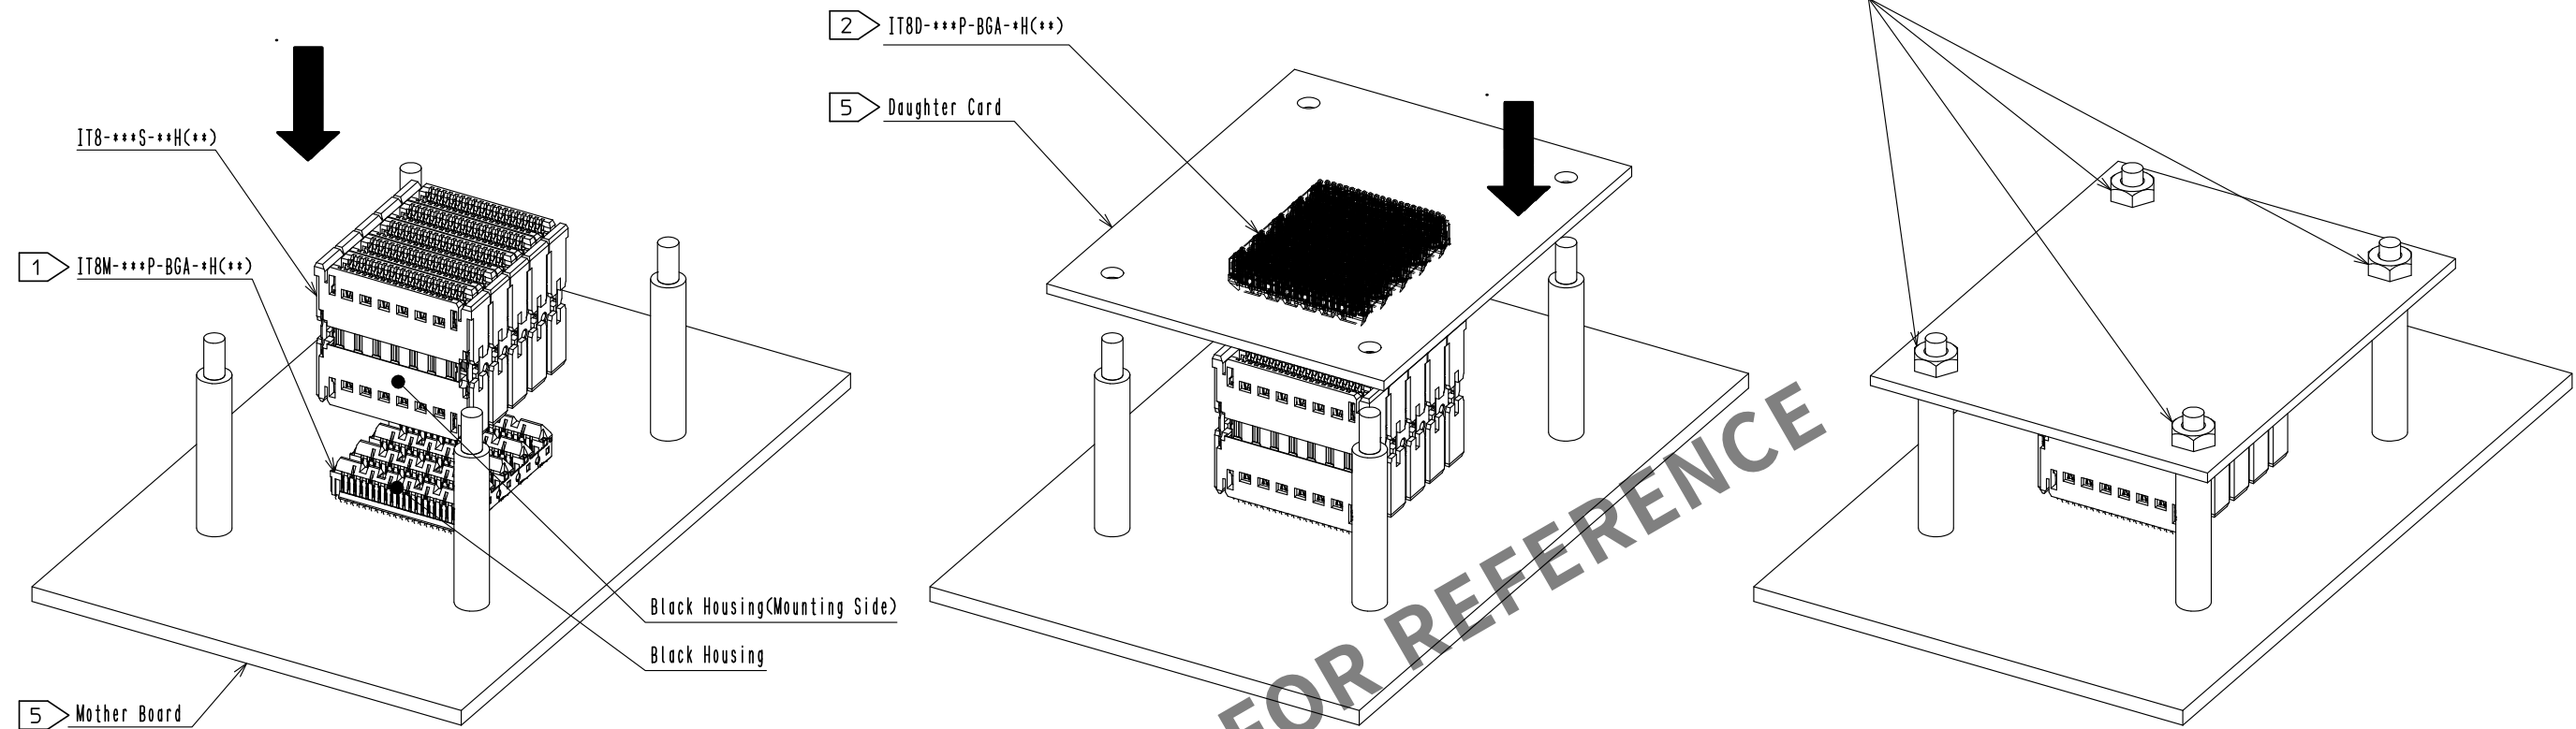


1) Insert mounting side of Interposer(IT8-***S-***H(**)) by pressing on top of Interposer into reflowed Mounting Plug(IT8M-***P-BGA-***H(**)) having black housings.

2) Insert Detachable Plug(IT8D-***P-BGA-***H(**)) having gray housings into mating side of Interposer(IT8-***S-***H(**)).

3) Install and tighten nuts to fix mated Detachable Plug after completion of mating.

IT8 Mated Condition

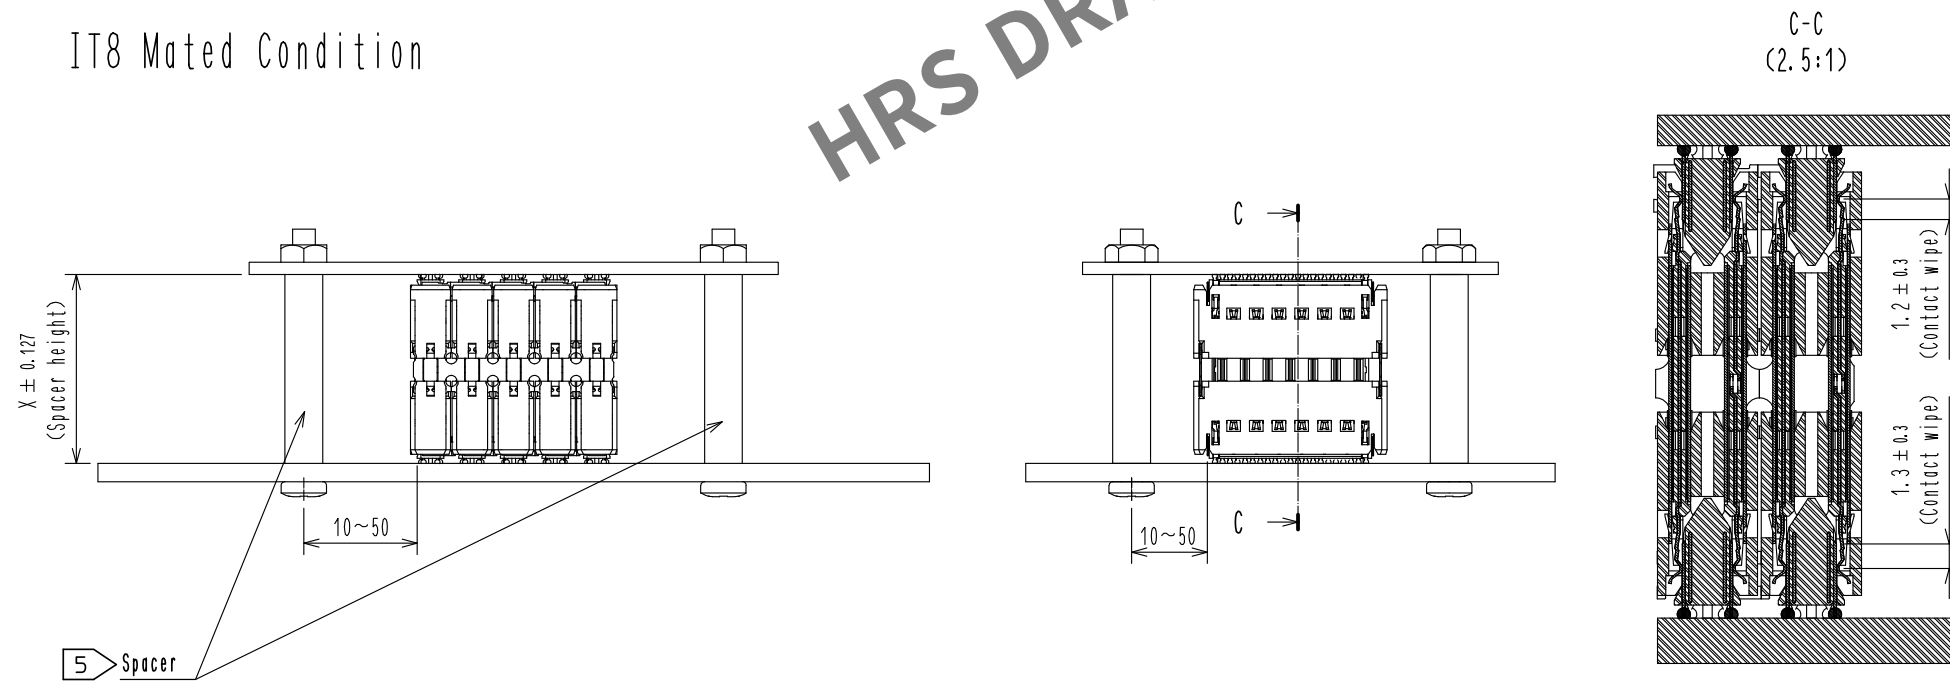

HRS

DRAWING NO.	EDC-370997-00-00
PART NO.	IT8-288S-32H
CODE NO.	CL636-3514-0-00

2/2