



NEXCOM International Co., Ltd.

IoT Automation Solutions Business Group

Fan-less Computer

NISE 105U

User Manual

CONTENTS

Preface

Copyright	iv
Disclaimer	iv
Acknowledgements	iv
Regulatory Compliance Statements	iv
Declaration of Conformity	iv
RoHS Compliance	v
Warranty and RMA	vi
Safety Information	viii
Installation Recommendations	ix
Safety Precautions	x
Technical Support and Assistance	xi
Conventions Used in this Manual	xi
Global Service Contact Information	xii
Package Contents	xiv
Ordering Information	xv

Chapter 1: Product Introduction

Overview	1
Key Features	1
Hardware Specifications	2
Knowing Your NISE 105U	4
Front Panel	4
Rear Panel	5
Mechanical Dimensions	6

Chapter 2: Jumpers and Connectors

Before You Begin	7
Precautions	7
Jumper Settings	8
Locations of the Jumpers and Connectors for NISB 105U	9
NISB 105U	9
Jumpers and DIP Switches	11
AT/ATX Pin Header	11
RTC Switch (Default All Off)	11
Connector Pin Definitions	12
External I/O Interfaces - Front Panel	12
9V – 30V DC Power Input	12
COM1 Port	12
LAN1 and LAN2 Ports	13
HDMI	14
USB 3.0 Port	14
Dual USB 2.0 Port	15
LED Indicators	15
Power Switch	16
External I/O Interfaces - Rear Panel	17
Remote Power Button	17
DVI-I Connector	17
COM2 Port	18
COM3 Port	18
COM4 Port	19

Internal Connectors	20
BIOS Pin Header	20
Line-out Connector	20
Line-in Connector	21
Mic-in Connector	21
SATA Connector	22
SATA Power Connector	22
Port 80 Connector	23
GPIO Pin Header	23
Reset Pin Header	24
PWR_LED/HDD_LED/SMB_BUS/S3/SW_ON/RESET	24
Flash MCU Pin Header	25
SIM Card Slot	25
EDP1 Connector	26
EDP2 Connector	26
Mini-PCIe Slot	27
M.2 Key Connector	28

Chapter 3: System Setup

Removing the Chassis Cover	29
Installing a SO-DIMM Memory Module	31
Installing a Wireless LAN Module (Half-size)	32
Installing a Wireless LAN Module (Full-size)	34
Installing an M.2 Card	36
Installing a SIM Card	38
Installing a SATA Storage Drive	40
Wall Mounting Instructions	42

Chapter 4: BIOS Setup

About BIOS Setup	43
When to Configure the BIOS	43

Default Configuration	44
Entering Setup	44
Legends	44
BIOS Setup Utility	46
Main	46
Advanced	47
Chipset	57
Security	60
Boot	60
Save & Exit	61

Appendix A: Power Consumption62

Appendix B: GPI/O Programming Guide63

Appendix C: Watchdog Timer Setting65

PREFACE

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written consent from NEXCOM International Co., Ltd.

Disclaimer

The information in this document is subject to change without prior notice and does not represent commitment from NEXCOM International Co., Ltd. However, users may update their knowledge of any product in use by constantly checking its manual posted on our website: <http://www.nexcom.com>. NEXCOM shall not be liable for direct, indirect, special, incidental, or consequential damages arising out of the use of any product, nor for any infringements upon the rights of third parties, which may result from such use. Any implied warranties of merchantability or fitness for any particular purpose is also disclaimed.

Acknowledgements

NISE 105U is a trademark of NEXCOM International Co., Ltd. All other product names mentioned herein are registered trademarks of their respective owners.

Regulatory Compliance Statements

This section provides the FCC compliance statement for Class A devices and describes how to keep the system CE compliant.

Declaration of Conformity

FCC

This equipment has been tested and verified to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area (domestic environment) is likely to cause harmful interference, in which case the user will be required to correct the interference (take adequate measures) at their own expense.

CE

The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

RoHS Compliance



NEXCOM RoHS Environmental Policy and Status Update

NEXCOM is a global citizen for building the digital infrastructure. We are committed to providing green products and services, which are compliant with European Union RoHS (Restriction on Use of Hazardous Substance in Electronic Equipment) directive 2011/65/EU, to be your trusted green partner and to protect our environment.

RoHS restricts the use of Lead (Pb) < 0.1% or 1,000ppm, Mercury (Hg) < 0.1% or 1,000ppm, Cadmium (Cd) < 0.01% or 100ppm, Hexavalent Chromium (Cr6+) < 0.1% or 1,000ppm, Polybrominated biphenyls (PBB) < 0.1% or 1,000ppm, and Polybrominated diphenyl Ethers (PBDE) < 0.1% or 1,000ppm.

In order to meet the RoHS compliant directives, NEXCOM has established an engineering and manufacturing task force to implement the introduction of green products. The task force will ensure that we follow the standard NEXCOM development procedure and that all the new RoHS components and new manufacturing processes maintain the highest industry quality levels for which NEXCOM are renowned.

The model selection criteria will be based on market demand. Vendors and suppliers will ensure that all designed components will be RoHS compliant.

How to recognize NEXCOM RoHS Products?

For existing products where there are non-RoHS and RoHS versions, the suffix "(LF)" will be added to the compliant product name.

All new product models launched after January 2013 will be RoHS compliant. They will use the usual NEXCOM naming convention.

Warranty and RMA

NEXCOM Warranty Period

NEXCOM manufactures products that are new or equivalent to new in accordance with industry standard. NEXCOM warrants that products will be free from defect in material and workmanship for 2 years, beginning on the date of invoice by NEXCOM. HCP series products (Blade Server) which are manufactured by NEXCOM are covered by a three year warranty period.

NEXCOM Return Merchandise Authorization (RMA)

- Customers shall enclose the “NEXCOM RMA Service Form” with the returned packages.
- Customers must collect all the information about the problems encountered and note anything abnormal or, print out any on-screen messages, and describe the problems on the “NEXCOM RMA Service Form” for the RMA number apply process.
- Customers can send back the faulty products with or without accessories (manuals, cable, etc.) and any components from the card, such as CPU and RAM. If the components were suspected as part of the problems, please note clearly which components are included. Otherwise, NEXCOM is not responsible for the devices/parts.
- Customers are responsible for the safe packaging of defective products, making sure it is durable enough to be resistant against further damage and deterioration during transportation. In case of damages occurred during transportation, the repair is treated as “Out of Warranty.”
- Any products returned by NEXCOM to other locations besides the customers’ site will bear an extra charge and will be billed to the customer.

Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

Repair Service Charges for Out-of-Warranty Products

NEXCOM will charge for out-of-warranty products in two categories, one is basic diagnostic fee and another is component (product) fee.

System Level

- Component fee: NEXCOM will only charge for main components such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistor, capacitor.
- Items will be replaced with NEXCOM products if the original one cannot be repaired. Ex: motherboard, power supply, etc.
- Replace with 3rd party products if needed.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Board Level

- Component fee: NEXCOM will only charge for main components, such as SMD chip, BGA chip, etc. Passive components will be repaired for free, ex: resistors, capacitors.
- If RMA goods can not be repaired, NEXCOM will return it to the customer without any charge.

Warnings

Read and adhere to all warnings, cautions, and notices in this guide and the documentation supplied with the chassis, power supply, and accessory modules. If the instructions for the chassis and power supply are inconsistent with these instructions or the instructions for accessory modules, contact the supplier to find out how you can ensure that your computer meets safety and regulatory requirements.

Cautions

Electrostatic discharge (ESD) can damage system components. Do the described procedures only at an ESD workstation. If no such station is available, you can provide some ESD protection by wearing an antistatic wrist strap and attaching it to a metal part of the computer chassis.

Safety Information

Before installing and using the device, note the following precautions:

- Read all instructions carefully.
- Do not place the unit on an unstable surface, cart, or stand.
- Follow all warnings and cautions in this manual.
- When replacing parts, ensure that your service technician uses parts specified by the manufacturer.
- Avoid using the system near water, in direct sunlight, or near a heating device.
- The load of the system unit does not solely rely for support from the rackmounts located on the sides. Firm support from the bottom is highly necessary in order to provide balance stability.
- The computer is provided with a battery-powered real-time clock circuit. There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.
- The front of the Equipment requires wiring terminals with the following specifications:

Wire size: 30-12 AWG

Wire Type: copper wire only

Terminal Blocks Torque: 5 lb In.

For supply connections, use wires suitable for at least 75°C.

Attention

This equipment must be installed and removed by trained skilled person in a restricted-access location, as defined by the NEC and EN 62368-1, The standard for safety of audio/video, information and communication technology equipment.

Caution



To reduce the risk of electric shock or energy hazards:

There must be a disconnect device in front of "NISE 105U" to keep the worker or field side maintainer be cautious and aware to close the general power supply before they start to do maintenance. The disconnect device hereby means a 20A circuit-breaker. Power installation must be performed with qualified electrician and followed with National Electrical Code, ANSI/NFPA 70 and Canadian Electrical Code, Part I, CSA C22.1.



Danger of explosion if battery is incorrectly replaced. Replace with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Installation Recommendations

Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.

Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:

- A Philips screwdriver
- A flat-tipped screwdriver
- A grounding strap
- An anti-static pad

Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nose pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.

Safety Precautions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection to protect the equipment from overheating. DO NOT COVER THE OPENINGS.
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. This equipment is not suitable for use in locations where children are likely to be present.
14. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
15. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
16. Do not place heavy objects on the equipment.
17. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
18. CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.

Technical Support and Assistance

1. For the most updated information of NEXCOM products, visit NEXCOM's website at www.nexcom.com.
2. For technical issues that require contacting our technical support team or sales representative, please have the following information ready before calling:
 - Product name and serial number
 - Detailed information of the peripheral devices
 - Detailed information of the installed software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wordings of the error messages

Warning!

1. Handling the unit: Carry the unit with both hands and handle it with care.
2. Maintenance: To keep the unit clean, use only approved cleaning products or clean with a dry cloth.
3. CompactFlash: Turn off the unit's power before inserting or removing a CompactFlash storage card.

Conventions Used in this Manual



Warning:

Information about certain situations, which if not observed, can cause personal injury. This will prevent injury to yourself when performing a task.



Caution:

Information to avoid damaging components or losing data.



Note:

Provides additional information to complete a task easily.



Safety Warning: This equipment is intended for installation in a Restricted Access Location only.

Global Service Contact Information

Headquarters

NEXCOM International Co., Ltd.

9F, No. 920, Chung-Cheng Rd.,
ZhongHe District, New Taipei City, 23586,
Taiwan, R.O.C.

Tel: +886-2-8226-7786

Fax: +886-2-8226-7782

www.nexcom.com

Asia

Taiwan

NexAIoT Co., Ltd.

Taipei Office

13F, No.920, Chung-Cheng Rd.,
ZhongHe District,
New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7796

Fax: +886-2-8226-7792

Email: sales@nexcom.com.tw

www.nexcom.com.tw

NexAIoT Co., Ltd.

Taichung Office

16F, No.250, Sec. 2, Chongde Rd.,
Beitun Dist.,

Taichung City 406, R.O.C.

Tel: +886-4-2249-1179

Fax: +886-4-2249-1172

Email: sales@nexcom.com.tw

www.nexcom.com.tw

NexCOBOT Taiwan Co., Ltd.

13F, No.916, Chung-Cheng Rd.,
ZhongHe District,
New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7796

Fax: +886-2-8226-7792

Email: sales@nexcom.com.tw

www.nexcom.com.tw

GreenBase Technology Corp.

13F, No.922, Chung-Cheng Rd.,
Zhonghe Dist.,
New Taipei City, 23586, Taiwan, R.O.C.

Tel: +886-2-8226-7786

Fax: +886-2-8226-7900

Email: sales@nexcom.com.tw

www.nexcom.com.tw

China

NEXSEC Incorporated

Floor 5, No.4, No.7 fengxian middle Rd.,
(Beike Industrial Park), Haidian District,
Beijing, 100094, China

Tel: +86-10-5704-2680

Fax: +86-10-5704-2681

Email: sales@nexcom.cn

www.nexcom.cn

NEXCOM Shanghai

Room 603/604, Huiyinmingzun Plaza Bldg., 1,
No. 609, Yunlin East Rd.,
Shanghai, 200062, China
Tel: +86-21-5278-5868
Fax: +86-21-3251-6358
Email: sales@nexcom.cn
www.nexcom.cn

NEXCOM Surveillance Technology Corp.

Floor 5, Building C, ZhenHan Industrial Zone,
GanKeng Community, Buji Street,
LongGang District,
ShenZhen, 518112, China
Tel: +86-755-8364-7768
Fax: +86-755-8364-7738
Email: steveyang@nexcom.com.tw
www.nexcom.cn

NEXCOM United System Service

Room 603/604, Huiyinmingzun Plaza Bldg. 1,
No. 609, Yunlin East Rd.,
Shanghai, 200062, China
Tel: +86-21-5278-5868
Fax: +86-21-3251-6358
Email: renwang@nexcom.com.tw
www.nexcom.cn

NEXGOL

1st Floor, Building B4, Electronic 2nd Area,
(Phoenix Lake Industrial Park), Yongchuan Dist.,
Chongqing City, 402160, China
Tel: +86-23-4960-9080
Fax: +86-23-4966-5855
Email: sales@nexcobot.com
www.nexgol.com/NexGoL

Beijing NexGemo Technology Co.,Ltd.

5th Floor, Gemotech Building, No.1, Development Rd.,
Changping International Information Industry Base,
Changping District,
Beijing, 102206, China
Tel: +86-10-8190-9399
Fax: +86-10-8190-9456

Japan**NEXCOM Japan**

9F, Tamachi Hara Bldg.,
4-11-5, Shiba Minato-ku,
Tokyo, 108-0014, Japan
Tel: +81-3-5419-7830
Fax: +81-3-5419-7832
Email: sales@nexcom-jp.com
www.nexcom-jp.com

Europe**United Kingdom****NEXCOM EUROPE**

10 Vincent Avenue,
Crownhill Business Centre,
Milton Keynes, Buckinghamshire
MK8 0AB, United Kingdom
Tel: +44-1908-267121
Fax: +44-1908-262042
Email: sales.uk@nexcom.eu
www.nexcom.eu

America**USA****NEXCOM USA**

2883 Bayview Drive,
Fremont CA 94538, USA
Tel: +1-510-656-2248
Fax: +1-510-656-2158
Email: sales@nexcom.com
www.nexcom.com

Package Contents

Before continuing, verify that the NISE 105U package that you received is complete. Your package should have all the items listed in the following table.

Item	Part Number	Description	Qty
1	4NCPF00204X00	Terminal Blocks 2P Phoenix Contact:1777989	1
2	4NCPM00203X00	Terminal Blocks 2P Phoenix Contact:1803578	1
3	50311F0144X00	I Head Screw LONG FEI:	1
4	50311F0295X00	Flat Head Screw LONG FEI:F2x4 NYLOK NIGP	1
5	50311F0326X00	Flat Head Screw LONG FEI:F3x5 NYLOK NI+Heat Treatment	4
6	50311F0330X00	Round Head Screw LONG FEI:P2x3 ISO+NYLON	2
7	5060900226X00	Mini PCIe Bracket CHYUAN-JYH	1
8	6012200052X00	PE Zipper Bag #8	1
9	6012200053X00	PE Zipper Bag #3	2
10	60177A0692X00	NISE 105U Quick Reference Guide VER:A SIZE:A4	1
11	602DCD1599X00	NISE 105U DVD Driver VER:1.0	1
12	7800000078X00	DVI-I to VGA Adapter for NISE 104 ST:ADDH27B	1

Ordering Information

The following information below provides ordering information for NISE 105U.

NISE 105U System (P/N: 10J00010522X0)

Intel® Celeron® processor J1900 Quad Core, 2.42GHz Fanless system

24V, 60W AC/DC power adapter w/o power cord (P/N: 7400060032X00)

CHAPTER 1: PRODUCT INTRODUCTION

Overview



Key Features

- Onboard Intel® Celeron® processor J1900 quad core, 2.42GHz
- Dual independent display from DVI-I and HDMI
- 2 x Intel® I210AT GbE LAN ports; support WoL, teaming and PXE
- 2 x USB 2.0, 1 x USB 3.0
- 4 x COM ports (COM1 & COM2 with RS232/422/485, jumper-free setting)
- 1 x Optional interface for optional Wi-Fi/3.5G
- Support -5 to 55 degrees Celsius operating temperature
- Support 9-30VDC input

Hardware Specifications

CPU Support

- Onboard Intel® Celeron® processor J1900 quad core, 2.42GHz

Main Memory

- 1 x DDR3L SO-DIMM socket, supports DDR3L 1066/1333 8GB RAM max., un-buffered and non-ECC

Display Option

- Dual independent display
 - HDMI and DVI-D
 - HDMI and VGA (via DVI-I to VGA converter)

I/O Interface - Front

- ATX power on/off switch
- 1 x Power status/1 x HDD access/1 x battery low/1 x programming LEDs
- 2 x Intel® I210AT GbE LAN ports; support WoL, teaming and PXE
- 1 x HDMI
- 1 x USB 3.0 (900mA per each)
- 2 x USB 2.0 (500mA per each)
- 1 x DB9 for COM1, supports RS232/422/485 with auto flow control
 - Jumper-free setting on RS232/422/485
- 1 x 2-pin DC input, supports +9 to 30VDC input

I/O Interface - Rear

- 1 x Remote power on/off switch
- DVI-I display output
- 1 x DB9 for COM2, supports RS232/422/485 with auto flow control
 - Jumper-free setting on RS232/422/485
- 2 x DB9 for COM3 & COM4, support RS232 only

- 1 x Mic-in & 1 x Line-out
- 2 x Antenna holes for optional Wi-Fi/3.5G antenna
- 1 x Optional I/F for optional mini-PCIe Wi-Fi/3.5G

I/O Interface - Internal

- 4 x GPI and 4 GPO (5V, TTL type)

Storage Device

- 1 x M.2 supports B & B+M key module
- 1 x 2.5" HDD (SATA 2.0)

Expansion Slot

- 1 x mini-PCIe socket for optional Wi-Fi/3.5G

Power Requirements

- Power input: +9VDC to +30VDC
- 1 x Optional 24V, 60W power adapter

Support OS

- Windows 7, 32-bit/64-bit
- Windows Embedded Standard 7, 32-bit/64-bit
- Windows Embedded Compact 7, 32-bit
- Windows 10 IoT Enterprise, 64-bit
- Linux Kernel version 3.8.0

Dimensions

- 185mm (W) x 131mm (D) x 54mm (H) without wall-mount bracket

Construction

- Aluminum and metal chassis with fanless design

Environment


- Operating temperature
Ambient with air flow: -5°C to 55°C
(according to IEC60068-2-1, IEC60068-2-2, IEC60068-2-14)
- Storage temperature: -30°C to 85°C
- Relative humidity: 10% to 95% (non-condensing)
- Shock protection
 - HDD: 20G, half sine, 11ms, IEC60068-2-27
 - M.2: 50G, half sine, 11ms, IEC60068-2-27
- Vibration protection w/HDD condition
 - Random: 0.5Grms @ 5~500Hz, IEC60068-2-64
 - Sinusoidal: 0.5Grms @ 5~500Hz, IEC60068-2-6
- Vibration protection w/M.2 & SSD condition
 - Random: 2Grms @ 5~500Hz, IEC60068-2-64
 - Sinusoidal: 2Grms @ 5~500Hz, IEC60068-2-6

Certifications

- CE
- FCC Class A

Knowing Your NISE 105U

Front Panel

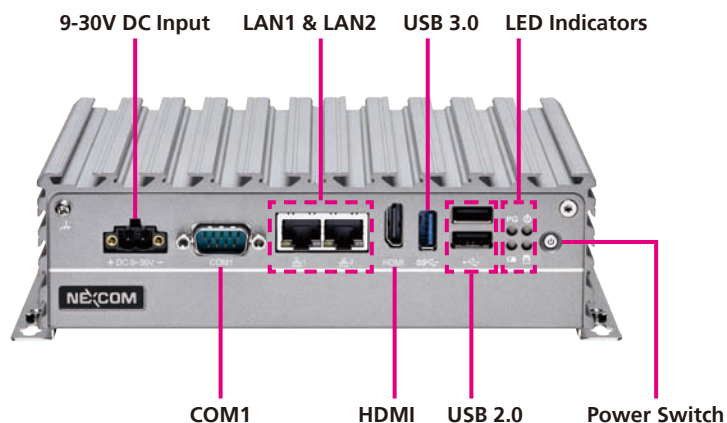

9-30V DC Input

Used to plug a DC power cord.

COM1

DB9 port used to connect RS232/422/485 compatible devices.

LAN1 & LAN2

Used to connect the system to a local area network.

HDMI Port

Used to connect a high-definition display.

USB 3.0 & USB 2.0

Used to connect the system with USB 3.0/2.0 devices.


LED Indicators

Indicates the power status, RTC battery status, storage activity and GPO activity of the system.

Power Switch

Press to power-on or power-off the system.

Rear Panel

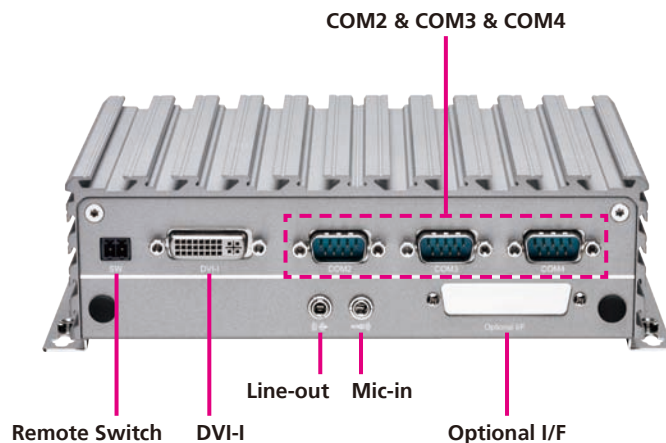

Remote Switch

Used to connect a remote to power on/off the system.

DVI-I

Used to connect a DVI-I interface monitor.

Line-out

Used to connect a headphone or a speaker.

Mic-in

Used to connect an external microphone.

COM2

DB9 port used to connect RS232/422/485 compatible devices.


COM3 & COM4

Two DB9 ports used to connect RS232 compatible devices.

Optional I/F

Expansion slot for optional function output or module interface use.

Mechanical Dimensions

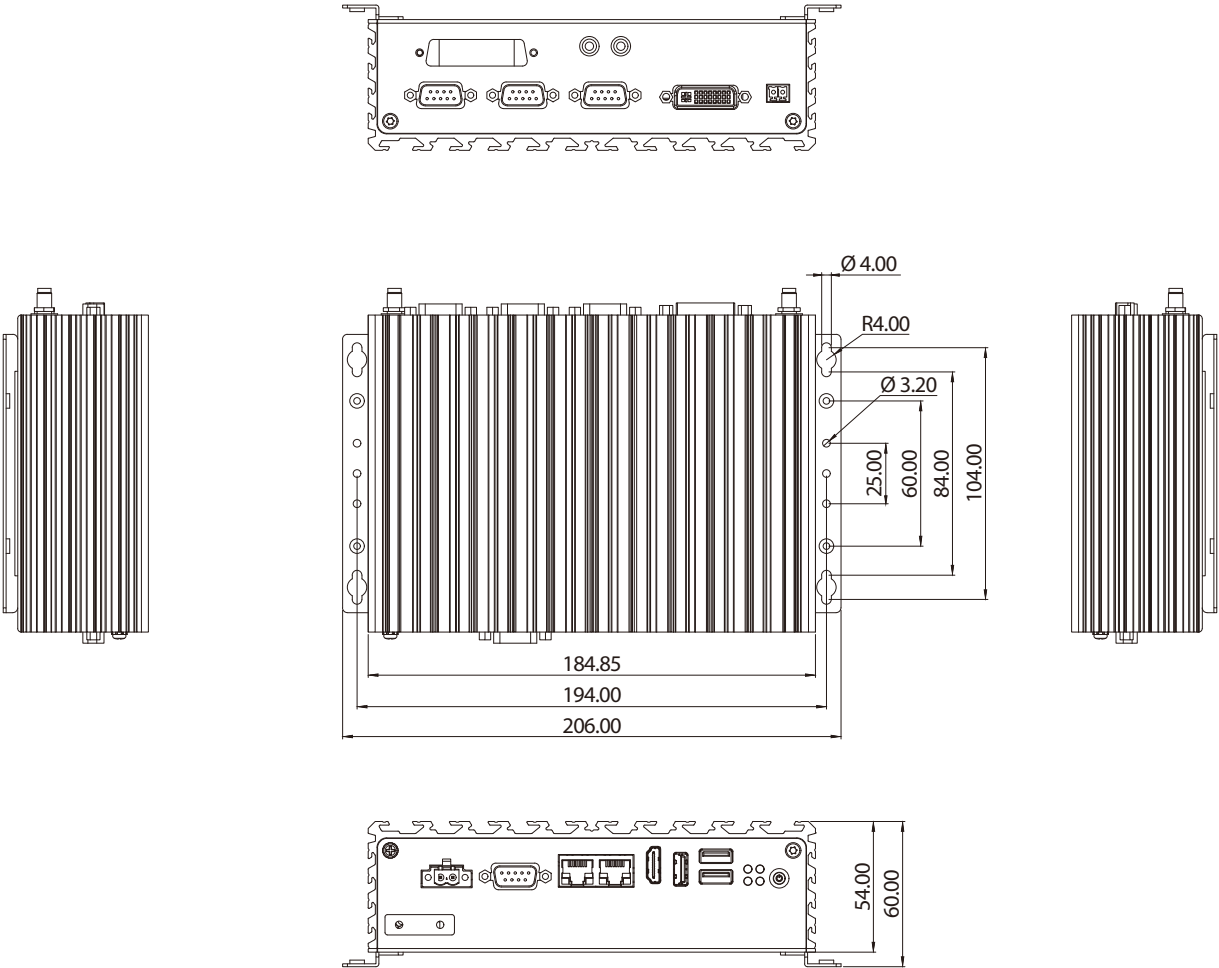

CHAPTER 2: JUMPERS AND CONNECTORS

This chapter describes how to set the jumpers and connectors on the NISE 105U motherboard.

Before You Begin

- Ensure you have a stable, clean working environment. Dust and dirt can get into components and cause a malfunction. Use containers to keep small components separated.
- Adequate lighting and proper tools can prevent you from accidentally damaging the internal components. Most of the procedures that follow require only a few simple tools, including the following:
 - A Philips screwdriver
 - A flat-tipped screwdriver
 - A set of jewelers screwdrivers
 - A grounding strap
 - An anti-static pad
- Using your fingers can disconnect most of the connections. It is recommended that you do not use needle-nosed pliers to disconnect connections as these can damage the soft metal or plastic parts of the connectors.
- Before working on internal components, make sure that the power is off. Ground yourself before touching any internal components, by touching a metal object. Static electricity can damage many of the electronic components. Humid environments tend to have less static electricity than

dry environments. A grounding strap is warranted whenever danger of static electricity exists.

Precautions

Computer components and electronic circuit boards can be damaged by discharges of static electricity. Working on computers that are still connected to a power supply can be extremely dangerous.

Follow the guidelines below to avoid damage to your computer or yourself:


- Always disconnect the unit from the power outlet whenever you are working inside the case.
- If possible, wear a grounded wrist strap when you are working inside the computer case. Alternatively, discharge any static electricity by touching the bare metal chassis of the unit case, or the bare metal body of any other grounded appliance.
- Hold electronic circuit boards by the edges only. Do not touch the components on the board unless it is necessary to do so. Don't flex or stress the circuit board.
- Leave all components inside the static-proof packaging that they shipped with until they are ready for installation.
- Use correct screws and do not over tighten screws.

Jumper Settings


A jumper is the simplest kind of electric switch. It consists of two metal pins and a cap. When setting the jumpers, ensure that the jumper caps are placed on the correct pins. When the jumper cap is placed on both pins, the jumper is short. If you remove the jumper cap, or place the jumper cap on just one pin, the jumper is open.

Refer to the illustrations below for examples of what the 2-pin and 3-pin jumpers look like when they are short (on) and open (off).

Two-Pin Jumpers: Open (Left) and Short (Right)

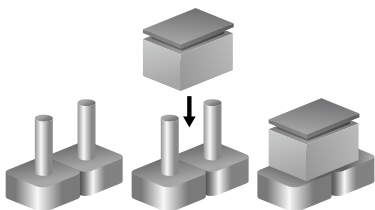


Three-Pin Jumpers: Pins 1 and 2 are Short

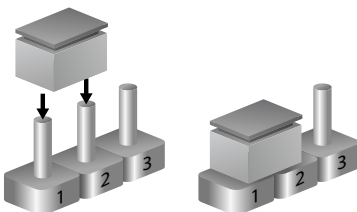


Locations of the Jumpers and Connectors for NISB 105

NISB 105U

The following figures are the top and bottom view of the NISB 105U main board which is the main board used in NISE 105U. It shows the locations of the jumpers and connectors.

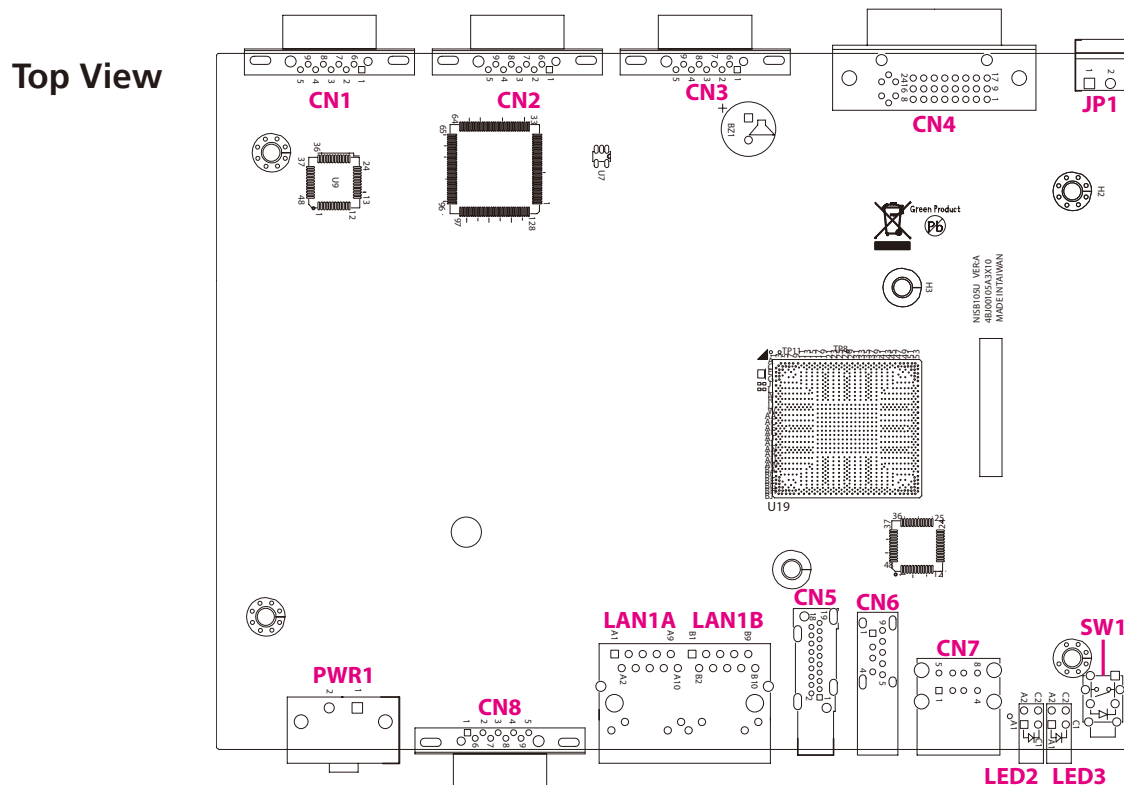

Bottom View

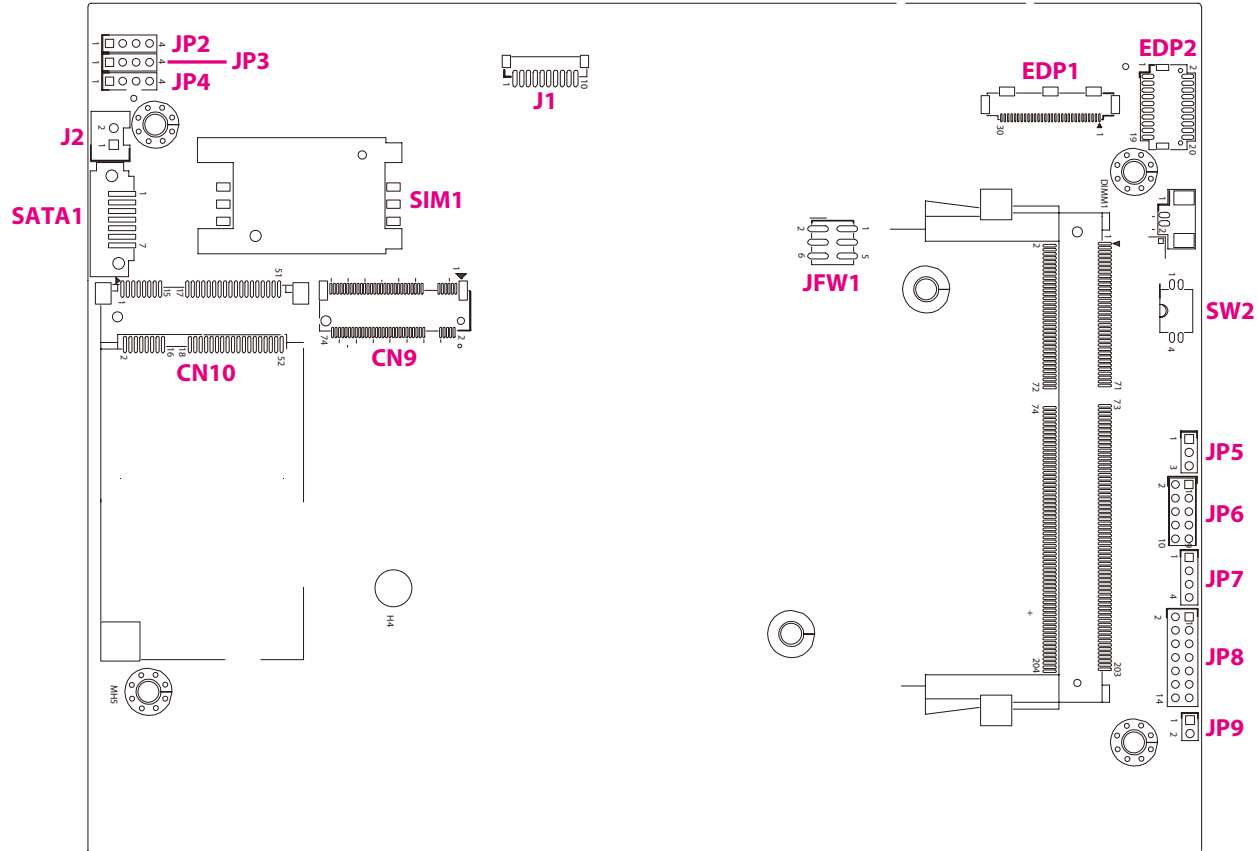

Jumpers and DIP Switches

AT/ATX Pin Header


Connector type: 1x3 3-pin header, 2.0mm pitch
Connector location: JP5



Pin	Function
1-2	AT
2-3*	ATX

RTC Switch (Default All Off)

Connector type: 2x2 DIP switch
Connector location: SW2



Pin	Function
1	SRTC_TEST#
2	RTC_TEST#
3	GND
4	GND

Connector Pin Definitions

External I/O Interfaces - Front Panel

9V – 30V DC Power Input


Connector type: 2-pin terminal block
Connector location: PWR1



Pin	Definition
1	VIN_1_GND
2	VIN_1

COM1 Port

Connector type: DB-9 port, 9-pin D-Sub
Connector location: CN8




RS232		RS485		RS422	
Pin	Definition	Pin	Definition	Pin	Definition
1	SP1_DCD	1	SP1_DATA-	1	SP1_TX-
2	SP1_RXD	2	SP1_DATA+	2	SP1_TX+
3	SP1_TXD	3	NC	3	SP1_RX+
4	SP1_DTR	4	NC	4	SP1_RX-
5	GND	5	GND	5	GND
6	SP1_DSR	6	NC	6	SP1_RTS-
7	SP1_RTS	7	NC	7	SP1_RTS+
8	SP1_CTS	8	NC	8	SP1_CTS+
9	SP1_RI	9	NC	9	SP1_CTS-

LAN1 and LAN2 Ports

Connector type: Dual RJ45 port with LEDs

Connector location: LAN1A (LAN1) and LAN1B (LAN2)

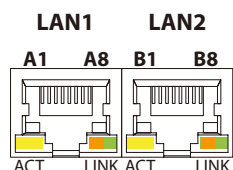

Act	Status
Flashing Yellow	Data activity
Off	No activity

Link	Status
Steady Green	1G network link
Steady Orange	100Mbps network link
Off	No link

LAN1

Pin	Definition	Pin	Definition
A1	LAN1_MDI0P	A2	LAN1_MDI0N
A3	LAN1_MDI1P	A4	LAN1_MDI1N
A5	LAN1_MDI2P	A6	LAN1_MDI2N
A7	LAN1_MDI3P	A8	LAN1_MDI3N
A9	V1P5_LAN	A10	GND
A11	LAN1_LINK100#	A12	LAN1_LINK1G#
A13	LAN1_LED_ACT#	A14	3VSB
MH1	CHASSIS_GND		


LAN2

Pin	Definition	Pin	Definition
B1	LAN2_MDI0P	B2	LAN2_MDI0N
B3	LAN2_MDI1P	B4	LAN2_MDI1N
B5	LAN2_MDI2P	B6	LAN2_MDI2N
B7	LAN2_MDI3P	B8	LAN2_MDI3N
B9	V1P5_LAN2	B10	GND
B11	LAN2_LINK100#	B12	LAN2_LINK1G#
B13	LAN2_LED_ACT#	B14	3VSB
MH2	CHASSIS_GND		

HDMI

Connector type: HDMI port

Connector location: CN5

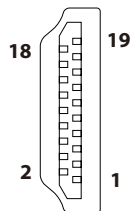


Pin	Definition	Pin	Definition
1	HDMI_DATA2_P	2	GND
3	HDMI_DATA2_N	4	HDMI_DATA1_P
5	GND	6	HDMI_DATA1_N
7	HDMI_DATA0_P	8	GND
9	HDMI_DATA0_N	10	HDMI_CLK_P
11	GND	12	HDMI_CLK_N
13	NC	14	NC
15	HDMI_CTRL_CLK	16	HDMI_CTRL_DATA
17	GND	18	VCC5_HDMI
19	HDMI_HPD_R		
MH1	CHASSIS_GND	MH2	CHASSIS_GND
MH3	CHASSIS_GND	MH4	CHASSIS_GND

USB 3.0 Port

Connector type: USB 3.0 port, Type A


Connector location: CN6

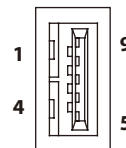

Pin	Definition	Pin	Definition
1	USB3_5V	2	HUBUSB_DM1_C
3	HUBUSB_DP1_C	4	GND
5	USB3_RX0_N_C	6	USB3_RX0_P_C
7	GND	8	USB3_TX0_N_C
9	USB3_TX0_P_C	10	P5V_OC01_C
11	USB_1N_C	12	USB_1P_C
13	GND		
MH1	FRONT_GND	MH2	FRONT_GND
MH3	FRONT_GND	MH4	NC

Dual USB 2.0 Port

Connector type: USB 2.0 ports, Type A
Connector location: CN7

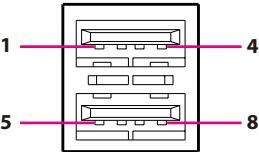

Pin	Definition	Pin	Definition
1	USB2_5V	2	USB_0N_C
3	USB_0P_C	4	GND
5	USB2_5V	6	USB_1N_C
7	USB_1P_C	8	GND
MH1	FRONT_GND	MH2	FRONT_GND
MH3	FRONT_GND	MH4	FRONT_GND

LED Indicators

Connector location: LED2 and LED3

GPIO/Battery LED (LED2)



Power/HDD LED (LED3)



LED2

Pin	Definition
A1	VCC5
A2	BAT_LED
C1	GND
C2	GPIO_LED_N

LED3

Pin	Definition
A1	VCC5
A2	VCC5
C1	HDD_LED_N
C2	PWR_LED_N



Power Switch

Connector location: SW1



Pin	Definition	Pin	Definition
1	GND	2	3VSB
3	3VSB	4	GND
A1	PWRLED_N	C1	PWRLED_P
MH1	NC	MH2	NC

External I/O Interfaces - Rear Panel

Remote Power Button


Connector type: 2-pin switch
Connector location: JP1



Pin	Definition
1	GND
2	REMO_PWRBTN#

DVI-I Connector


Connector type: 24-pin D-Sub, 2.0mm-M-180 (DVI)
Connector location: CN4



Pin	Definition	Pin	Definition
1	TX2-	2	TX2+
3	GND	4	NC
5	NC	6	DDC_CLK
7	DDC_DATA	8	VSYNC_VGA
9	TX1-	10	TX1+
11	GND	12	NC
13	NC	14	DVI_VCC(+5V)
15	GND	16	HotPlugDet
17	TX0-	18	TX0+
19	GND	20	DDCCLK_VGA
21	DDCDATA_VGA	22	GND
23	TXCLK+	24	TXCLK-
C1	RED	C2	GREEN
C3	BLUE	C4	HSYNC_VGA
C5A	VGADET	C5B	GND
MH1	CHASSIS_GND	MH2	CHASSIS_GND

COM2 Port


Connector type: DB-9 port, 9-pin D-Sub
Connector location: CN3



RS232		RS485		RS422	
Pin	Definition	Pin	Definition	Pin	Definition
1	SP2_DCD	1	SP2_DATA-	1	SP2_TX-
2	SP2_RXD	2	SP2_DATA+	2	SP2_TX+
3	SP2_TXD	3	NC	3	SP2_RX+
4	SP2_DTR	4	NC	4	SP2_RX-
5	GND	5	GND	5	GND
6	SP2_DSR	6	NC	6	SP2_RTS-
7	SP2_RTS	7	NC	7	SP2_RTS+
8	SP2_CTS	8	NC	8	SP2_CTS+
9	SP2_RI	9	NC	9	SP2_CTS-

COM3 Port

Connector type: DB-9 port, 9-pin D-Sub
Connector location: CN2




RS232			
Pin	Definition	Pin	Definition
1	SP3_DCD	2	SP3_RXD
3	SP3_TXD	4	SP3_DTR
5	GND	6	SP3_DSR
7	SP3_RTS	8	SP3_CTS
9	SP3_RI		



COM4 Port

Connector type: DB-9 port, 9-pin D-Sub
Connector location: CN1




RS232			
Pin	Definition	Pin	Definition
1	SP4_DCD	2	SP4_RXD
3	SP4_TXD	4	SP4_DTR
5	GND	6	SP4_DSR
7	SP4_RTS	8	SP4_CTS
9	SP4_RI		



Internal Connectors

BIOS Pin Header

Connector type: 2x3 6-pin header, 2.0mm
Connector location: JFW1



Pin	Definition	Pin	Definition
1	VCC	2	GND
3	CS#0	4	CLK
5	SO	6	SI

Line-out Connector

Connector type: 1x4 4-pin header, 2.0mm pitch
Connector location: JP2



Pin	Definition
1	OUT_L
2	NC
3	AGND
4	OUT_R



Line-in Connector

Connector type: 1x4 4-pin header, 2.0mm pitch
Connector location: JP3



Pin	Definition
1	FLIN_L
2	JD
3	GND
4	FLIN_R

Mic-in Connector

Connector type: 1x4 4-pin header, 2.0mm pitch
Connector location: JP4




Pin	Definition
1	MIC1_L3
2	NC
3	MIC_GND
4	MIC1_R3





SATA Connector

Connector type: Standard Serial ATA 7P (1.27mm, SATA-M-180)
Connector location: SATA1



Pin	Definition	Pin	Definition
1	GND	2	SATA_TXP0_C
3	SATA_TXN0_C	4	GND
5	SATA_RXN0_C	6	SATA_RXP0_C
7	GND		

SATA Power Connector

Connector type: 1x2 2-pin header, JST 2.5mm pitch
Connector location: J2



Pin	Definition
1	VCC5
2	GND



Port 80 Connector


Connector type: 10-pin header, 1.0mm pitch
Connector location: J1



Pin	Definition	Pin	Definition
1	GND	2	PLTRST_3P3#
3	LPC_CLK0_DEBUG	4	LPC_FRAME#
5	LPC_AD3	6	LPC_AD2
7	LPC_AD1	8	LPC_ADO
9	VCC3	10	VCC3
MH1	GND	MH2	GND

GPIO Pin Header

Connector type: 2x5 10-pin header, 2.0mm pitch
Connector location: JP6



Pin	Definition	Pin	Definition
1	VCC5	2	GND
3	ICH_GPO0_OUT	4	ICH_GPIO_IN
5	ICH_GPO1_OUT	6	ICH_GPI1_IN
7	ICH_GPO2_OUT	8	ICH_GPI2_IN
9	ICH_GPO3_OUT	10	ICH_GPI3_IN

Reset Pin Header


Connector type: 1x2 2-pin header, 2.0mm pitch
Connector location: JP9



Pin	Definition
1	PM_RESET#_J
2	GND

PWR_LED/HDD_LED/SMB_BUS/S3/SW_ON/RESET

Connector type: 2x7 14-pin header, 2.0mm pitch
Connector location: JP8



Pin	Definition	Pin	Definition
1	PWR_LED_N	2	POWER_LED_PWR
3	HDD_LED_N	4	HDD_LED_PWR
5	SMB_CLK	6	SMB_DATA
7	3VSB	8	GND
9	SLP_S3#	10	PSON
11	PBT_SW	12	GND
13	PM_RESET#_J	14	GND

Flash MCU Pin Header


Connector type: 1x4 4-pin header, 2.0mm pitch
Connector location: JP7



Pin	Definition
1	3VSB
2	SBW_TCK
3	SBW_TDIO
4	GND

SIM Card Slot

Connector location: SIM1

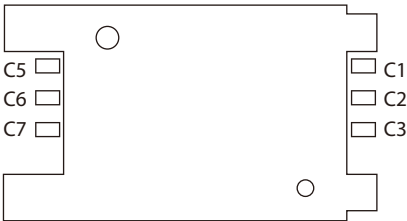


Pin	Definition	Pin	Definition
C 1	UIM_PWR	C2	UIM_RESET
C3	UIM_CLK	C5	GND
C6	UIM_VPP	C7	UIM_DATA

EDP1 Connector

Connector type: 1x30 30-pin header, 0.5mm pitch

Connector location: EDP1

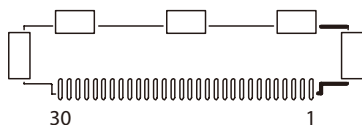


Pin	Definition	Pin	Definition
1	EDP_TX0N	2	EDP_TX0P
3	GND	4	EDP_TX1N
5	EDP_TX1P	6	GND
7	EDP_AUXP	8	EDP_AUXN
9	GND	10	EDP_SMB_CLK
11	EDP_SMB_DAT	12	GND
13	EDP_HPD	14	EDP_PWM_CTRL
15	EDP_BKL_EN	16	PLTRST
17	VCC3	18	VCC3
19	VCC3	20	GND
21	GND	22	VCC5
23	VCC5	24	VCC5
25	GND	26	GND
27	EDP_12V	28	EDP_12V
29	EDP_12V	30	GND
MH1	GND	MH2	GND
MH3	GND	MH4	GND
MH5	GND		

EDP2 Connector

Connector type: 2x10 20-pin header, 1.0mm pitch


Connector location: EDP2

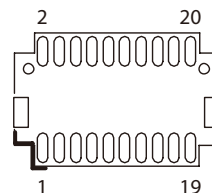

Pin	Definition	Pin	Definition
1	HUBUSB_DP3	2	GND
3	HUBUSB_DN3	4	HUB_OC34
5	GND	6	USB_DP3_GPIO
7	HUBUSB_DP4	8	USB_DP4_GPIO
9	HUBUSB_DN4	10	GND
11	GND	12	3VSB
13	VCC3	14	3VSB
15	VCC5	16	5VSB
17	EDP_12v	18	5VSB
19	EDP_12v	20	GND
NH1	NA	NH2	NA
MH1	GND	MH2	GND

Mini-PCIe Slot

Connector location: CN10

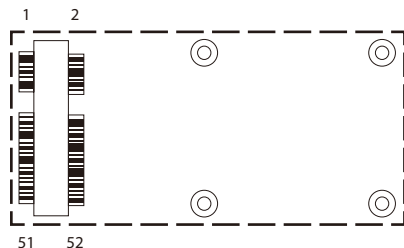

Pin	Definition	Pin	Definition
1	PCIEWAKE#	2	+3VSB
3	N/A	4	GND
5	N/A	6	+1.5V
7	CLKREQ#	8	UIM_PWR
9	GND	10	UIM_DATA
11	REF CLK-	12	UIM_CLK
13	REF CLK+	14	UIM_RESET
15	GND	16	UIM_VPP
17	N/A	18	GND
19	N/A	20	Disable#
21	GND	22	RST#
23	PCIERX0-	24	+3VSB
25	PCIERX0+	26	GND

Pin	Definition	Pin	Definition
27	GND	28	+1.5V
29	GND	30	SMBCLK
31	PCIETX0-	32	SMBDATA
33	PCIETX0+	34	GND
35	GND	36	USB_D-
37	GND	38	USB_D+
39	+3VSB	40	GND
41	+3VSB	42	N/A
43	GND	44	N/A
45	N/A	46	N/A
47	N/A	48	+1.5V
49	N/A	50	GND
51	N/A	52	+3VSB

M.2 Key Connector

Connector location: CN9



Pin	Definition	Pin	Definition
1	GND	2	3VSB
3	GND	4	3VSB
5	GND	6	NA
7	HUBUSB_DP2	8	N36291448
9	HUBUSB_DM2	10	NA
11	N36291047	20	NA
21	NA	22	NA
23	NA	24	NA
25	NA	26	NA
27	GND	28	NA
29	NA	30	NA
31	NA	32	NA
33	GND	34	NA
35	NA	36	NA
37	NA	38	NA
39	GND	40	NA
41	SATA_RXP1_C	42	NA
43	SATA_RXN1_C	44	NA
45	GND	46	NA

Pin	Definition	Pin	Definition
47	SATA_TXN1_C	48	NA
49	SATA_TXP1_C	50	PLTRST_3P3#
51	GND	52	NA
53	NA	54	
55	NA	56	NA
57	GND	58	NA
59	NA	60	NA
61	NA	62	NA
63	NA	64	NA
65	NA	66	NA
67	M.2_RESET	68	M2_SUSCLK
69	PCIE_mSATA_SEL	70	3VSB
71	GND	72	3VSB
73	GND	74	3VSB
75	USB3_OTHER_SEL		
MH1	GND	MH2	GND
NH1	NA	NH2	NA

CHAPTER 3: SYSTEM SETUP

Removing the Chassis Cover



Prior to removing the chassis cover, make sure the unit's power is off and disconnected from the power sources to prevent electric shock or system damage.

1. Locate the 6 screws on the bottom side of the chassis cover.



2. Remove the 6 screws on the bottom side of the chassis cover.



3. Remove the chassis cover.




Installing a SO-DIMM Memory Module




Remove the bottom cover before installing a SO-DIMM.

1. Locate the SO-DIMM socket.

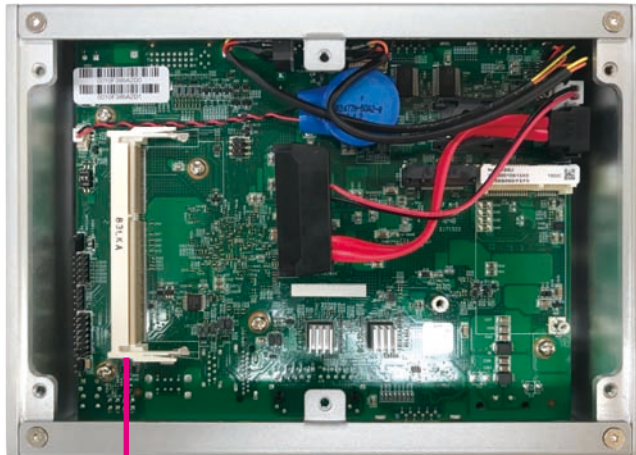

SO-DIMM Socket


2. Insert the module into the socket at an approximately 30-degree angle. The ejector tabs at the ends of the socket will automatically snap into the locked position to hold the module in place.

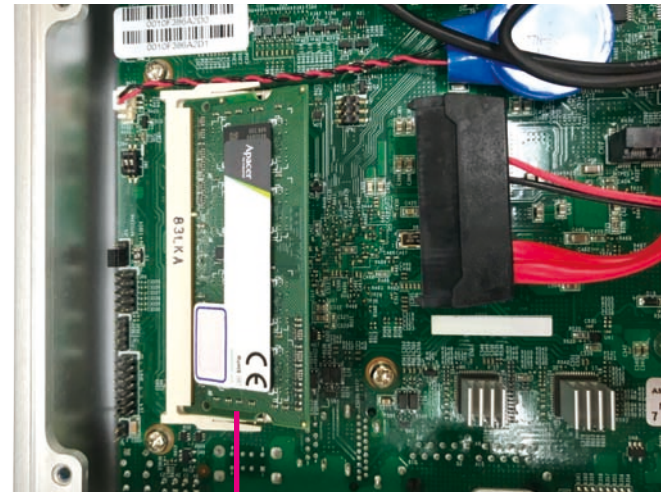

Memory Module


Installing a Wireless LAN Module (Half-size)

1. Locate the mini-PCle slot on the board.

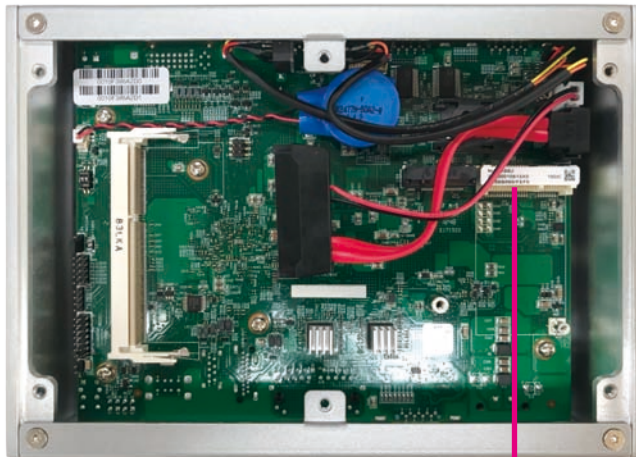

Mini-PCle Slot

2. Install the mini-PCle bracket to the mini-PCle module.

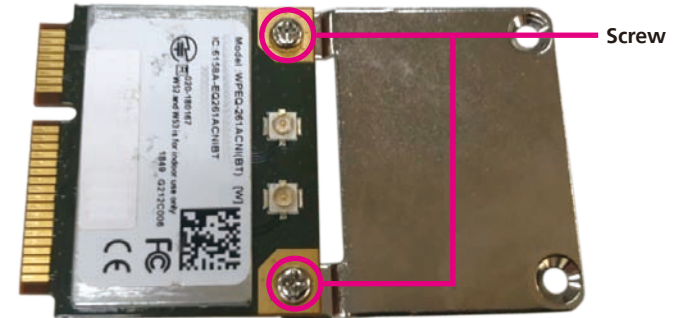

3. Insert the mini-PCIe module into the mini-PCIe slot at a 45-degree angle until the gold-plated connector on the edge of the module completely disappears into the slot.




4. Push the module down and secure it with a screw.



Installing a Wireless LAN Module (Full-size)

1. Locate the mini-PCIe slot on the board, and remove the mini-PCIe bracket from the board.
2. Insert the mini-PCIe module into the mini-PCIe slot at a 45-degree angle until the gold-plated connector on the edge of the module completely disappears into the slot.

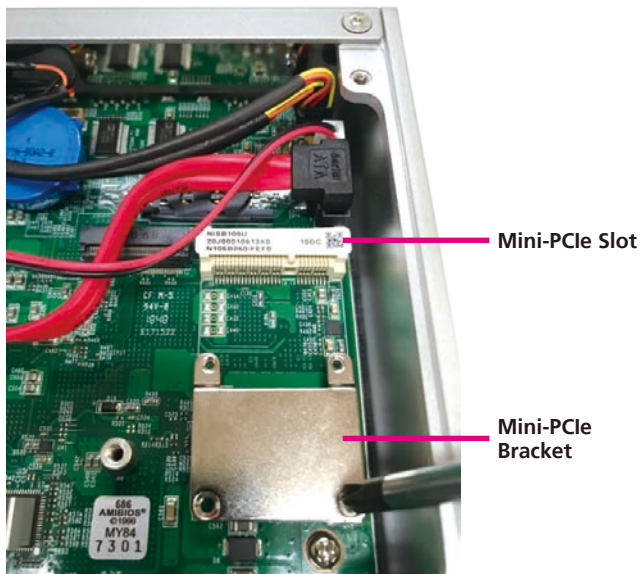


3. Push the module down and secure it with a screw.




Installing an M.2 Card

1. Locate the M.2 B Key slot on the board.

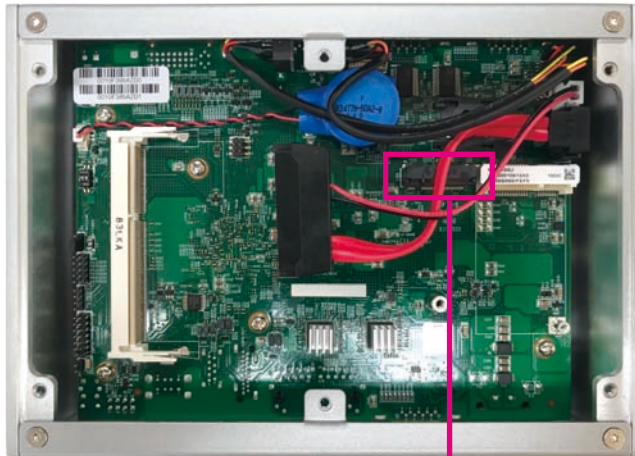

M.2 Slot

2. Make sure the gold-plated six-pin connector on the edge of the module is on the left, while the five-pin connector is on the right.

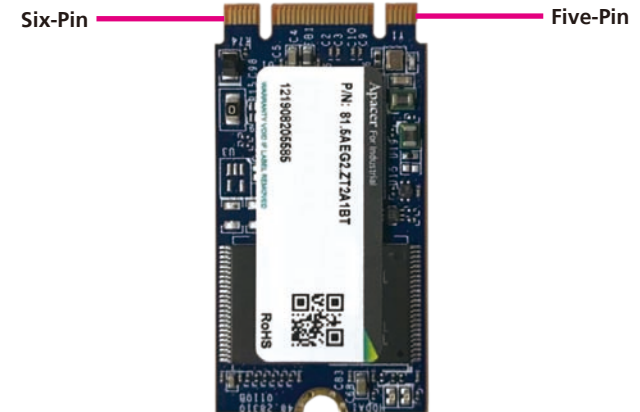

3. Insert the M.2 module into the M.2 slot at a 45-degree angle until the gold-plated connector on the edge of the module completely disappears into the slot.




4. Push the module down and secure it with a screw.




Installing a SIM Card


1. Locate the SIM card holder and release the cover.

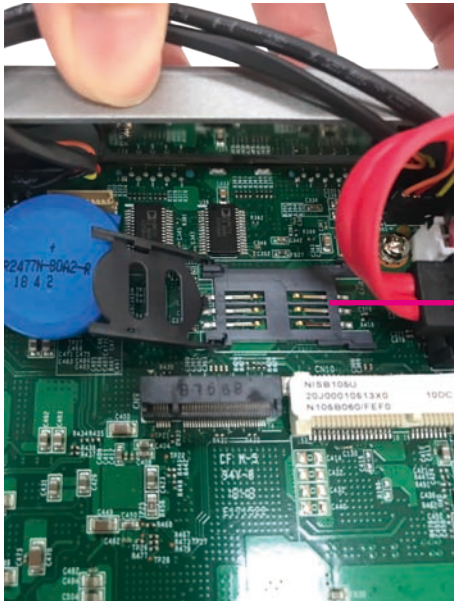

2. Place the SIM card into the holder.

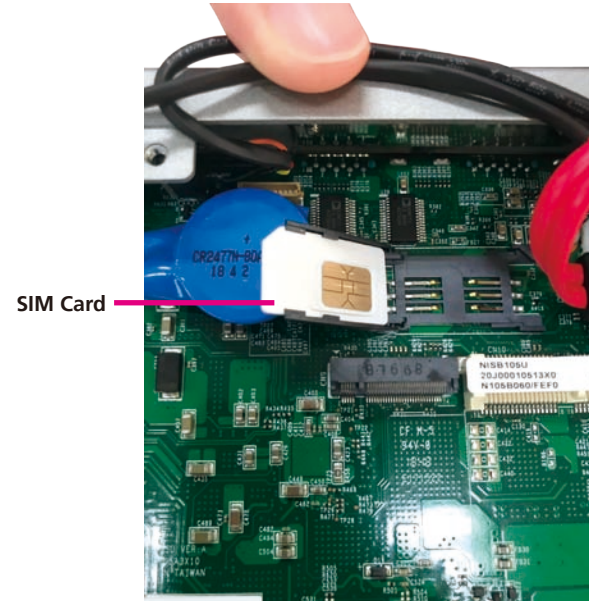


3. Close the cover and secure it to the original position.

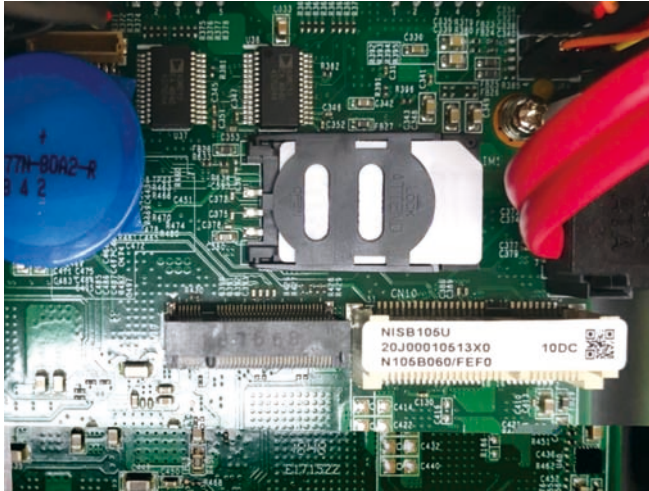

Installing a SATA Storage Drive

1. The inner side of the bottom cover is where you will install the SATA drive. Align the mounting holes of the SATA drive with the mounting holes on the cover.
2. While supporting the SATA drive, turn the cover to the other side. This will be the outer side of the cover. Use the provided screws to secure the drive in place.

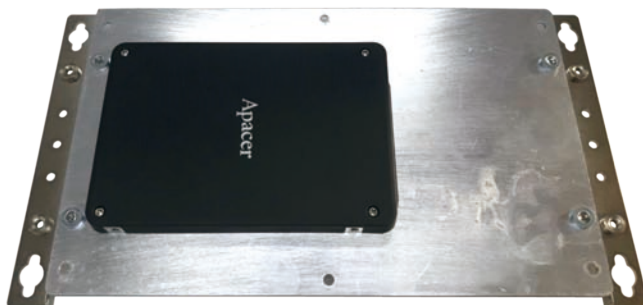

3. Connect the SATA data/power cable to the SATA drive.
4. Connect the SATA data/power cable to connectors SATA1 and J2 on the motherboard respectively.



Wall Mounting Instructions

To mount the system on to a wall or some other surface using the two mounting brackets, please follow the steps below.

1. Turn the system over. Align the two retention screw holes in each bracket with the retention screw holes on the sides of the bottom surface.
2. Secure the brackets to the system by inserting two retention screws into each bracket.



Wall Mount Bracket



Specification of the wall mount screw:
Round Head Screw Long Fei:P6#32Tx 1/4/SW7*0.8 w/Spring+Flat Washer

3. Drill holes in the intended installation surface.
4. Align the mounting holes on the sides of the mounting brackets with the predrilled holes on the mounting surface.
5. Insert four retention screws, two in each bracket, to secure the system to the wall.



Fasten screws to mount the system to the wall

CHAPTER 4: BIOS SETUP

This chapter describes how to use the BIOS setup program for the NISE 105U. The BIOS screens provided in this chapter are for reference only and may change if the BIOS is updated in the future.

To check for the latest updates and revisions, visit the NEXCOM website at www.nexcom.com.tw.

About BIOS Setup

The BIOS (Basic Input and Output System) Setup program is a menu driven utility that enables you to make changes to the system configuration and tailor your system to suit your individual work needs. It is a ROM-based configuration utility that displays the system's configuration status and provides you with a tool to set system parameters.

These parameters are stored in non-volatile battery-backed-up CMOS RAM that saves this information even when the power is turned off. When the system is turned back on, the system is configured with the values found in CMOS.

With easy-to-use pull down menus, you can configure such items as:

- Hard drives, diskette drives, and peripherals
- Video display type and display options
- Password protection from unauthorized use
- Power management features

The settings made in the setup program affect how the computer performs. It is important, therefore, first to try to understand all the setup options, and second, to make settings appropriate for the way you use the computer.

When to Configure the BIOS

- This program should be executed under the following conditions:
- When changing the system configuration
- When a configuration error is detected by the system and you are prompted to make changes to the setup program
- When resetting the system clock
- When redefining the communication ports to prevent any conflicts
- When making changes to the Power Management configuration
- When changing the password or making other changes to the security setup

Normally, CMOS setup is needed when the system hardware is not consistent with the information contained in the CMOS RAM, whenever the CMOS RAM has lost power, or the system features need to be changed.

Default Configuration

Most of the configuration settings are either predefined according to the Load Optimal Defaults settings which are stored in the BIOS or are automatically detected and configured without requiring any actions. There are a few settings that you may need to change depending on your system configuration.

Entering Setup














When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines. These routines perform various diagnostic checks; if an error is encountered, the error will be reported in one of two different ways:

- If the error occurs before the display device is initialized, a series of beeps will be transmitted.
- If the error occurs after the display device is initialized, the screen will display the error message.

Powering on the computer and immediately pressing allows you to enter Setup.

Press the  key to enter Setup:


Legends

Key	Function
 	Moves the highlight left or right to select a menu.
 	Moves the highlight up or down between sub-menus or fields.
	Exits the BIOS Setup Utility.
	Scrolls forward through the values or options of the highlighted field.
	Scrolls backward through the values or options of the highlighted field.
	Selects a field.
	Displays General Help.
	Load previous values.
	Load optimized default values.
	Saves and exits the Setup program.
	Press <Enter> to enter the highlighted sub-menu.

Scroll Bar


When a scroll bar appears to the right of the setup screen, it indicates that there are more available fields not shown on the screen. Use the up and down arrow keys to scroll through all the available fields.

Submenu

When “▶” appears on the left of a particular field, it indicates that a submenu which contains additional options are available for that field. To display the submenu, move the highlight to that field and press  .



BIOS Setup Utility

Once you enter the AMI BIOS Setup Utility, the Main Menu will appear on the screen. The main menu allows you to select from several setup functions and one exit. Use arrow keys to select among the items and press  to accept or enter the submenu.

Main

The Main menu is the first screen that you will see when you enter the BIOS Setup Utility.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.

Main

Advanced

Chipset

Security

Boot

Save & Exit

BIOS Information

BIOS Vendor

Core Version

Compliancy

Project Version

Build Date and Time

CPU Configuration

Microcode Patch

Memory Information

Total Memory

GOP Information

Intel(R) GOP Driver

System Date

System Time

American Megatrends

5.009

UEFI 2.3; PI 1.2

N105B060 x64

01/19/2019 15:53:57

90a

2048 MB

[N/A]

[Fri 05/03/2019]

[15:55:08]

Set the Date. Use Tab to switch between Date elements.

←→: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit

ESC: Exit

Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

System Date

The date format is <day>, <month>, <date>, <year>. Day displays a day, from Monday to Sunday. Month displays the month, from January to December. Date displays the date, from 1 to 31. Year displays the year, from 1999 to 2099.

System Time

The time format is <hour>, <minute>, <second>. The time is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Hour displays hours from 00 to 23. Minute displays minutes from 00 to 59. Second displays seconds from 00 to 59.

Advanced

The Advanced menu allows you to configure your system for basic operation. Some entries are defaults required by the system board, while others, if enabled, will improve the performance of your system or let you set some features according to your preference.



Setting incorrect field values may cause the system to malfunction.



ACPI Settings

This section is used to configure ACPI settings.



Enable Hibernation

Enables or disables system ability to hibernate (OS/S4 Sleep State). This option may not be effective with some OS.

ACPI Sleep State

Select the highest ACPI sleep state the system will enter when the suspend button is pressed. The options are Suspend Disabled and S3 (Suspend to RAM).



IT8786E Super IO Configuration

This section is used to configure the serial ports.



Super IO Chip

Displays the Super I/O chip used on the board.

Serial Port 1 Configuration

This section is used to configure serial port 1.



Serial Port

Enables or disables the serial port.

Onboard Serial Port Mode

Select this to change the serial port mode to RS232, RS422, RS485 or RS485 Auto.



Serial Port 2 Configuration

This section is used to configure serial port 2.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.

Advanced

Serial Port 2 Configuration

Serial Port [Enabled]
Device Settings IO=2F8h; IRQ=3;
Onboard Serial Port Mode [RS232]

Enable or Disable Serial Port (COM)

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

Serial Port

Enables or disables the serial port.

Onboard Serial Port Mode

Select this to change the serial port mode to RS232, RS422, RS485 or RS485 Auto.

Serial Port 3 Configuration

This section is used to configure serial port 3.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.

Advanced

Serial Port 3 Configuration

Serial Port [Enabled]
Device Settings IO=3E8h; IRQ=11;

Enable or Disable Serial Port (COM)

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

Serial Port

Enables or disables the serial port.



Serial Port 4 Configuration

This section is used to configure serial port 4.

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.

Advanced

Serial Port 4 Configuration

Serial Port [Enabled]
Device Settings IO=2E8h; IRQ=10;

Enable or Disable Serial Port (COM)

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.


Serial Port

Enables or disables the serial port.



Hardware Monitor

This section is used to monitor hardware status such as temperature, fan speed and voltages.

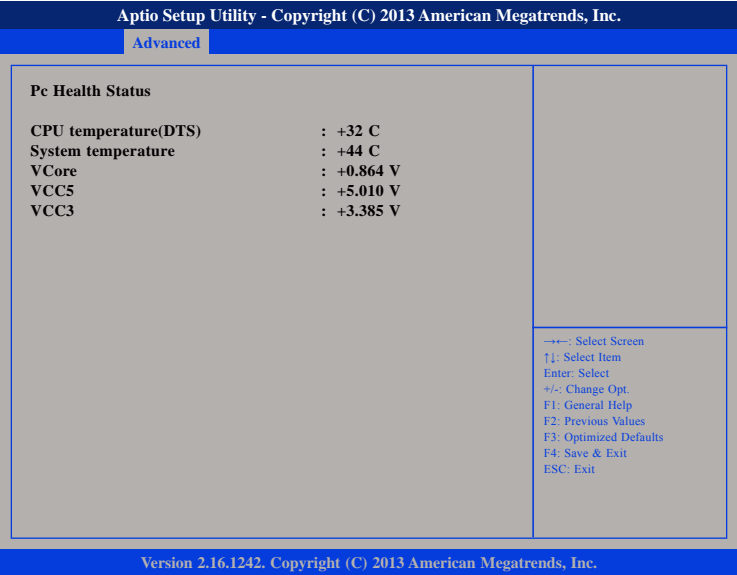

VCC5

Detects and displays 5V voltage.

VCC3

Detects and displays 3.3V voltage.

CPU temperature(DTS)

Detects and displays the current CPU temperature.

System temperature

Detects and displays the current system temperature.

VCore

Detects and displays the VCore CPU voltage.



CPU Configuration

This section is used to configure the CPU.



Active Processor Cores

Select the number of cores to enable in each processor package.

Limit CPUID Maximum

The CPUID instruction of some newer CPUs will return a value greater than 3. The default is Disabled because this problem does not exist in the Windows series operating systems. If you are using an operating system other than Windows, this problem may occur. To avoid this problem, enable this field to limit the return value to 3 or lesser than 3.

Execute Disable Bit


When this field is set to Disabled, it will force the XD feature flag to always return to 0. XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3).

Intel® Virtualization Technology

Enables or disables Intel® Virtualization technology.

Socket 0 CPU Information

This section displays the information of the CPU installed in Socket 0.

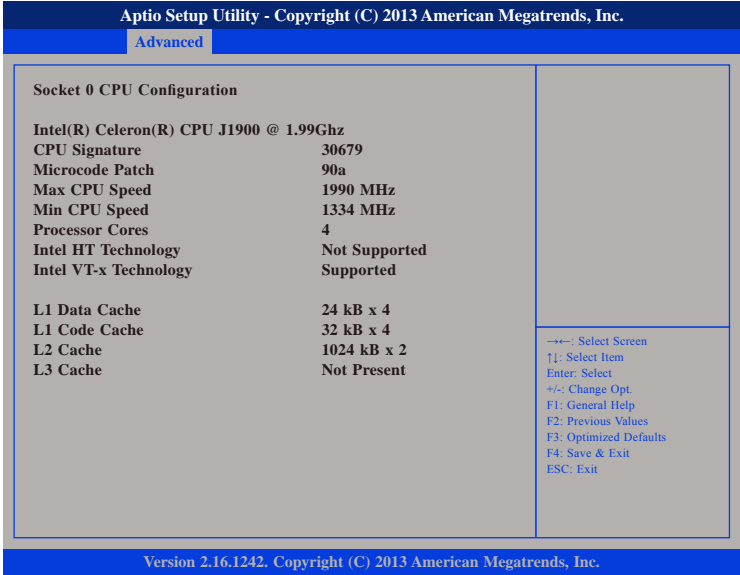



PPM Configuration

This section is used to configure the Processor Power Management (PPM) configuration.



EIST
Enables or disables Intel® SpeedStep.



IDE Configuration

This section is used to configure the SATA drives.



Serial-ATA (SATA)

Enables or disables SATA device.

SATA Mode

Configures the SATA as IDE or AHCI mode.

SATA Mode

Configures the SATA as IDE or AHCI mode.

- IDE This option configures the Serial ATA drives as Parallel ATA physical storage device.
- AHCI This option configures the Serial ATA drives to use AHCI (Advanced Host Controller Interface). AHCI allows the storage driver to enable the advanced Serial ATA features which will increase storage performance.

Serial-ATA Port 0 and Serial-ATA Port 1

Enables or disables SATA port 0 and SATA port 1.


SATA Port0 Hotplug and SATA Port1 Hotplug

Enables or disables hotplug support on SATA port 0 and SATA port 1.



CSM Configuration

This section is used to configure the compatibility support module features.

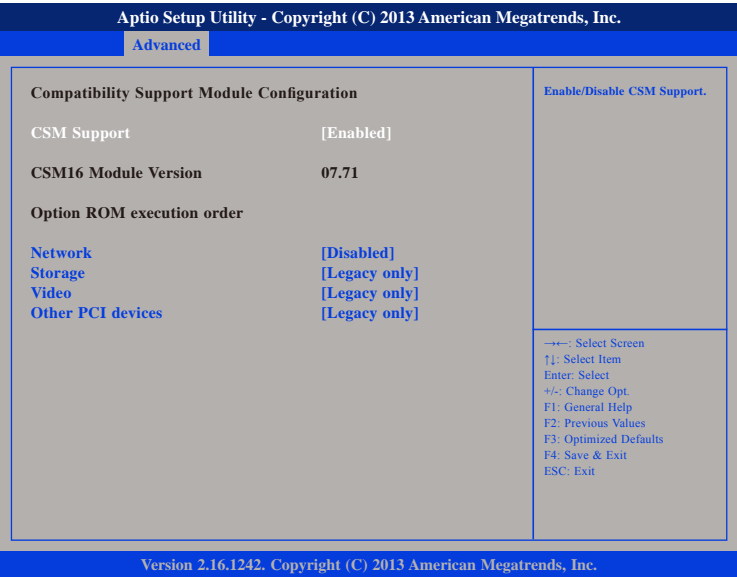

CSM Support

Enables or disables CSM support.

Network

Controls the execution of UEFI and legacy PXE OpROM.

Storage

Controls the execution of UEFI and legacy storage OpROM.

Video

Controls the execution of UEFI and legacy video OpROM.

Other PCI Devices

Determines OpROM execution policy for devices other than network, storage or video.





Trusted Computing

This section is used to configure Trusted Platform Module (TPM) settings.




Security Device Support

Enables or disables BIOS support for security device. O.S will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

USB Configuration

This section is used to configure the USB.

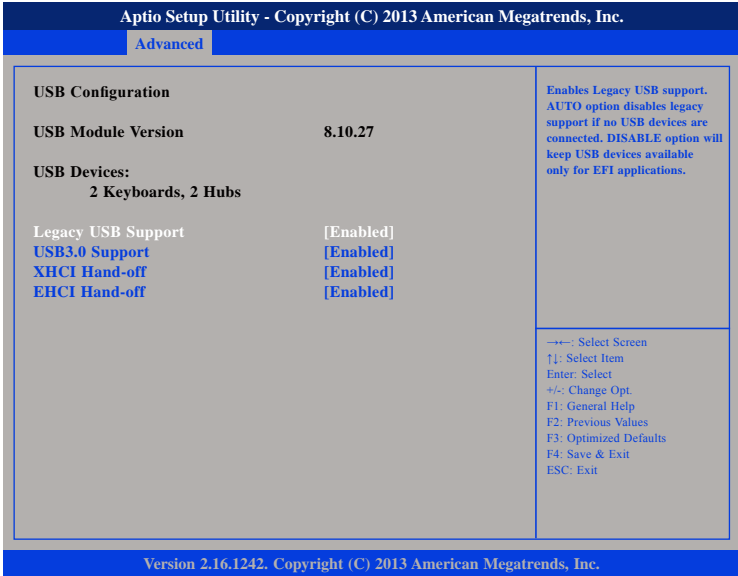

Legacy USB Support

Enable Enables Legacy USB support.
Auto Disables support for Legacy when no USB devices are connected.
Disable Keeps USB devices available only for EFI applications.

USB3.0 Support

Enables or disables USB 3.0 controller support.

XHCI Hand-off and EHCI Hand-off

This is a workaround for OSs that does not support XHCI hand-off and EHCI hand-off. The XHCI and EHCI ownership change should be claimed by the XHCI and EHCI driver respectively.





Chipset

This section gives you functions to configure the system based on the specific features of the chipset. The chipset manages bus speeds and access to system memory resources.



South Bridge

This section is used to configure the south bridge features.



High Precision Timer

Enables or disables the high precision event timer.

Restore AC Power Loss

Power Off	When power returns after an AC power failure, the system's power is off. You must press the power button to power-on the system.
Power On	When power returns after an AC power failure, the system will automatically power-on.
Last State	When power returns after an AC power failure, the system will return to the state where you left off before power failure occurs. If the system's power is off when AC power failure occurs, it will remain off when power returns. If the system's power is on when AC power failure occurs, the system will power-on when power returns.

USB2 Power State in S5

Configures USB2 power state in S5.

USB3 Power State in S5

Configures USB3 power state in S5.

Azalia HD Audio



Audio Controller

Control detection of the Azalia device.

Disabled	Azalia will be unconditionally disabled.
Enabled	Azalia will be unconditionally enabled.
Auto	Azalia will be enabled if present, disabled otherwise.

Azalia HDMI Codec

Enables or disables internal HDMI codec for Azalia.



USB Configuration

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.

Chipset

USB Configuration

XHCI Mode

[Disabled]

USB 2.0(EHCI) Support

[Enabled]

USB RMH Mode

[Enabled]

USB EHCI debug

[Disabled]

Control the USB EHCI (USB 2.0) functions. One EHCI controller must always be enabled.

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit

ESC: Exit

Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

USB 2.0(EHCI) Support

Enables or disables the Enhanced Host Controller Interface (USB 2.0), one EHCI controller must always be enabled.

USB RMH Mode

Enables or disables PCH USB rate matching hubs mode.

USB EHCI Debug

Enables or disables PCH EHCI debug capability.

PCI Express Configuration

Aptio Setup Utility - Copyright (C) 2013 American Megatrends, Inc.

Chipset

PCI Express Configuration

PCI Express Port 0

[Enabled]

PCI Express Port 1

[Enabled]

PCI Express Port 2

[Enabled]

Enable or Disable the PCI Express Port 0 in the Chipset.

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F2: Previous Values

F3: Optimized Defaults

F4: Save & Exit


ESC: Exit

Version 2.16.1242. Copyright (C) 2013 American Megatrends, Inc.

PCI Express Port 0 to PCI Express Port 2

Enables or disables the PCI Express ports 0 to 2 on the chipset.

Security

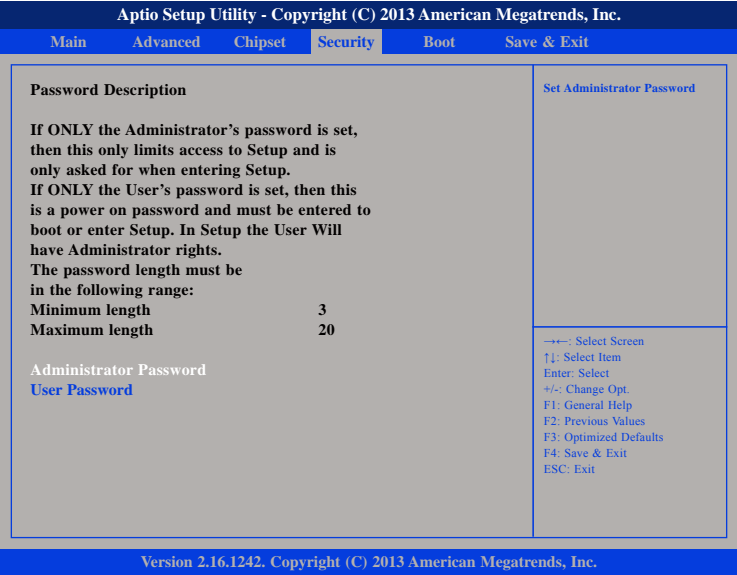

Administrator Password
Select this to reconfigure the administrator’s password.

User Password
Select this to reconfigure the user’s password.

Boot

This section is used to configure the boot features.



Bootup NumLock State
This allows you to determine the default state of the numeric keypad. By default, the system boots up with NumLock on wherein the function of the numeric keypad is the number keys. When set to Off, the function of the numeric keypad is the arrow keys.

Fast Boot
When enabled, the BIOS will shorten or skip some check items during POST. This will decrease the time needed to boot the system.

Boot Option Priorities
Adjust the boot sequence of the system. Boot Option #1 is the first boot device that the system will boot from, next will be #2 and so forth.



Save & Exit



Save Changes and Reset

To save the changes and reset, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

Discard Changes and Reset

To exit the setup utility and reset without saving the changes, select this field then press <Enter>. You may be prompted to confirm again before exiting.

Restore Defaults

To restore the BIOS to default settings, select this field then press <Enter>. A dialog box will appear. Confirm by selecting Yes.

APPENDIX A: POWER CONSUMPTION

Power Consumption Measurement Test

Purpose

The purpose of the power consumption test is to verify the power dissipation of system, and the loading of power supply.

Test Equipment/Software

Chroma 62006P-100-25

Device Under Test

DUT: NISE 105U

CPU: Intel® Celeron® processor J1900 quad core, 2.00GHz

Memory: Innodisk 8GB DDR3L SODIMM

HDD: Innodisk 2.5" SATA SSD M3E4

M.2: Innodisk M.2 128GB

Power Supply: LABORATORY DC POWER SUPPLY GWINSTEK GPC-60300

CPU Cooler: NISE 105U CPU Heatsink

Keyboard: Microsoft Wired Keyboard 600

Mouse: Microsoft Basic Optical Mouse

Test Procedure

1. Power up the DUT, boot into Windows 10 x64 Pro.
2. Entering standby mode (SSD power down).
3. Measure the power consumption and record it.
4. Run Burn-in test program to apply 100% full loading.
5. Measure the power consumption and record it.

Test Result

	Sys #1	Sys #1
	+30V	+9V
Full-Loading Mode	1.1A	3.1A
Total	33W	27.9W
Standby S3 Mode	0.17A	0.2A
Total	5.1W	1.8W

APPENDIX B: GPIO PROGRAMMING GUIDE

GPIO (General Purpose Input/Output) pins are provided for custom system design. This appendix provides definitions and its default setting for the ten GPIO pins in NISE 105U. The pin definition is shown in the following table:

Pin	GPIO mode	PowerOn Default	Address	Pin	GPIO mode	PowerOn Default	Address
1	VCC	-	-	2	GND	-	-
3	GPO0	Low	A03h (Bit6)	4	GPI0	High	A03h (Bit1)
5	GPO1	Low	A02h (Bit5)	6	GPI1	High	A05h (Bit5)
7	GPO2	Low	A07h (Bit0)	8	GPI2	High	A05h (Bit4)
9	GPO3	Low	A07h (Bit1)	10	GPI3	High	A00h (Bit1)

Control the GPO 0/1/2/3 level from I/O port A03h bit6/ A02h bit5/ A07h bit0/ A07h bit1.
The bit is Set/Clear, which indicates output High/Low.

GPIO programming sample code

```
#define GPO0          (0x01 << 6)
#define GPO1          (0x01 << 5)
#define GPO2          (0x01 << 0)
#define GPO3          (0x01 << 1)

#define GPO0_HI        outportb(0xA03, GPO0)
#define GPO0_LO        outportb(0xA03, 0x00)
#define GPO1_HI        outportb(0xA02, GPO1)
#define GPO1_LO        outportb(0xA02, 0x00)
#define GPO2_HI        outportb(0xA07, GPO2)
#define GPO2_LO        outportb(0xA07, 0x00)
#define GPO3_HI        outportb(0xA07, GPO3)
#define GPO3_LO        outportb(0xA07, 0x00)

void main(void)
{
    GPO0_HI;
    GPO1_LO;
    GPO2_HI;
    GPO3_LO;
}
```

APPENDIX C: WATCHDOG TIMER SETTING

ITE8786 WatchDog Programming Guide

```
#define SUPERIO_PORT 0x2E
#define WDT_SET      0x72
#define WDT_VALUE    0x73

void main(void)
{
    #Enter SuperIO Configuration
    outputb(SUPERIO_PORT, 0x87);
    outputb(SUPERIO_PORT, 0x01);
    outputb(SUPERIO_PORT, 0x55);
    outputb(SUPERIO_PORT, 0x55);

    # Set LDN
    outputb(SUPERIO_PORT, 0x07);
    outputb(SUPERIO_PORT+1, 0x07);

    # Set WDT setting
    outputb(SUPERIO_PORT, WDT_SET);
    outputb(SUPERIO_PORT+1, 0x90);    # Use the second
                                     # Use the minute, change value to 0x10

    # Set WDT sec/min
    outputb(SUPERIO_PORT, WDT_VALUE);
    outputb(SUPERIO_PORT+1, 0x05);    # Set 5 seconds
}
```


Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Nexcom:](#)

[10J00010538X0](#)