

# 3M™ EM Aware TNG ESD Event Monitor

Models 3M034-3-TNG, 3M034-030-TNG  
and 3M034-031-TNG

## User's Guide



Read, understand and follow all safety information contained in these user guide instructions prior to installation of the 3M™ EM Aware TNG ESD Event Monitor. Retain these instructions for future reference.

## Intended Use

The 3M EM Aware TNG ESD Event Monitor monitors up to four key parameters that keep you aware of critical symptoms of ESD problems: 1) ESD events; 2) static voltages; 3) ionization balance; and 4) charge decay. The thresholds for these parameters are fully adjustable to suit your needs. The improved design features a metal case module with built-in LCD display, a control joystick, remote antenna, power supply and a data output.







The monitor system must be installed as specified in this user's guide. It is intended for use in the following environmental conditions only:

1. Indoor use
2. Altitudes up to 2,000 meters above sea level
3. Temperature range of 10°C to 40°C
4. Maximum relative humidity of 80% for temperatures up to 31°C, decreasing linearly to 50% relative humidity at 40°C
5. Pollution degree two (office, laboratory, test station)

The monitor system has not been evaluated for other uses or locations. If the monitor is used in a manner not specified by 3M, the protection provided by the equipment may be impaired.

# 3M™ EM Aware TNG ESD Event Monitor

## Safety Statements

EXPLANATION OF SIGNAL WORD CONSEQUENCES	
 <b>WARNING:</b>	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury and/or property damage.
 <b>CAUTION:</b>	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury and/or property damage.
<b>NOTICE:</b>	Indicates a potentially hazardous situation, which, if not avoided, may result in property damage.
EXPLANATION OF PRODUCT SAFETY LABEL SYMBOLS	
	<b>Indicates DC (Direct Current)</b>
	<b>Earth Ground</b>
	<b>Important safety information, refer to the user manual.</b>
<div> <b>WARNING:</b></div>	
<p>To reduce the risks associated with hazardous voltage, which if not avoided, could result in death or serious injury:</p> <ul style="list-style-type: none"><li>• Do not modify or disassemble this product;</li><li>• Never allow children or other non-qualified persons to come into contact with power adapter;</li><li>• Never use power adapter outdoors or other wet locations;</li><li>• Always use extreme caution to avoid coming into contact with any exposed electrical conductors of the equipment being monitored with the EM Aware TNG ESD Event Monitor.</li></ul> <p>To reduce the risks associated with hazardous voltage or possible explosion, which if not avoided, could result in death or serious injury,</p> <ul style="list-style-type: none"><li>• Use only the power adapter provided with the product;</li><li>• If power adapter is missing or damaged, only replace with one supplied by 3M</li></ul>	

## **CAUTION:**

**To reduce the risks associated with ground water contamination:**

- Never incinerate or dispose of product in a manner which is inconsistent with local, state, or federal regulations

## **NOTICE:**

**To reduce the risks associated with Electrostatic Discharge (ESD) voltage, which if not avoided, could result in damage to the meter:**

- To install or change antennas, turn off the meter, install or change antennas, turn meter back on;
- Avoid touching antenna when meter is turned on.

**FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN IRREVERSIBLE DAMAGE TO EM AWARE TNG AND HARM TO PERSONNEL AND EQUIPMENT:**

- If the 3M™ EM Aware TNG ESD Event Monitor is connected to a facility monitoring system (FMS), always verify that there is zero voltage and low resistance between FMS ground and ground at the location where EM Aware TNG monitor is installed and is being grounded. If ground conditions are unacceptable, correct them first prior to installing the EM Aware TNG monitor. Otherwise, damage to the EM Aware TNG monitor and/or to the FMS may occur.

## **FCC**

*This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## **Industry Canada**

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la NMB-003 du Canada.

# Box Contents

Check that the following items are included with the 3M™ EM Aware TNG ESD Event Monitor Starter Kit shipping box:

- A. EM Aware TNG module
- B. Remote antenna with cable
- C. Power adapter
- D. Container with metal screws

## Installation and Mounting Instructions (Optional)

The 3M EM Aware TNG ESD Event Monitor Model 3M034 can be mounted horizontally or vertically. For semi-permanent positioning, two #4-40 screws or an equivalent may be used. For such an installation, mark the surface where the holes should be drilled and drill pilot holes using a #44 tap drill size.

## Connect the EM Aware TNG Monitor

Connect the EM Aware TNG monitor shown in Figure 1 below.

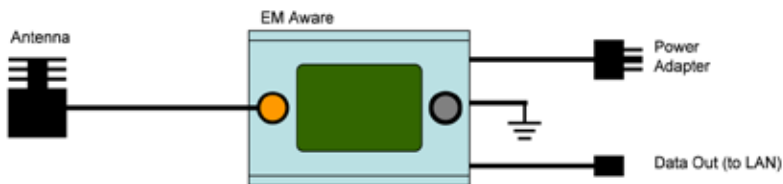


Figure 1

Alternatively, the EM Aware TNG monitor can be connected as a stand-alone system. Follow the connection shown in Figure 2 below.


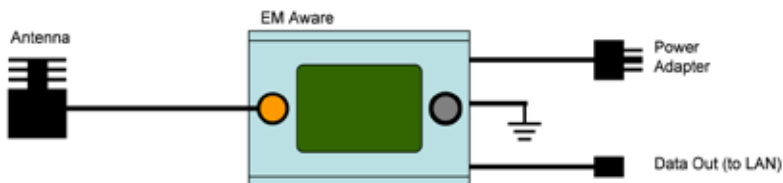


Figure 2

Test the EM Aware TNG monitor by plugging the power adaptor into the main power supply. The power adaptor is +12V DC supply with a 2.1 mm barrel connector, center positive. The EM Aware TNG monitor will light up with the display. Shake the container above the antenna and the EM Aware TNG monitor should respond with beeps.

# Controlling the 3M™ EM Aware TNG ESD Event Monitor

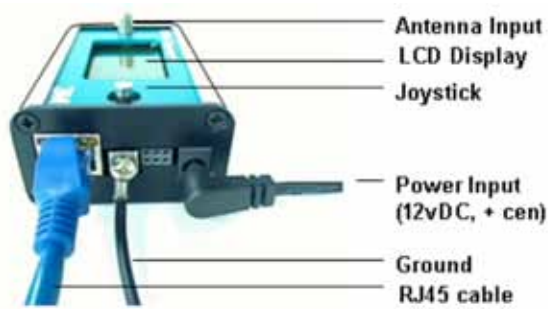

The 3M EM Aware TNG ESD Event Monitor is controlled using a 5-way joystick on the right side of the screen; 1) Left, 2) Right 3) Up, 4) Down, and 5) Push. They will be referred as L, R, U, D and P in this guide.

The first level control takes place upon power up, in which case all L, R, U, D, controls do the same function. All of the directions scroll through the parameter displays as shown in Figure 3.

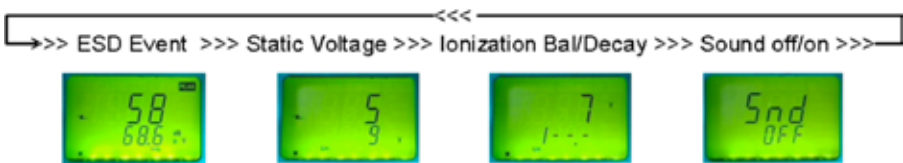


Figure 3

At any of the parameters displayed, the push of the joystick brings the next level control, which allows you to change the parameter settings, i.e. thresholds.

## Changing the ESD Event Parameters



1. To reset the ESD counter to zero, press the joystick momentarily.
2. To change the ESD threshold, press the joystick longer until “ESD” is displayed. Move the joystick left or right to decrease or increase the threshold value. On this screen, a “REF” symbol appears on the top left corner.
3. To disable or enable CDM, move the joystick up or down to “on” or “off” CDM filter. A PEAK symbol appears on screen when the ESD filter is active.
4. To finalize the settings, push the joystick longer until the main ESD Event screen appears. A “MEM” symbol appears momentarily in this process.


### Application note: Measuring ESD Events

Test the system by shaking the screw container just above the antenna. Observe the number display showing magnitudes of ESD events. It is now ready for ESD event detection. The factory default for static events is 80dBuV/m.

### Application note: Measuring EMI Noise

EMI are spurious signals that are similar in nature to ESD signals. Like ESD, they are also unwanted. EMI can be monitored by switching the ESD filter to “OFF”. EMI sources could come from RF generating equipments like phone, motors, etc. The main display should not show the “PEAK” symbol.

## Changing the Static Voltage Parameters

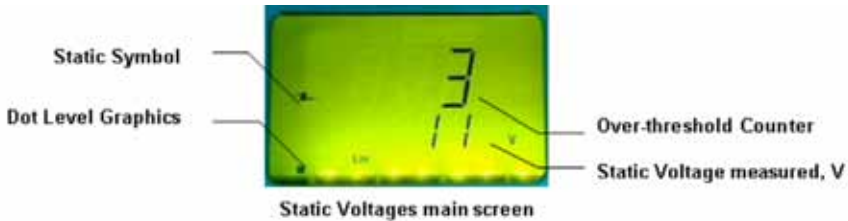

1. At the main screen display (no “REF” symbol), move the joystick until the display is as shown above.
2. To reset the over-threshold counter to zero, press the joystick momentarily.
3. To change the voltage range and thresholds, push the joystick longer until a new screen appears. The new screen shows a “REF” symbol at the right top corner.
4. Move the joystick up or down to scroll on the voltage range options.
5. Move the joystick left or right to decrease or increase the static voltage threshold.
6. To finalize the settings, push the joystick longer until the screen shows the main static voltage screen.

### Application note: Measuring/Detecting Static Voltage


Rub an insulative material against your garment and bring it just above the antenna. Observe the numbers displayed on the 3M™ EM Aware TNG ESD Event Monitor screen. The voltage peaks will coincide with alarms on the EM Aware TNG monitor. The EM Aware TNG monitor sounds an alarm when it detects a peak voltage exceeding the preset threshold voltage. It is now ready to detect static voltages around the antenna. On electronic manufacturing lines, locate the antenna closest to where the suspect static voltage is being generated. Once the EM Aware TNG monitor sounds the alarm, take precautions (i.e. removing insulative materials at the vicinity).



## Changing the Ionization Balance and Decay Parameters



1. At the main screen display (no “REF” symbol), move the joystick until the display is as shown similar above.
2. To manually test the decay time, press the joystick momentarily.
3. The decay time is also automatically measured every three minutes.
4. The decay time could be measured manually by pressing the navigation switch button momentarily.
5. To change the voltage range and thresholds, push the joystick longer until a new screen appears. The new screen is as shown below.

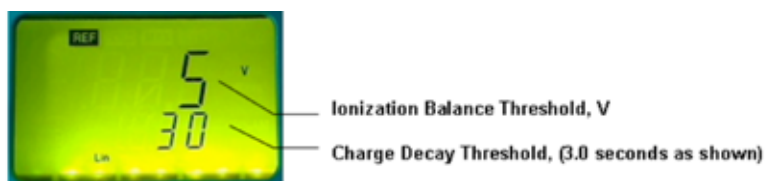

6. Move the joystick up or down to increase or decrease the decay time threshold.
7. Move the joystick left or right to decrease or increase the ionization balance threshold.
8. To finalize the settings, push the joystick longer until the screen shows the main static voltage screen.

### Application note: Measuring Charge Decay

Charge decay is measured in intervals of three minutes. The waveform is shown on the third row of the screen. If the decay exceeds the threshold time, an alarm is heard on the 3M™ EM Aware TNG ESD Event Monitor.

# 3M™ EM Aware TNG ESD Event Monitor

## Regulatory Information

### China RoHS



Electronic Industry Standard of the People's Republic of China, SJ/T11363-2006, Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products.

**This symbol, per Marking for the Control of Pollution**

**Caused by Electronic Information Products, SJ/T11364-2006, means that the product or part **does** contain a substance, as detailed in the chart below, in excess of the following maximum concentration values in any homogeneous material: (a) 0.1% (by weight) for lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers; or (b) 0.01% (by weight) for cadmium. Unless otherwise stated by 3M in writing, this information represents 3M's best knowledge and belief based upon information provided by third party suppliers to 3M.**

This numerical reference should not be construed as a representation regarding the product's life or an extension of a product warranty. In the event any product is proven not to conform with 3M's Regulatory Information Sheet, then 3M's entire liability and buyer's exclusive remedy, will be at 3M's option either: (i) replacement of product with a conforming product, or (ii) refund of the purchase price paid by buyer for each non-conforming product, within a reasonable time after written notification of said non-conformance and return of said product to 3M. 3M shall not under any circumstances be liable for direct, incidental, special, or consequential damages (including but not limited to loss of profits, revenue, or business) related to or arising out of this certification, including, the use, misuse or inability to use the product. Unless stated otherwise in writing, the foregoing language cannot be waived, modified, or supplemented in any manner whatsoever.

产品中有毒有害物质或元素的名称及含量  
Name and Content of Hazardous Substances or Elements

部件名称 (Part or Component Name)	有毒有害物质或元素 (Hazardous Substances or Elements)					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价 铬 Cr(VI)	多溴联 苯 (PBB)	多溴二苯 醚 (PBDE)
装置的焊接部 (Solder in instrument)	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。(Indicates that this hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006.)

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。(Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363-2006.)”

## Technical assistance contact information:

3M Innovation Singapore PTE LTD  
100 Woodlands Avenue 7  
Singapore 738205  
Phone: (65) 6852 1000

3M is a trademark of 3M Company.

## Important Notice

All statements, technical information, and recommendations related to 3M's products are based on information believed to be reliable, but the accuracy or completeness is not guaranteed. Before using this product, you must evaluate it and determine if it is suitable for your intended application. You assume all risks and liability associated with such use. Any statements related to the products which are not contained in 3M's current publications, or any contrary statements contained on your purchase order shall have no force or effect unless expressly agreed upon, in writing, by an authorized officer of 3M.

## Warranty; Limited Remedy; Limited Liability.

This product will be free from defects in material and manufacture for a period of one (1) year from the time of purchase. **3M MAKES NO OTHER WARRANTIES INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

If this product is defective within the warranty period stated above, your exclusive remedy shall be, at 3M's option, to replace or repair the 3M product or refund the purchase price of the 3M product. **Except where prohibited by law, 3M will not be liable for any indirect, special, incidental or consequential loss or damage arising from this 3M product, regardless of the legal theory asserted.**



## Electronic Solutions Division Static Control Products

6801 River Place Blvd.  
Austin, TX 78726-9000  
866-722-3736  
[www.3MStatic.com](http://www.3MStatic.com)

Please recycle. Printed in U.S.A.  
© 3M 2010. All rights reserved.  
78-9101-0766-9

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

3M:

[3M3A1-C-TNG](#) [3M2A3-C-TNG](#) [3M2AM3-C-TNG](#) [3M034-031-TNG](#) [3M034-030-TNG](#) [3M3A3-C-TNG](#) [3M1A4-C-TNG](#)  
[3M2AM2-C-TNG](#) [3M2A2-C-TNG](#) [3M2A4-C-TNG](#) [3M2A6-C-TNG](#) [3M2A1-C-TNG](#) [3M3A5-C-TNG](#) [3M034-3- TNG](#)