


PGR-3100 Manual
Ground-Fault Indication System

March 9, 2012

REVISION 6

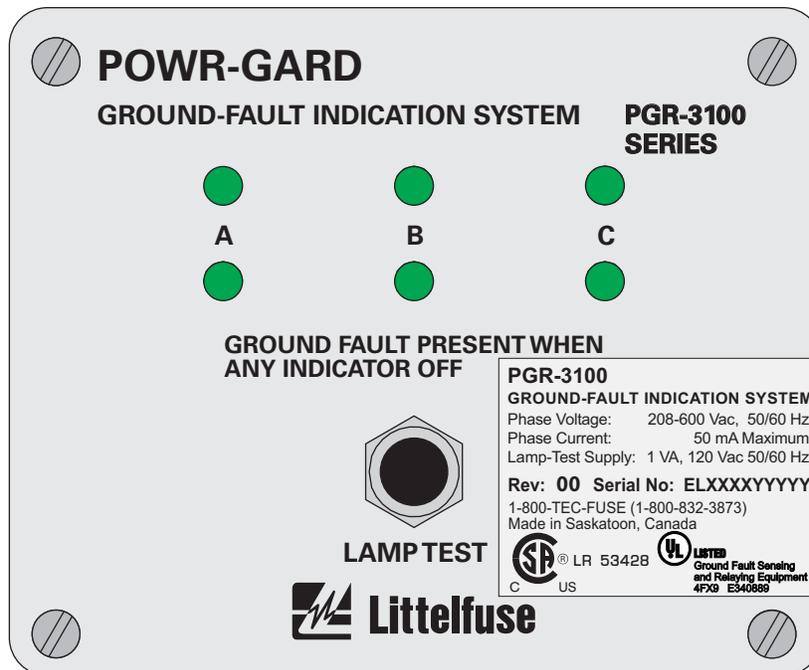

Copyright © 2012 by Littelfuse, Inc.

All rights reserved.



TABLE OF CONTENTS

	<i>Page</i>
1. FEATURES	1
2. DESCRIPTION	1
3. INSTALLATION	1
4. TECHNICAL SPECIFICATIONS	4

LIST OF FIGURES

	<i>Page</i>
1. PGR-3100 Outline and Mounting Details	1
2. Connection Diagram for an Ungrounded 240- to 600-V System	2
3. Connection Diagram for Ungrounded Systems above 600 V	2
4. Connection Diagram for a Resistance-Grounded System up to 600 V	3
5. Connection Diagram for a Resistance-Grounded System above 600 V ..	3

DISCLAIMER

Specifications are subject to change without notice. Littelfuse, Inc. is not liable for contingent or consequential damages, or for expenses sustained as a result of a malfunction, incorrect application, or incorrect adjustment.

1. FEATURES

- Green LED's indicate presence of voltage to ground for each phase of a power system.
 - A ground fault (or phase loss) is indicated when a set of LED's is off.
 - LED's are on when phase-to-ground voltage exceeds 30 Vac.
 - Redundant LED's are used for reliability.
- Pressing LAMP TEST causes all LED's to light.

Note: The LAMP TEST feature requires an isolated 120 Vac supply.

- Direct connection for voltages up to 600 Vac line to line.
 - Potential transformers (PT's) are required for voltages greater than 600 Vac.
- Provides faulted-phase indication for resistance-grounded systems and ungrounded systems.

2. DESCRIPTION

The PGR-3100 is a self-powered ground-fault indication system. Presence of phase-to-ground

voltage is indicated by redundant LED's (two per phase). The respective phase LED's are off when phase-to-ground voltage is less than 30 Vac. The PGR-3100 meets the National Electrical Code requirements for ground detectors for ungrounded alternating-current systems as defined in NEC 250.21. It also meets the Canadian Electrical Code requirements for ungrounded alternating-current systems in accordance with CEC 10-106(2).

3. INSTALLATION

Outline and panel-mounting details are shown in Fig. 1.

For 208- to 600-Vac systems, connect the PGR-3100 directly to the three-phase bus. For 208- or 240-volt installations, use terminals AL, BL, and CL. For systems above 240 V and up to 600 V use terminals AH, BH, and CH. See Figs. 2, 3 and 5.

For systems above 600 V, install PT's as shown in Figs. 4 and 6.

Connect terminal G and chassis-bonding terminal (⊕) to ground.

For LAMP TEST connect 120 Vac supply to terminals L and G. Connection and use of LAMP TEST circuit is optional.

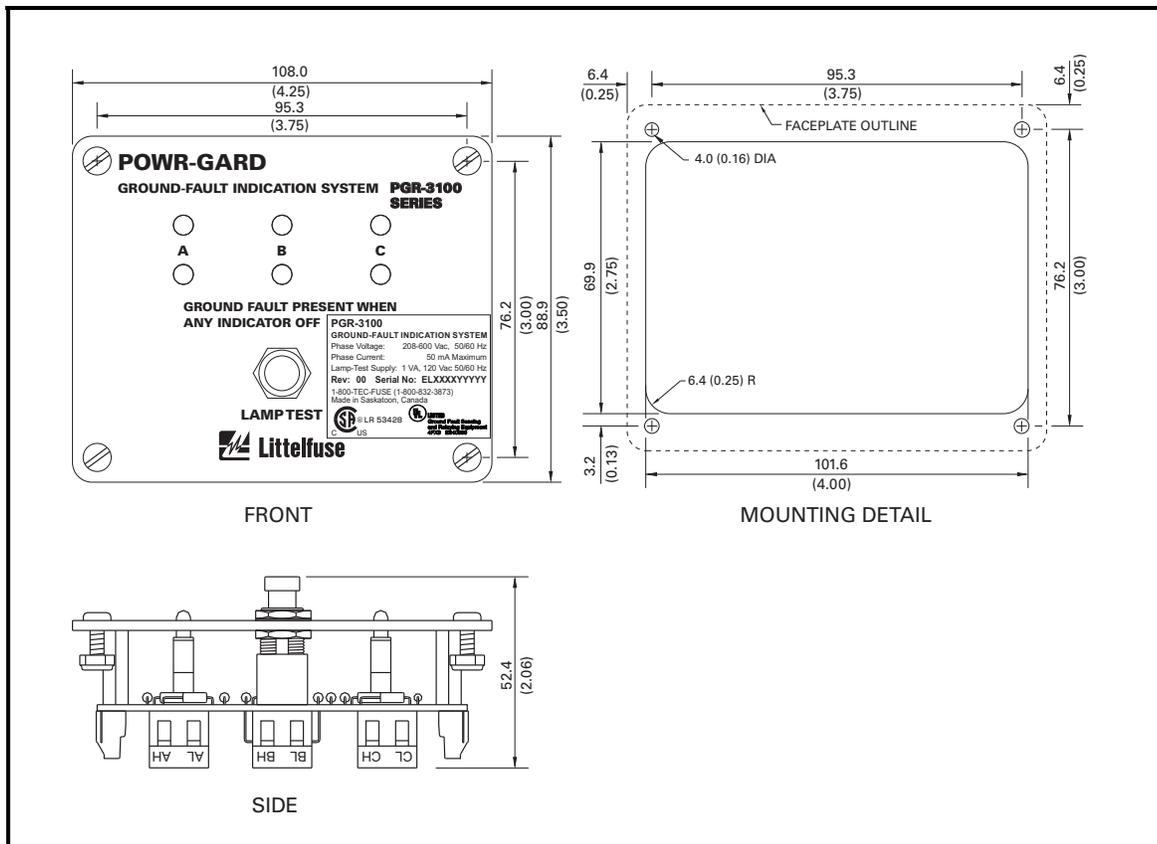


FIGURE 1. PGR-3100 Outline and Mounting Details.

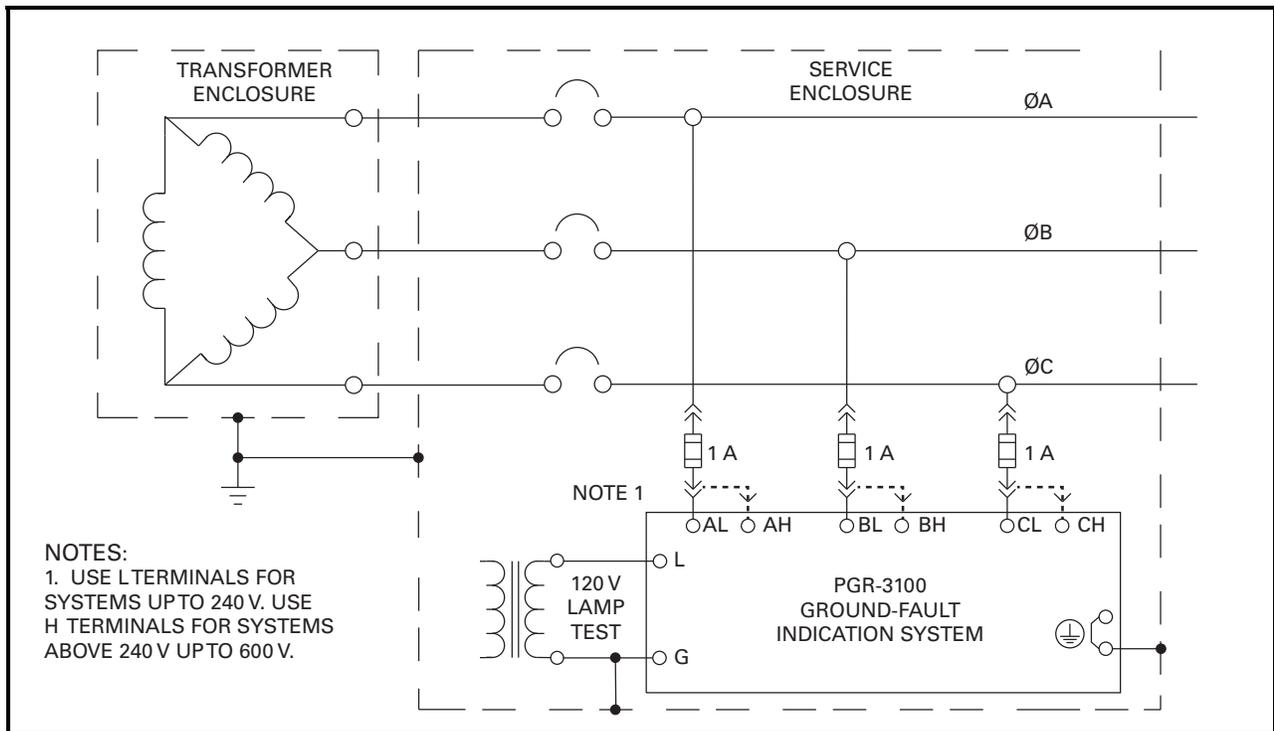


FIGURE 2. Connection Diagram for an Ungrounded 240- to 600-V System.

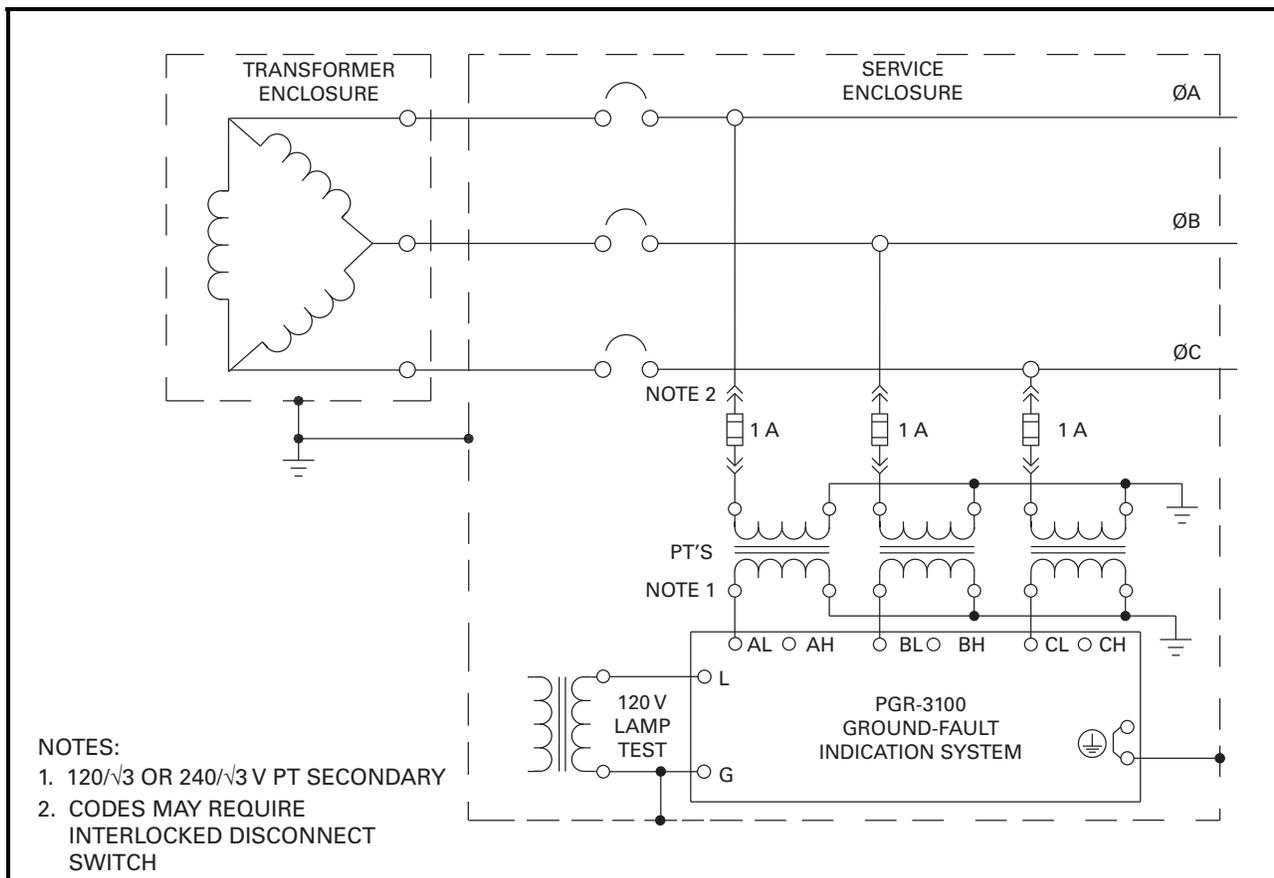


FIGURE 3. Connection Diagram for Ungrounded Systems above 600 V.

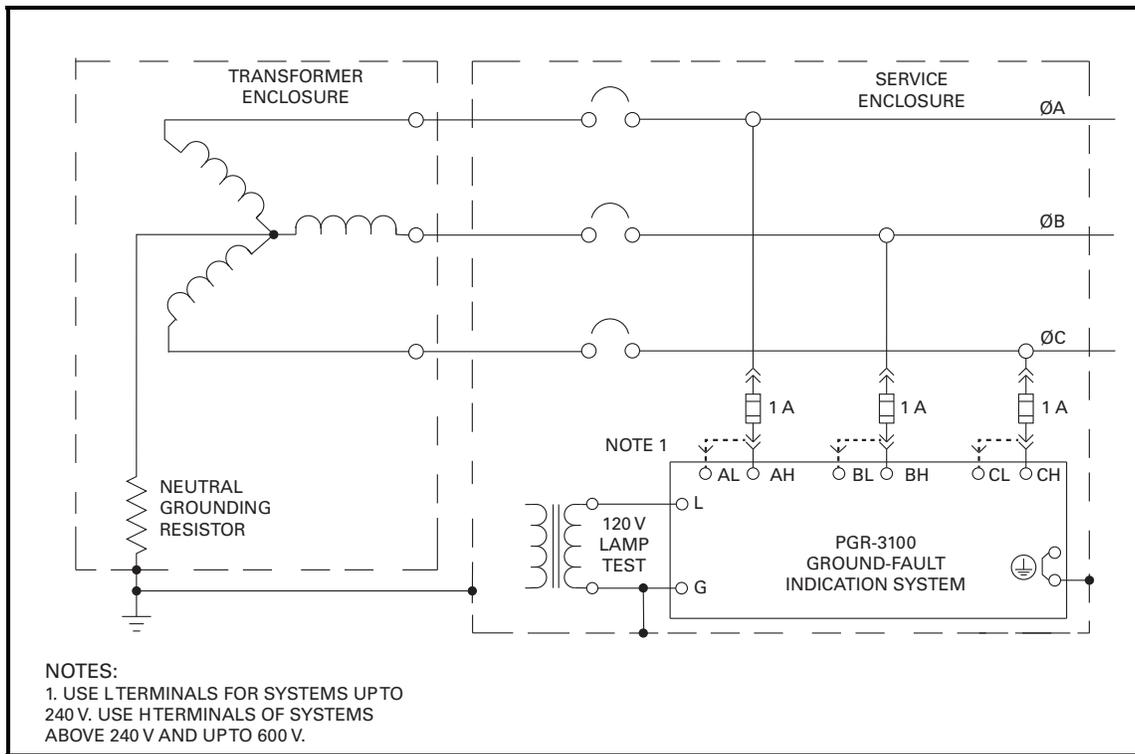


FIGURE 4. Connection Diagram for a Resistance-Grounded System up to 600 V.

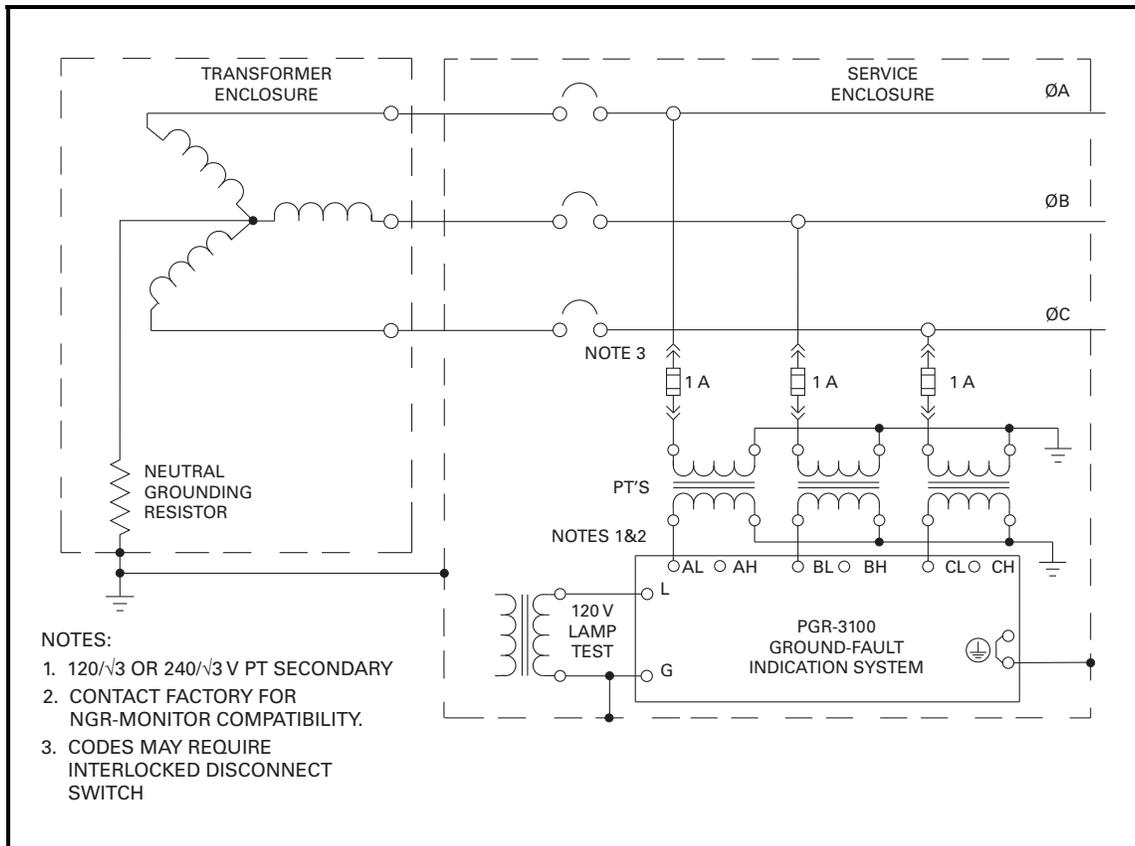


FIGURE 5. Connection Diagram for Resistance-Grounded Systems above 600 V.

4. TECHNICAL SPECIFICATIONS

Phase Voltage

Input L, maximums.....240 Vac to ground,
3.5 mA
Input H, maximums.....600 Vac to ground,
4.5 mA

Lamp Test.....Isolated 120 Vac,
1 VA maximum

LED Threshold30 Vac, minimum

Dielectric Strength2,200 Vac, 1 minute

Shipping Weight0.3 kg (0.8 lb.)

Dimensions:

Height.....108 mm (4.3")
Weight.....88.9 mm (3.5")
Depth54 mm (2.1")

Environment:

Operating Temperature ..-40 to 60°C
Storage Temperature.....-55 to 80°C
Humidity85% Non-Condensing

PWB Conformal CoatingMIL-1-46058 qualified
UL QMJU2 recognized

Certification.....CSA, USA and Canada



UL Listed



Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Littelfuse:](#)

[EL3100-00](#)