


IN485HIT001R000 GATEWAY

Hitachi Commercial and VRF Systems
to BACnet MS/TP and Modbus RTU

USER MANUAL

Version 2.0.7

Publication date 2024-07-04

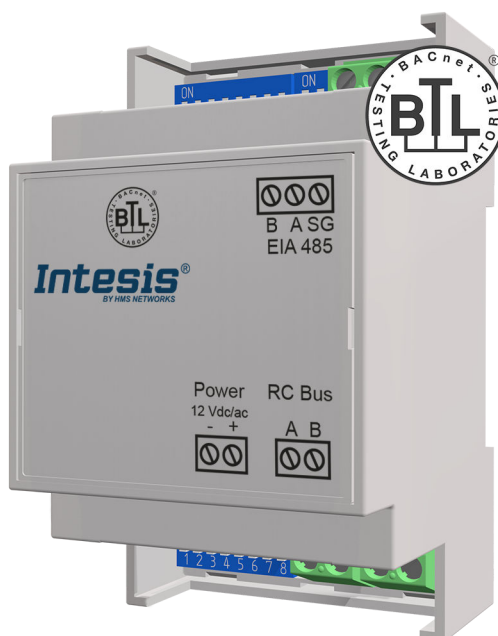

Copyright © Intesis

Disclaimer

The information in this document is for informational purposes only. Please inform HMS Networks of any inaccuracies or omissions found in this document. HMS Networks disclaims any responsibility or liability for any errors that may appear in this document.

HMS Networks reserves the right to modify its products in line with its policy of continuous product development. The information in this document shall therefore not be construed as a commitment on the part of HMS Networks and is subject to change without notice. HMS Networks makes no commitment to update or keep current the information in this document.

The data, examples and illustrations found in this document are included for illustrative purposes and are only intended to help improve understanding of the functionality and handling of the product. In view of the wide range of possible applications of the product, and because of the many variables and requirements associated with any particular implementation, HMS Networks cannot assume responsibility or liability for actual use based on the data, examples or illustrations included in this document nor for any damages incurred during installation of the product. Those responsible for the use of the product must acquire sufficient knowledge in order to ensure that the product is used correctly in their specific application and that the application meets all performance and safety requirements including any applicable laws, regulations, codes and standards. Further, HMS Networks will under no circumstances assume liability or responsibility for any problems that may arise as a result from the use of undocumented features or functional side effects found outside the documented scope of the product. The effects caused by any direct or indirect use of such aspects of the product are undefined and may include e.g. compatibility issues and stability issues.

Table of Contents

1. Description, Compatible AC systems, and Order Codes	1
2. General Information	2
2.1. Intended Use of the User Manual	2
2.2. General Safety Information	2
2.3. Admonition Messages and Symbols	3
3. Quickstart Guide for the IN485HIT001R000 Gateway	4
4. Overview	5
4.1. Inside the Package	6
4.2. Main Features	6
4.3. Gateway Capacity	6
4.4. General Functionality	6
5. Hardware	7
5.1. Mounting	7
5.2. Connection Procedure	8
5.3. Coexistence of the Gateway with a Remote Controller	9
5.4. Connection to an External Power Supply	10
5.5. DIP Switches	11
5.6. LED Indicators	13
5.7. Technical Specifications	14
5.8. Dimensions	14
6. Restore the Factory Settings	15
7. BACnet Specifications	16
7.1. Objects	16
7.1.1. Supported Object Types	16
7.1.2. Member Objects	16
7.1.2.1. Type: Gateway	16
7.1.2.2. Type: Indoor Unit	16
7.1.3. Objects and Properties	18
7.1.3.1. Hitachi AC Gateway (Device Object Type)	18
7.1.3.2. OnOff_status (Binary Input Object Type)	20
7.1.3.3. OnOff_command (Binary Output Object Type)	21
7.1.3.4. Mode_status (Multistate Input Object Type)	22
7.1.3.5. Mode_command (Multistate Output Object Type)	23
7.1.3.6. Setpoint_status (Analog Input Object Type)	24
7.1.3.7. UserSetpoint_status (Analog Input Object Type)	25
7.1.3.8. Setpoint_command (Analog Output Object Type)	26
7.1.3.9. VirtualTemperatureActive (Binary Input Object Type)	27
7.1.3.10. FanSpeed_status (Multistate Input Object Type)	28
7.1.3.11. FanSpeed_command (Multistate Output Object Type)	29
7.1.3.12. AirDirectionUD_status (Multistate Input Object Type)	30
7.1.3.13. AirDirectionUD_command (Multistate Output Object Type)	31
7.1.3.14. RoomTemperature_status (Analog Input Object Type)	32
7.1.3.15. RoomTemperature_command (Analog Output Object Type)	33
7.1.3.16. ErrorCode (Analog Input Object Type)	34
7.1.3.17. ErrorCodeM (Multistate Input Object Type)	35
7.1.3.18. ErrorActive (Binary Input Object Type)	36
7.1.3.19. ErrorAddress (Analog Input Object Type)	37

7.1.3.20. ErrorReset (Binary Output Object Type)	38
7.1.3.21. OnTimeCounter (Analog Value Object Type)	39
7.1.3.22. FilterSign (Binary Input Object Type)	40
7.1.3.23. FilterSignAddress (Analog Input Object Type)	41
7.1.3.24. FilterReset (Binary Output Object Type)	42
7.1.3.25. Occupancy (Multistate Value Object Type)	43
7.1.3.26. OccupiedCoolSetPoint (Analog Value Object Type)	44
7.1.3.27. OccupiedHeatSetPoint (Analog Value Object Type)	45
7.1.3.28. UnoccupiedCoolSetPoint (Analog Value Object Type)	46
7.1.3.29. UnoccupiedHeatSetPoint (Analog Value Object Type)	47
7.1.3.30. OccupancyContinuousCheck (Binary Value Object Type)	48
7.1.3.31. UnoccupiedDeadbandAction (Binary Value Object Type)	49
7.1.3.32. LockRemoteControl (Binary Value Object Type)	50
7.1.3.33. DIP_SW_S1_status (Analog Input Object Type)	51
7.1.3.34. DIP_SW_S2_status (Analog Input Object Type)	52
7.1.3.35. SerialNumber (Analog Input Object Type)	53
7.1.3.36. ResetBehaviour (Multistate Value Object Type)	54
7.2. Occupancy Function	55
8. Modbus Specifications	57
8.1. Implemented Modbus Functions	57
8.1.1. Modbus Physical Layer	57
8.1.2. Modbus Registers	57
9. Ambient Temperature and Virtual Temperature Function	63
9.1. Considerations on Temperature Signals	67
10. Error Codes	69
10.1. Gateway Codes	69
10.2. AC System Codes	69

1. Description, Compatible AC systems, and Order Codes

BACnet MS/TP and Modbus RTU Gateway for Hitachi Air Conditioners.

Compatible with commercial and VRF air conditioning systems commercialized by Hitachi.

Use the compatibility tool to get a complete list of compatible units: <https://compatibility.intesis.com/#>



IMPORTANT

This gateway is compatible with Modbus from firmware version 1.0.2.0 onwards. If you need to update your gateway, please contact the support department at <https://support.hms-networks.com/hc/en-us>.

ORDER CODE	LEGACY ORDER CODE
IN485HIT001R000	INMBSHIT001R000

2. General Information

2.1. Intended Use of the User Manual

This manual contains the main features of this Intesis gateway and the instructions for its appropriate installation, configuration, and operation.

The contents of this manual should be brought to the attention of any person who installs, configures, or operates this gateway or any associated equipment.

Keep this manual for future reference during the installation, configuration, and operation.

2.2. General Safety Information



IMPORTANT

Follow these instructions carefully. Improper work may seriously harm your health and damage the gateway and/or any other equipment connected to it.

Only technical personnel, following these instructions and the country legislation for installing electrical equipment, can install and manipulate this gateway.

Install this gateway indoors, in a restricted access location, avoiding exposure to direct solar radiation, water, high relative humidity, or dust.

Preferably, mount this gateway on a DIN rail inside a grounded metallic cabinet, following the instructions in this manual.

If mounting on a wall, firmly fix this gateway on a non-vibrating surface, following the instructions in this manual.

All wires (for communication and power supply, if needed) must only be connected to networks with indoor wiring. All communication ports are considered for indoor use and must only be connected to SELV circuits.

Disconnect all systems from power before manipulating and connecting them to the gateway.

Use SELV-rated NEC class 2 or limited power source (LPS) power supply.

Supply the correct voltage to power the gateway. The admitted range is detailed in the technical specifications table.

Respect the expected polarity of power and communication cables when connecting them to the gateway.

This Intesis gateway is designed for installation in an enclosure. When the device is mounted outside an enclosure, precautions should be taken to avoid electrostatic discharges to the unit in environments with static levels above 4 kV. When working in an enclosure (e.g., making adjustments, setting switches, etc.), typical anti-static precautions should be observed before touching the unit.

Binary inputs, if present, are potential-free contact. Do not connect any voltage.

Safety instructions in other languages can be found [here](#).

2.3. Admonition Messages and Symbols

**DANGER**

Instructions that must be followed to avoid an imminently hazardous situation that, if not avoided, will result in death or severe injury.

**WARNING**

Instructions that must be followed to avoid a potentially hazardous situation that, if not avoided, could result in death or severe injury.

**CAUTION**

Instruction that must be followed to avoid a potentially hazardous situation that, if not avoided, could result in minor or moderate injury.

**IMPORTANT**

Instruction that must be followed to avoid a risk of reduced functionality and/or damage to the equipment or to avoid a network security risk.

**NOTE**

Additional information which may facilitate installation and/or operation.

**TIP**

Helpful advice and suggestions.

**NOTICE**

Remarkable Information.

3. Quickstart Guide for the IN485HIT001R000 Gateway

**IMPORTANT**

Disconnect all systems from power before connecting them to the gateway.

1. Mount the gateway in the desired installation site. This gateway can be mounted over a DIN rail, a wall, or inside the indoor unit (in some indoor unit models only). See details in [Mounting \(page 7\)](#).

**NOTE**

DIN rail mounting inside a grounded cabinet or metal enclosure is recommended.

2. Connect the gateway to the BACnet/Modbus network via its EIA-485 port.
3. Connect the gateway to the wired remote controller bus (AB). See details in [Connection Procedure \(page 8\)](#).
4. Configure the gateway using the built-in DIP switches. See details in [DIP Switches \(page 11\)](#).

**NOTE**

Use the SW1-5 (DIP switch 1, position 5) to set the gateway as a BACnet or Modbus server device:

- BACnet MS/TP: Position 5 is off (down). This is the default setting.
- Modbus RTU: Position 5 is on (up).

5. Check the communication performance between the BACnet/Modbus bus and the AC system through the gateway's LED indicators. See details in [LED Indicators \(page 13\)](#).
6. The Intesis gateway is ready to be used in your system.

4. Overview



NOTE
You can set the IN485HIT001R000 as a BACnet MS/TP or a Modbus RTU server gateway using the SW1-5 (DIP switch 1, position 5). See [DIP Switches \(page 11\)](#).

Figure 1. Integration of Hitachi AC units into a BACnet installation using the Intesis IN485HIT001R000 gateway


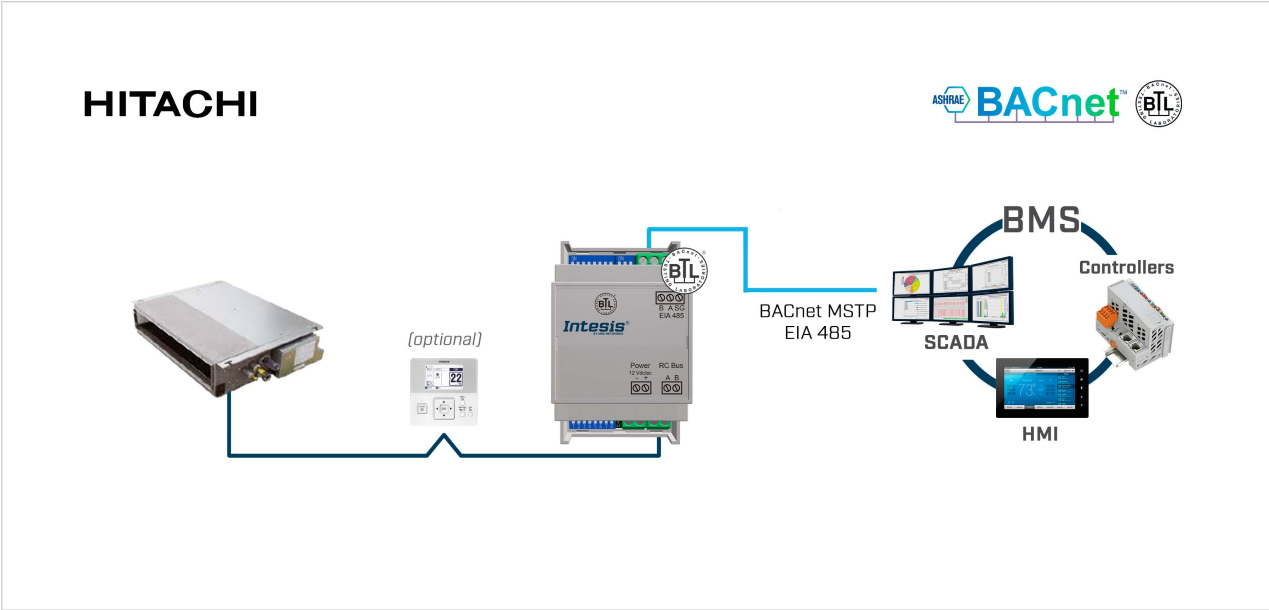


Figure 2. Integration of Hitachi AC units into a Modbus installation using the Intesis IN485HIT001R000 gateway

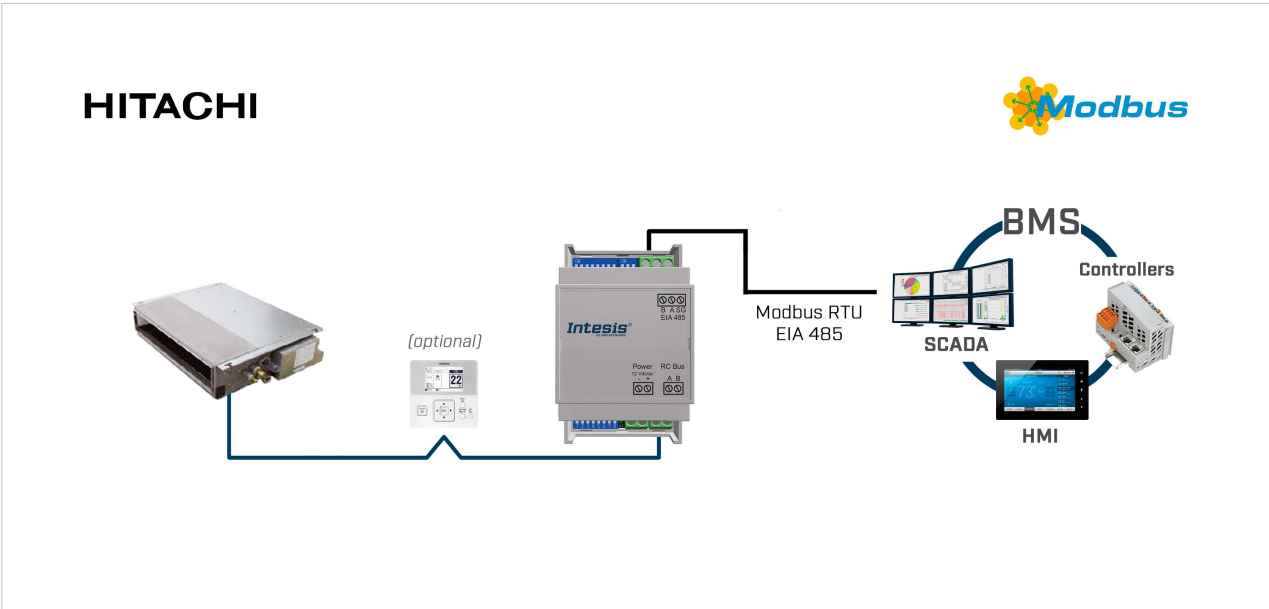

NOTE
This document assumes that the user is familiar with BACnet, Modbus, and Hitachi technologies and their technical terms.

4.1. Inside the Package

Items included:

- Intesis IN485HIT001R000 gateway
- Installation guide

4.2. Main Features

- BTL mark ensures full interoperability with BACnet devices.
- Supports BACnet MS/TP and Modbus RTU.
- Configuration with onboard DIP switches.
- Quick and easy installation: Set the DIP switches, plug, and play.
- External power supply not required.
- Simultaneous control of the AC unit by the remote controller and by BACnet MS/TP or Modbus RTU.
- Reduced dimensions: 93 x 53 x 58 mm.
- Mountable on DIN rail, wall, or even inside the indoor unit in some models of AC.
- Significant reduction of the HVAC system energy consumption.
- Three-year warranty.

4.3. Gateway Capacity

This Intesis gateway can integrate one or more Hitachi AC units and their associated elements.



NOTE

You can connect several AC units to the gateway, but they will perform as one. This means you cannot send different commands to different units.

4.4. General Functionality

With this Intesis IN485HIT001R000 gateway, you can easily integrate Hitachi commercial and VRF air conditioning systems into an installation based on BACnet MS/TP or Modbus RTU. To do so, the gateway acts as a server device of the installation itself, accessing all signals from the AC indoor unit.

The gateway is continuously polling the AC unit, storing in its memory the current status of every signal you want to track and serving this data to the installation when requested. The gateway also sends the requested commands to the indoor unit.

5. Hardware

5.1. Mounting

Mount the gateway inside the AC indoor unit, over a wall, or over a DIN rail.

**IMPORTANT**

Do not mount the gateway in air-handling units or conducts.

**NOTE**

DIN rail mounting inside a grounded metallic cabinet is recommended.

Mounting the gateway inside the AC indoor unit

1. Look for the proper place to mount the gateway, taking into consideration the following:


**IMPORTANT**

- Keep communication cables away from power and ground wires.
- Ensure the gateway does not block any mobile parts of the AC unit.

2. Place the gateway on top of a secure, plain surface.
3. Use double-sided tape to ensure a secure fixing if needed.

Wall mounting

1. Press the rear panel clips outwards until you hear a *click*.
2. Use the clip holes to screw the gateway to the wall.
3. Make sure the gateway is firmly fixed.

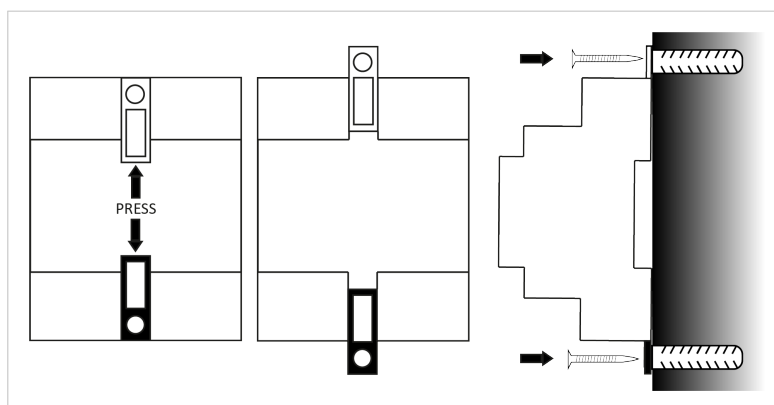


DIN rail mounting

Keep the clips in its original position.

1. Fit the gateway's top-side clip in the upper edge of the DIN rail.
2. Press the low side of the gateway gently to lock it in the DIN rail.
3. Make sure the gateway is firmly fixed.



NOTE
For some DIN rails, to complete step 2, you may need a small screwdriver or similar to pull the bottom clip down.

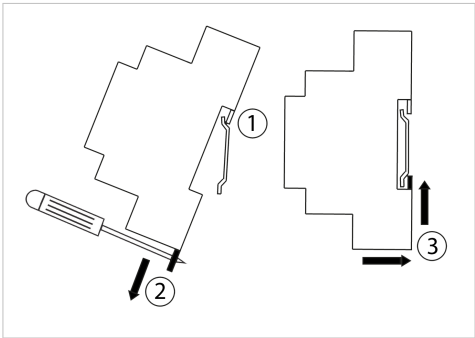

5.2. Connection Procedure




CAUTION
Disconnect all systems from power before connecting them to the gateway.



IMPORTANT
Keep communication cables away from power and ground wires.

Figure 3. Wiring diagram

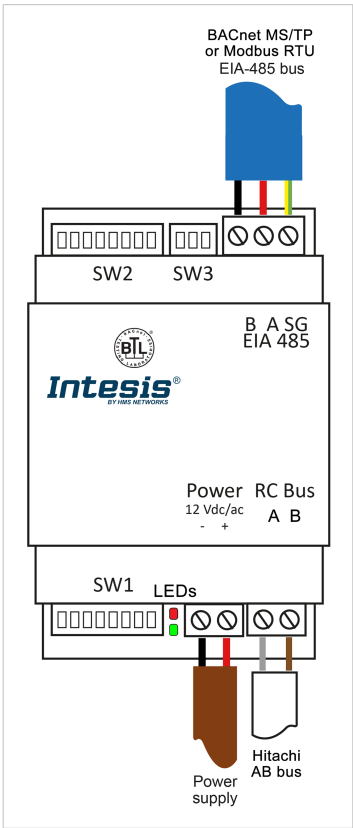

Connection to the wired remote controller (RC) bus

**NOTE**

Mount the gateway in the desired place before wiring it.

1. Connect the gateway at any point of the AB bus.

**NOTE**

- The AB bus is a two-wire bus used to connect the indoor unit and a wired RC.
- This connection has no specific polarity.
- Maximum length for the RC bus is 500 m (1640,42 ft).

Connection to the BACnet MS/TP or Modbus RTU bus

2. Connect the BACnet MS/TP or Modbus RTU bus to the EIA-485 port of the gateway.

**IMPORTANT**

Observe polarity: B-, A+, and SG for signal ground.

**IMPORTANT**

- EIA-485 bus doesn't allow loop or star topologies.
- Maximum length for the EIA-485 bus is 1200 meters (3937 feet).

3. Reconnect all systems to power.

5.3. Coexistence of the Gateway with a Remote Controller

If there is a wired remote controller (RC) connected to the indoor unit, you must set the roles for both the wired RC and the gateway:

- Set the wired RC as the header¹ and the gateway as the follower¹.
- Set the wired RC as the follower and the gateway as the header.

**NOTE**

¹ We use the terms header and follower to designate the roles also known as master and slave or main and sub.

**NOTE**

By default, the factory settings designate the gateway as the follower. Use the SW1-1 (DIP switch 1, position 1) to configure the gateway's role. See [DIP Switches \(page 11\)](#).

**NOTE**

Refer to the documentation provided with the Hitachi indoor unit to know the needed procedure to set the role of the wired RC.

**IMPORTANT**

If no wired RC is present in the installation, set the gateway as the header.

**NOTE**

Although it is not mandatory, we recommend connecting a wired RC in the bus since it may be necessary to establish proper communication between the gateway and some indoor units.

**IMPORTANT**

The roles of the gateway and the wired RC affect certain functions, such as using a temperature sensor from the BMS side or the Virtual Temperature function. To know more, see [Ambient Temperature and Virtual Temperature Function \(page 63\)](#).

5.4. Connection to an External Power Supply

**IMPORTANT**

In most cases, this gateway is powered through the remote controller bus itself, and there is no need to connect an external power supply. However, depending on the number and type of remote controllers installed, the bus could not supply the needed power.

**TIP**


Some signs indicating there is not enough power in the bus may include, for example, a malfunction of the remote controllers' display or in its performance.

If that's the case, connect a 12 VDC/AC SELV-rated NEC class 2 or Limited Power Source (LPS) power supply in the gateway's Power connector.

**IMPORTANT**

Respect polarity.

Figure 4. Power connector

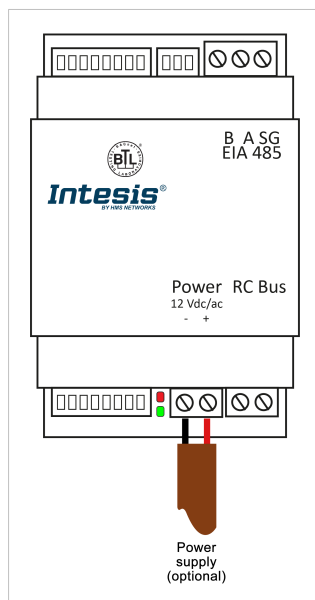

5.5. DIP Switches

The gateway includes three DIP switches: SW1 (8 switches) at the bottom and SW2 (8 switches) and SW3 (3 switches) at the top.

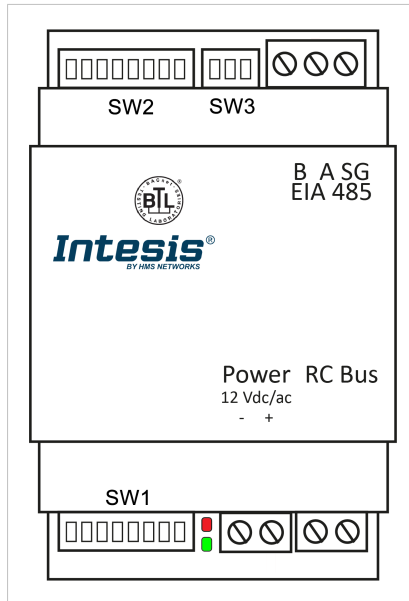


Table 1. **SW1** (P1, P2, P5): Gateway configuration; (P6 to P8): BACnet MS/TP or Modbus RTU baudrate

Binary value b0 .. b7	Position								Description	
	1	2	3	4	5	6	7	8	BACnet	Modbus
0XXXXXXXX	OFF	X	X	X	X	X	X	X	Follower in RC bus (default)	Follower in RC bus (default)
1XXXXXXXX	ON	X	X	X	X	X	X	X	Header in RC bus	Header in RC bus
01XXXXXXXX	OFF	ON	X	X	X	X	X	X	-	-
11XXXXXXXX	ON	ON	X	X	X	X	X	X	-	-
XXXX0XXXX	X	X	X	X	OFF	X	X	X	BACnet MS/TP in 485 port enabled (default)	Modbus RTU in 485 port disabled (default)
XXXX1XXXX	X	X	X	X	ON	X	X	X	BACnet MS/TP in 485 port disabled	Modbus RTU in 485 port enabled
XXXXX000	X	X	X	X	X	OFF	OFF	OFF	Autobaudrate (default)	2400 bps
XXXXX100	X	X	X	X	X	ON	OFF	OFF	9600 bps	4800 bps
XXXXX010	X	X	X	X	X	OFF	ON	OFF	19200 bps	9600 bps
XXXXX110	X	X	X	X	X	ON	ON	OFF	38400 bps	19200 bps
XXXXX001	X	X	X	X	X	OFF	OFF	ON	57600 bps	38400 bps
XXXXX101	X	X	X	X	X	ON	OFF	ON	76800 bps	57600 bps
XXXXX011	X	X	X	X	X	OFF	ON	ON	115200 bps	76800 bps
XXXXX111	X	X	X	X	X	ON	ON	ON	Autobaudrate	115200 bps



NOTE

If **Autobaudrate** is selected, the gateway will scan the network to find any other BACnet MS/TP device and will match its baudrate. Once detected, the baudrate will only be modified after a reset/reboot of the gateway.

Table 2. **SW2 (BACnet MS/TP)** (P1 to P7): BACnet MS/TP MAC address; (P8): Temperature unit (°C/°F)

Binary value	Position								BACnet address	Description
b0 .. b7	1	2	3	4	5	6	7	8		
0000000X	OFF	OFF	OFF	OFF	OFF	OFF	OFF	X	0	-
1000000X	ON	OFF	OFF	OFF	OFF	OFF	OFF	X	1	-
0100000X	OFF	ON	OFF	OFF	OFF	OFF	OFF	X	2	-
1100000X	ON	ON	OFF	OFF	OFF	OFF	OFF	X	3	-
...	...								...	-
1011111X	ON	OFF	ON	ON	ON	ON	ON	X	125	-
0111111X	OFF	ON	ON	ON	ON	ON	ON	X	126	-
1111111X	ON	ON	ON	ON	ON	ON	ON	X	127	-
XXXXXXX0	X	X	X	X	X	X	X	OFF	-	Temperature in Celsius (default)
XXXXXXX1	X	X	X	X	X	X	X	ON	-	Temperature in Fahrenheit

Table 3. **SW2 (Modbus RTU)** (P1 to P6): Modbus server address; (P7): Degree decimals setting; (P8): Temperature unit (°C/°F)

Binary value	Position								Modbus address	Description
b0 .. b7	1	2	3	4	5	6	7	8		
100000XX	ON	OFF	OFF	OFF	OFF	OFF	X	X	1	-
010000XX	OFF	ON	OFF	OFF	OFF	OFF	X	X	2	-
110000XX	ON	ON	OFF	OFF	OFF	OFF	X	X	3	-
...	...								...	-
101111XX	ON	OFF	ON	ON	ON	ON	X	X	61	-
011111XX	OFF	ON	ON	ON	ON	ON	X	X	62	-
111111XX	ON	ON	ON	ON	ON	ON	X	X	63	-
XXXXXX0X	X	X	X	X	X	X	OFF	X	-	Temperature in degrees x1 (default)
XXXXXX1X	X	X	X	X	X	X	ON	X	-	Temperature in degrees x10. Example: 19.2°=192
XXXXXXX0	X	X	X	X	X	X	X	OFF	-	Temperature in Celsius (default)
XXXXXXX1	X	X	X	X	X	X	X	ON	-	Temperature in Fahrenheit

Table 4. **SW3** (P1 to P3): BACnet/Modbus polarization and termination resistor


Binary value	Position			Description
b0 .. b2	1	2	3	
0 X X	OFF	X	X	EIA-485 bus without termination resistor. The gateway is not at one end of the EIA-485 bus (default value)
1 X X	ON	X	X	120 Ω termination resistor active. The gateway is at one end of the EIA-485 bus
X 0 0	X	OFF	OFF	No bus polarization (default value)
X 1 1	X	ON	ON	Bus polarization active

**IMPORTANT**Observe the **ON** indicator on each DIP switch as a reference.**IMPORTANT**

The DIP switch configuration will only take effect after rebooting the gateway.

5.6. LED Indicators

There are two LEDs at the lower side of the gateway, between the DIP switch block SW1 and the **Power** connector.

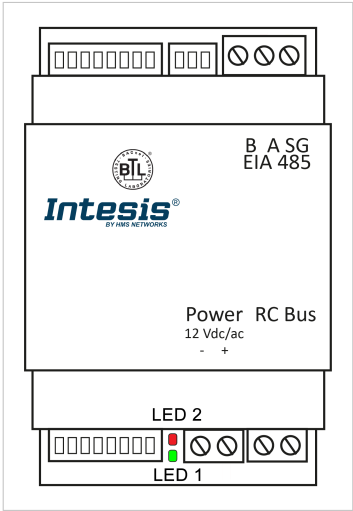

When powering the gateway up, both LEDs blink once and then turn off. After that, LEDs will behave as described in the table below:

LED	Status	Description
When the gateway is set for BACnet MS/TP		
L1 Green	ON	EIA-485 bus link performed
	Flickering	Activity on the EIA-485 bus
	OFF	EIA-485 bus link not performed
L2 Red	ON	AC communication error
	Blinking	AC unit error
	Flashing	AC communication OK
When the gateway is set for Modbus RTU		
L1 Green	Blinking	Communication error Any error in the AC unit
	Flashing	Normal operation
L1 Green + L2 Red	Pulse	Gateway startup



LED PATTERNS

- **ON:** 100% on
- **Flickering:** irregular cycle (90% on - 10% off approx)
- **Blinking:** 50% on - 50% off
- **Flashing:** 10% on - 90% off
- **OFF:** 100% off

5.7. Technical Specifications

Housing	Plastic, type PC (UL 94 V-0) Net dimensions (HxWxD): 93 x 53 x 58 mm / 3.7 x 2.1 x 2.3" Color: Light grey. RAL 7035
Weight	85 g (3 oz)
Terminal wiring	Wire cross-section/gauge per terminal: One core: 0.2 .. 2.5 mm ² (24 .. 11 AWG) Two cores: 0.2 .. 1.5mm ² (24 .. 15 AWG) Three cores: Not permitted Use solid or stranded wires (twisted or with ferrule).
External power supply (optional)	SELV-rated NEC class 2 or limited power source (LPS) power supply. 12 VDC/AC; 0.1 A
Mounting	Wall, DIN rail, or inside the indoor unit
EIA-485 port BACnet MS/TP - Modbus RTU	1 x pluggable terminal block (3 poles: B, A, and SG)
AC unit port	1 x RC bus pluggable terminal block (2 poles)
LED indicators	2 x Communication status
DIP switches	SW1: Gateway and baudrate configuration SW2: BACnet/Modbus address and temperature unit SW3: Bus polarization and termination
Operational and storage temperature	Celsius: Op: 0 to +70°C; St: -20 to 85°C Fahrenheit: Op: 32 to 158°F; St: -4 to 185°F
Operational and storage humidity	5% to 95% RH non-condensing
Isolation Voltage	1500 VDC
Isolation resistance	1000 MΩ

5.8. Dimensions

Net dimensions (HxWxD):


Millimeters: 93 x 53 x 58 mm

Inches: 3.66 x 2.08 x 2.28"



IMPORTANT

Leave enough clear space to wire the gateway easily and for the subsequent manipulation of elements such as connectors, DIP switches, etc.

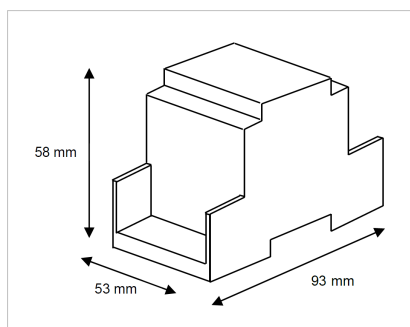

6. Restore the Factory Settings

To restore the gateway to its factory settings, proceed as follows:

1. Set all switches from DIP switches SW1 and SW2 to the ON position.
2. Reboot the gateway:
 - a. Power it OFF.
 - b. Power it ON.

**NOTE**

To turn the gateway OFF, disconnect it from the AC unit and from the power supply, if there is one. To turn the gateway ON, reestablish those connections.

3. After the reboot, LEDs will blink with the SOS Morse sequence:
 - a. Three short blinks
 - b. Three longer blinks
 - c. Three short blinks
4. Set all switches from DIP switches SW1 and SW2 DIP to the OFF position before 30 seconds pass.

**IMPORTANT**

If you take longer than 30 seconds, all LEDs will turn off, meaning that the procedure has failed. To retry it, go to step 1 and begin the procedure again.

After this procedure, the LED will flash red, meaning that the gateway is already restored to the factory settings.

To continue working with the gateway, proceed as usual:

1. Set the DIP switches again depending on the desired configuration.
2. Reset the device:
 - a. Power it OFF.
 - b. Power it ON.

7. BACnet Specifications

The following sections provide the gateway's specifications when it is set for BACnet MS/TP.

7.1. Objects

7.1.1. Supported Object Types

Object type	ID
Analog-Input	0
Analog-Output	1
Analog-Value	2
Binary-Input	3
Binary-Output	4
Binary-Value	5
Device	8
Multistate-Input	13
Multistate-Output	14
Multistate-Value	19

7.1.2. Member Objects

7.1.2.1. Type: Gateway

Object name	Description	Object type	Object instance
IN485HIT001R000	Hitachi commercial and VRF gateway	Device	246000 (default)

7.1.2.2. Type: Indoor Unit

Object name	Object type	Object instance
OnOff_status	BI	0
OnOff_command	BO	0
Mode_status	MI	0
Mode_command	MO	0
SetPoint_status	AI	0
User_Setpoint_status	AI	17
Setpoint_command	AO	0
VirtualTempActive	BI	14
FanSpeed_status	MI	1
FanSpeed_command	MO	1
AirDirectionUD_status	MI	2
AirDirectionUD_command	MO	2
RoomTemperature_status	AI	1
RoomTemperature_command	AO	1
ErrorCode	AI	2
ErrorCodeM	MI	4
ErrorActive	BI	1
ErrorAddress	AI	2
ErrorReset	BO	5

Object name	Object type	Object instance
OnTimeCounter	AV	0
FilterSign	BI	6
FilterSingAddress	AI	18
FilterReset	BO	4
Occupancy	MV	0
OccupiedCoolSetpoint	AV	1
OccupiedHeatSetpoint	AV	2
UnoccupiedCoolSetpoint	AV	3
UnoccupiedHeatSetpoint	AV	4
OccupancyContinuousCheck	BV	0
UnoccupiedDeadBandAction	BV	1
LockRemoteControl	BV	2
SerialNumber	AI	11
DIP_SW_S1_status	AI	9
DIP_SW_S2_status	AI	10
ResetBehavior	MV	4

7.1.3. Objects and Properties

7.1.3.1. Hitachi AC Gateway (Device Object Type)

Object_Identifier: The gateway can be identified in the BACnet network automatically or manually:

- **Automatic addressing (default):** This mode uses a base address of 246000 + the MAC address number selected in the DIP switch SW2.
- **Manual addressing:** The gateway switches to this mode when this property receives a value from the BACnet side.



IMPORTANT

During the manual addressing mode, the gateway will not consider the MAC address configured with the DIP switch SW2.



IMPORTANT

If the **Object_Identifier** is overwritten from the BACnet side, the DIP switch SW2 configuration will not be considered for the Device instance calculation until the gateway is reset to the factory settings. See [Restore the Factory Settings \(page 15\)](#).

Object_name: In the **Device Object**, is configurable writing directly on this property.

Description: In the **Device Object**, is configurable writing directly on the property. Max. length: 63 characters.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	Device, 246000 (default value)	R	W
Object_Name	CharacterString	IN485HIT001R000	R	W
Object_Type	BACnetObjectType	DEVICE (8) (Device Object Type)	R	R
System_Status	BACnetDeviceStatus	OPERATIONAL (0)	R	R
Vendor_Name	CharacterString	HMS Industrial Networks SLU	R	R
Vendor_Identifier	Unsigned16	246	R	R
Model_Name	CharacterString	IN485HIT001R000	R	R
Firmware_Revision	CharacterString	1.0.0.0	R	R
Application_Software_Version	CharacterString	1.0.0.0	R	R
Location	CharacterString	""	O	-
Description	CharacterString	RC interface Hitachi AC interface	O	W
Protocol_Version	Unsigned	1	R	R
Protocol_Revision	Unsigned	12	R	R
Protocol_Services_Supported	BACnetServiceSupported	-	R	R
Protocol_Object_Types_Supported	BACnetObjectTypes Supported	Refer to section Supported Object Types (page 16)	R	R
Object_List	BACnetArray[N] of BACnetObjectIdentifier	BACnetARRAY[N]	R	R
Structured_Object_List	BACnetArray[N] of BACnetObjectIdentifier	-	O	-
Max_APDU_Length_Accepted	Unsigned	480 for MS/TP	R	R
Segmentation_Supported	BACnetSegmentation	SEGMENTED-BOTH (0)	R	R
Max_Segments_accepted	Unsigned	16	O	R
VT_Classes_Supported	List of BACnetVTClass	-	O	-
Active_VT_Sessions	List of BACnetVTSession	-	O	-
Local_Date	Date	-	O	-
Local_Time	Time	-	O	-

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
UTC_Offset	INTEGER	-	O	-
Daylight_Savings_Status	BOOLEAN	-	O	-
APDU_Segment_Timeout	Unsigned	3000	R	R
APDU_Timeout	Unsigned	3000	R	R
Number_of_APDU_Retries	Unsigned	3	R	R
List_Of_Session_Keys	List of BACnetSessionKey	-	O	-
Time_Synchronization_Recipients	List of BACnetRecipient	-	O	-
Max_Master	Unsigned	32	R	W
Max_Info_Frames	Unsigned	1	O	R
Device_Address_Binding	List of BACnetAddressBinding	NULL (empty)	R	R
Database_Revision	Unsigned	0	R	R
Configuration_Files	BACnetArray[N] of BACnetObjectIdentifier	-	O	-
Last_Restore_Time	BACnetTimeStamp	-	O	-
Backup_Failure_Timeout	Unsigned16	-	O	-
Active_COV_Subscriptions	List of BACnetCOVSubscription	List of BACnetCOVSubscription	O	R
Slave_Proxy_Enable	BACnetArray[N] of BOOLEAN	-	O	-
Manual_Slave_Address_Binding	List of BACnetAddressBinding	-	O	-
Auto_Slave_Discovery	BACnetArray[N] of BOOLEAN	-	O	-
Slave_Address_Binding	BACnetAddressBinding	-	O	-
Last_Restart_Reason	BACnetRestartReason	-	O	-
Time_Of_Device_Restart	BACnetTimeStamp	-	O	-
Restart_Notification_Recipients	List of BACnetRecipient	-	O	-
UTC_Time_Synchronization_Recipients	List of BACnetRecipient	-	O	-
Time_Synchronization_Interval	Unsigned	-	O	-
Align_Intervals	BOOLEAN	-	O	-
Interval_Offset	Unsigned	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.2. OnOff_status (Binary Input Object Type)

It indicates if the indoor unit is turned on or off.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Binary Input, 0)	R	R
Object_Name	CharacterString	OnOff_status	R	R
Object_Type	BACnetObjectType	BINARY_INPUT (3)	R	R
Present_Value	BACnetBinaryPV	INACTIVE (0) / ACTIVE (1)	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE/TRUE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0), UNRELIABLE_OTHER (7)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Polarity	BACnetPolarity	NORMAL (0)	R	R
Inactive_Text	CharacterString	Off	O	R
Active_Text	CharacterString	On	O	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.3. OnOff_command (Binary Output Object Type)

It turns the indoor unit on or off.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Binary Output, 0)	R	R
Object_Name	CharacterString	OnOff_command	R	R
Object_Type	BACnetObjectType	BINARY_OUTPUT (4)	R	R
Present_Value	BACnetBinaryPV	INACTIVE (0) / ACTIVE (1)	R	W
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Polarity	BACnetPolarity	NORMAL (0)	R	R
Inactive_Text	CharacterString	Off	O	R
Active_Text	CharacterString	On	O	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Minimum_Off_Time	Unsigned32	-	O	-
Minimum_On_Time	Unsigned32	-	O	-
Priority_Array	BACnetPriorityArray	BACnetPriorityArray	R	R
Relinquish_Default	BACnetBinaryPV	INACTIVE (0)	R	R
Time Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Feedback_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.4. Mode_status (Multistate Input Object Type)

It indicates the indoor unit's current mode.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Multistate Input, 0)	R	R
Object_Name	CharacterString	Mode_status	R	R
Object_Type	BACnetObjectType	MULTISTATE_INPUT (13)	R	R
Present_Value	Unsigned	1 .. 5	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE/TRUE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0), UNRELIABLE_OTHER(7)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Number_Of_States	Unsigned	5	R	R
State_Text	BACnetArray[N] of CharacterString	Check the Mode status table below.	O	R
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Values	List of Unsigned	-	O	-
Fault_Values	List of Unsigned	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

Table 5. Mode status

Present_Value	State_Text
1	Heat
2	Cool
3	Fan
4	Dry
5	Auto



NOTE

When setting the control mode in Auto, the AC unit itself decides the appropriate status.

7.1.3.5. Mode_command (Multistate Output Object Type)

It sets the AC indoor unit's mode.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Multistate Output,0)	R	R
Object_Name	CharacterString	Mode_command	R	R
Object_Type	BACnetObjectType	MULTISTATE_OUTPUT (14)	R	R
Present_Value	Unsigned	1 .. 5	R	W
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Number_Of_States	Unsigned	5	R	R
State_Text	BACnetArray[N] of CharacterString	Check the Mode command table below	O	R
Priority_Array	BACnetPriorityArray	BACnetPriorityArray	R	R
Relinquish_Default	Unsigned	1	R	R
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Feedback_Value	Unsigned	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

Table 6. Mode command

Present_Value	State_Text
1	Heat
2	Cool
3	Fan
4	Dry
5	Auto



NOTE

When setting the control mode in Auto, the AC unit itself decides the appropriate status.

7.1.3.6. Setpoint_status (Analog Input Object Type)

It reports the temperature setpoint requested to the indoor unit.



NOTE

To know more, see [Considerations on Temperature Signals \(page 67\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Input, 0)	R	R
Object_Name	CharacterString	SetPoint_status	R	R
Object_Type	BACnetObjectType	ANALOG_INPUT (0)	R	R
Present_Value	REAL	Cool/Dry/Fan: 19 .. 30°C / 66.2 .. 86°F Heat: 17 .. 30°C / 62.6 .. 86°F  NOTE This range may change depending on the indoor unit.	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE/TRUE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0), UNRELIABLE_OTHER (7)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Update_Interval	Unsigned	-	O	-
Units	BACnetEngineeringUnits	Celsius degrees (62) Fahrenheit degrees (64)	R	R
Min_Pres_Value	REAL	17°C / 62.6°F	O	R
Max_Pres_Value	REAL	30°C / 86°F	O	R
Resolution	REAL	-	O	-
COV_Increment	REAL	0	O	W
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-



NOTE

You can set the temperature scale in Celsius or Fahrenheit via the DIP switches. More information in [DIP Switches \(page 11\)](#).

7.1.3.7. UserSetpoint_status (Analog Input Object Type)

It reports the value written in the Setpoint_command object.



NOTE

To know more, see [Considerations on Temperature Signals \(page 67\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Input, 17)	R	R
Object_Name	CharacterString	UserSetPoint_status	R	R
Object_Type	BACnetObjectType	ANALOG_INPUT (0)	R	R
Present_Value	REAL	Cool/Dry/Fan: 19 .. 30°C / 66.2 .. 86°F Heat: 17 .. 30°C / 62.6 .. 86°F  NOTE This range may change depending on the indoor unit.	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0) UNRELIABLE_OTHER (7)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Update_Interval	Unsigned	300	O	-
Units	BACnetEngineeringUnits	Celsius degrees (62) Fahrenheit degrees (64)	R	R
Min_Pres_Value	REAL	17°C / 62.6°F	O	-
Max_Pres_Value	REAL	30°C / 86°F	O	-
Resolution	REAL	-	O	-
COV_Increment	REAL	0	O	W
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-



NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

7.1.3.8. Setpoint_command (Analog Output Object Type)

It is used to request a temperature setpoint from the BACnet side.



NOTE

To know more, see [Considerations on Temperature Signals \(page 67\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Output, 0)	R	R
Object_Name	CharacterString	SetPoint_command	R	R
Object_Type	BACnetObjectType	ANALOG_OUTPUT (1)	R	R
Present_Value	REAL	Cool/Dry/Fan: 19 .. 30°C / 66.2 .. 86°F Heat: 17 .. 30°C / 62.6 .. 86°F  NOTE This range may change depending on the indoor unit.	W	W
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Update_Interval	Unsigned	-	O	-
Units	BACnetEngineeringUnits	Celsius degrees (62) Fahrenheit degrees (64)	R	R
Min_Pres_Value	REAL	17°C / 62.6°F	O	R
Max_Pres_Value	REAL	30°C / 86°F	O	R
Resolution	R	-	O	-
COV_Increment	REAL	0	O	W
Priority_Array	BACnetPriorityArray	BACnetPriorityArray	R	R
Relinquish_Default	Unsigned	22	R	R
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-



NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

7.1.3.9. VirtualTemperatureActive (Binary Input Object Type)

It indicates if the Virtual Temperature function is active or inactive.



NOTE

The Virtual Temperature function allows the gateway to set the reference temperature using the value reported by a sensor connected to the BMS.

For more information, see [Ambient Temperature and Virtual Temperature Function \(page 63\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Binary Input, 14)	R	R
Object_Name	CharacterString	VirtualTempActive	R	R
Object_Type	BACnetObjectType	BINARY_INPUT (3)	R	R
Present_Value	BACnetBinaryPV	INACTIVE (0) / ACTIVE (1)	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0) UNRELIABLE_OTHER (7)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Polarity	BACnetPolarity	NORMAL (0)	R	R
Inactive_Text	CharacterString	No	O	R
Active_Text	CharacterString	Yes	O	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.10. FanSpeed_status (Multistate Input Object Type)

It indicates the indoor unit's fan speed.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Multistate Input, 1)	R	R
Object_Name	CharacterString	FanSpeed_status	R	R
Object_Type	BACnetObjectType	MULTISTATE_INPUT (13)	R	R
Present_Value	Unsigned	1 .. 5	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE/TRUE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0), UNRELIABLE_OTHER (7)	O	R
Out_Of_Service	BOOLEAN	FALSE/TRUE	R	R
Number_Of_States	Unsigned	5	R	R
State_Text	BACnetArray[N] of CharacterString	Check the Fan speed status table below.	O	R
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Values	List of Unsigned	-	O	-
Fault_Values	List of Unsigned	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

Table 7. Fan speed status

Present_Value	State_Text
1	Auto
2	Fan Speed 1
3	Fan Speed 2
4	Fan Speed 3
5	Fan Speed 4

7.1.3.11. FanSpeed_command (Multistate Output Object Type)

It sets the indoor unit's fan speed.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Multistate Output, 1)	R	R
Object_Name	CharacterString	FanSpeed_command	R	R
Object_Type	BACnetObjectType	MULTISTATE_OUTPUT (14)	R	R
Present_Value	Unsigned	1 .. 5	R	W
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Number_Of_States	Unsigned	5	R	R
State_Text	BACnetArray[N] of CharacterString	Check the Fan speed command table below	O	R
Priority_Array	BACnetPriorityArray	BACnetPriorityArray	R	R
Relinquish_Default	Unsigned	1	R	R
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Feedback_Value	Unsigned	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

Table 8. Fan speed command

Present_Value	State_Text
1	Auto
2	Fan Speed 1
3	Fan Speed 2
4	Fan Speed 3
5	Fan Speed 4
6	Fan Speed 5

7.1.3.12. AirDirectionUD_status (Multistate Input Object Type)

It indicates the indoor unit's vertical air direction (up-down) status.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Multistate Input, 2)	R	R
Object_Name	CharacterString	AirDirectionUD_status	R	R
Object_Type	BACnetObjectType	MULTISTATE_INPUT(13)	R	R
Present_Value	Unsigned	1 .. 8	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE/TRUE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0), UNRELIABLE_OTHER (7)	O	R
Out_Of_Service	BOOLEAN	FALSE/TRUE	R	R
Number_Of_States	Unsigned	8	R	R
State_Text	BACnetArray[N] of CharacterString	Check the Air direction status table below.	O	R
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Values	List of Unsigned	-	O	-
Fault_Values	List of Unsigned	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

Table 9. Air direction up-down status

Present_Value	State_Text
1	POS1
2	POS2
3	POS3
4	POS4
5	POS5
6	POS6
7	POS7
8	SWING

7.1.3.13. AirDirectionUD_command (Multistate Output Object Type)

It sets the indoor unit's vertical air direction (up-down).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Multistate Output, 2)	R	R
Object_Name	CharacterString	AirDirectionUD_command	R	R
Object_Type	BACnetObjectType	MULTISTATE_OUTPUT (14)	R	R
Present_Value	Unsigned	1 .. 8	R	W
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Number_Of_States	Unsigned	8	R	R
State_Text	BACnetArray[N] of CharacterString	Check the Air direction command table below	O	R
Priority_Array	BACnetPriorityArray	-	R	R
Relinquish_Default	Unsigned	-	R	R
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Feedback_Value	Unsigned	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

Table 10. Air direction up-down command

Present_Value	State_Text
1	POS1
2	POS2
3	POS3
4	POS4
5	POS5
6	POS6
7	POS7
8	SWING

7.1.3.14. RoomTemperature_status (Analog Input Object Type)

It reports the ambient temperature perceived by the sensor from the AC system side. It can be reported by the indoor unit or the wired remote controller's sensor.



NOTE

To know more, see [Ambient Temperature and Virtual Temperature Function \(page 63\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Input, 1)	R	R
Object_Name	CharacterString	RoomTemperature_status	R	R
Object_Type	BACnetObjectType	ANALOG_INPUT (0)	R	R
Present_Value	REAL	0 .. 40°C / 32 .. 104°F	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE/TRUE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0), UNRELIABLE_OTHER (7)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Update_Interval	Unsigned	-	O	-
Units	BACnetEngineeringUnits	Celsius degrees (62) Fahrenheit degrees (64)	R	R
Min_Pres_Value	REAL	0°C / 32°F	O	-
Max_Pres_Value	REAL	40°C / 104°F	O	-
Resolution	REAL	-	O	-
COV_Increment	REAL	0	O	W
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-



NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

7.1.3.15. RoomTemperature_command (Analog Output Object Type)

It is used to write the ambient temperature perceived by a sensor from the BACnet side.



NOTE

To know more, see [Considerations on Temperature Signals \(page 67\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Output, 1)	R	R
Object_Name	CharacterString	RoomTemperature_command	R	R
Object_Type	BACnetObjectType	ANALOG_OUTPUT (1)	R	R
Present_Value	REAL	0 .. 40°C / 32 .. 104°F	R	W
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Update_Interval	Unsigned	-	O	-
Units	BACnetEngineeringUnits	Celsius degrees (62) Fahrenheit degrees (64)	R	R
Min_Pres_Value	REAL	0°C / 32°F	O	-
Max_Pres_Value	REAL	40°C / 104°F	O	-
Resolution	REAL	-	O	-
COV_Increment	REAL	0	O	W
Priority_Array	BACnetPriorityArray	BACnetPriorityArray	R	R
Relinquish_Default	Unsigned	-32768	R	W
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-



NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

7.1.3.16. ErrorCode (Analog Input Object Type)

It indicates the AC system's current error.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Input, 2)	R	R
Object_Name	CharacterString	ErrorCode	R	R
Object_Type	BACnetObjectType	ANALOG_INPUT (0)	R	R
Present_Value	REAL	-1 .. 349	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Update_Interval	Unsigned	300	O	-
Units	BACnetEngineeringUnits	NO_UNITS (95)	R	R
Min_Pres_Value	REAL	-1	O	-
Max_Pres_Value	REAL	6846	O	-
Resolution	REAL	-	O	-
COV_Increment	REAL	0	O	W
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-



NOTICE

For more information on each error code, see [Error Codes \(page 69\)](#).

7.1.3.17. ErrorCodeM (Multistate Input Object Type)

It indicates the AC system's current error.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Multistate Input, 4)	R	R
Object_Name	CharacterString	ErrorCodeM	R	R
Object_Type	BACnetObjectType	MULTISTATE_INPUT(13)	R	R
Present_Value	Unsigned	1 .. 45	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Number_Of_States	Unsigned	44	R	R
State_Text	BACnetArray[N] of CharacterString	Check the Error codes table below	O	R
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Values	List of Unsigned	-	O	-
Fault_Values	List of Unsigned	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

Table 11. Error Codes

ErrorCodeM	State_Text	ErrorCodeM	State_Text	ErrorCodeM	State_Text
1	-	16	19	31	45
2	CommError	17	21	32	46
3	1	18	22	33	47
4	2	19	23	34	51
5	3	20	24	35	52
6	4	21	29	36	53
7	5	22	30	37	54
8	6	23	31	38	56
8	6.	24	32	39	57
9	7	25	35	40	58
10	8	26	36	41	b0
11	9	27	38	42	b1
12	11	28	39	43	b5
13	12	29	43	44	EE
14	13	30	44		

7.1.3.18. ErrorActive (Binary Input Object Type)

It indicates if there is an active error in the AC system.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Binary Input, 1)	R	R
Object_Name	CharacterString	ErrorActive	R	R
Object_Type	BACnetObjectType	BINARY_INPUT (3)	R	R
Present_Value	BACnetBinaryPV	INACTIVE (0) / ACTIVE (1)	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Polarity	BACnetPolarity	NORMAL (0)	R	R
Inactive_Text	CharacterString	No	O	R
Active_Text	CharacterString	Error	O	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.19. ErrorAddress (Analog Input Object Type)

It indicates the address of the indoor unit which is reporting the error.

Property Identifier	Property Datatype	Value	ASHRAE	Intesis
Object_Identifier	BACnetObjectIdentifier	(Analog Input, 4)	R	R
Object_Name	CharacterString	ErrorAddress	R	R
Object_Type	BACnetObjectType	ANALOG_INPUT (0)	R	R
Present_Value	REAL	-	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE/TRUE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0) UNRELIABLE_OTHER (7)	O	R
Out_Of_Service	BOOLEAN	FALSE/TRUE	R	R
Update_Interval	Unsigned	-	O	-
Units	BACnetEngineeringUnits	NO_UNITS (95)	R	R
Min_Pres_Value	REAL	-	O	-
Max_Pres_Value	REAL	-	O	-
Resolution	REAL	-	O	-
COV_Increment	REAL	0	O	W
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.20. ErrorReset (Binary Output Object Type)

It resets the error signal.

Property Identifier	Property Datatype	Value	ASHRAE	Intesis
Object_Identifier	BACnetObjectIdentifier	(Binary Output, 5)	R	R
Object_Name	CharacterString	ErrorReset	R	R
Object_Type	BACnetObjectType	BINARY_OUTPUT (4)	R	R
Present_Value	BACnetBinaryPV	INACTIVE (0) / ACTIVE (1)	R	W
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Polarity	BACnetPolarity	NORMAL (0)	R	R
Inactive_Text	CharacterString	Normal	O	R
Active_Text	CharacterString	Reset	O	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Minimum_Off_Time	Unsigned32	-	O	-
Minimum_On_Time	Unsigned32	-	O	-
Priority_Array	BACnetPriorityArray	BACnetPriorityArray	R	R
Relinquish_Default	BACnetBinaryPV	INACTIVE (0)	R	R
Time Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Feedback_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.21. OnTimeCounter (Analog Value Object Type)

It indicates the AC unit running time.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Value, 0)	R	R
Object_Name	CharacterString	OnTimeCounter	R	R
Object_Type	BACnetObjectType	ANALOG_VALUE (2)	R	R
Present_Value	REAL	0 .. 65535	R	R/W
Description	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Update_Interval	Unsigned	-	O	-
Units	BACnetEngineeringUnits	Hours (71)	R	R
Min_Pres_Value	REAL	0	O	-
Max_Pres_Value	REAL	65535	O	-
Resolution	REAL	-	O	-
COV_Increment	REAL	0	O	W
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.22. FilterSign (Binary Input Object Type)

It indicates the status of the filter.

Property Identifier	Property Datatype	Value	ASHRAE	Intesis
Object_Identifier	BACnetObjectIdentifier	(Binary Input, 1)	R	R
Object_Name	CharacterString	FilterSign	R	R
Object_Type	BACnetObjectType	BINARY_OUTPUT (4)	R	R
Present_Value	BACnetBinaryPV	INACTIVE (0) / ACTIVE (1)	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE/TRUE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0) UNRELIABLE_OTHER (7)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Polarity	BACnetPolarity	NORMAL (0)	R	R
Inactive_Text	CharacterString	OK	O	R
Active_Text	CharacterString	Dirty	O	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Feedback_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.23. FilterSignAddress (Analog Input Object Type)

It indicates the AC indoor unit address reporting the filter signal.

Property Identifier	Property Datatype	Value	ASHRAE	Intesis
Object_Identifier	BACnetObjectIdentifier	(Analog Input, 18)	R	R
Object_Name	CharacterString	FilterSignAddress	R	R
Object_Type	BACnetObjectType	ANALOG_INPUT (0)	R	R
Present_Value	REAL	-	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0) UNRELIABLE_OTHER (7)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Update_Interval	Unsigned	-	O	-
Units	BACnetEngineeringUnits	-	R	R
Min_Pres_Value	REAL	-	O	-
Max_Pres_Value	REAL	-	O	-
Resolution	REAL	-	O	-
COV_Increment	REAL	0	O	W
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.24. FilterReset (Binary Output Object Type)

It resets the filter signal.

Property Identifier	Property Datatype	Value	ASHRAE	Intesis
Object_Identifier	BACnetObjectIdentifier	(Binary Output, 4)	R	R
Object_Name	CharacterString	FilterReset	R	R
Object_Type	BACnetObjectType	BINARY_OUTPUT (4)	R	R
Present_Value	BACnetBinaryPV	INACTIVE (0) / ACTIVE (1)	W	W
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Polarity	BACnetPolarity	NORMAL (0)	R	R
Inactive_Text	CharacterString	Normal	O	R
Active_Text	CharacterString	Reset	O	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Minimum_Off_Time	Unsigned32	-	O	-
Minimum_On_Time	Unsigned32	-	O	-
Priority_Array	BACnetPriorityArray	BACnetPriorityArray	R	R
Relinquish_Default	BACnetBinaryPV	INACTIVE (0)	R	R
Time Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Feedback_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.25. Occupancy (Multistate Value Object Type)

It indicates the current occupancy status.



NOTE

To know more, see [Occupancy Function \(page 55\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	{Multistate Value, 0}	R	R
Object_Name	CharacterString	Occupancy	R	R
Object_Type	BACnetObjectType	MULTISTATE_VALUE (19)	R	R
Present_Value	BACnetBinaryPV	1 .. 3	R	R/W
Description	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Number_Of_States	Unsigned	3	R	R
State_Text	BACnetArray[N] of CharacterString	Check the Occupancy values table below	O	R
Priority_Array	BACnetPriorityArray	-	R	-
Relinquish_Default	Unsigned	-	R	-
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Value	Unsigned	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

Table 12. Occupancy values

Present_Value	State_Text
1	Occupied
2	Unoccupied
3	Disabled

7.1.3.26. OccupiedCoolSetPoint (Analog Value Object Type)

It indicates the temperature setpoint when the room is occupied, the cool mode is selected, and the occupancy object is enabled.



NOTE

To know more, see [Occupancy Function \(page 55\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Value, 1)	R	R
Object_Name	CharacterString	OccupiedCoolSetPoint	R	R
Object_Type	BACnetObjectType	ANALOG_VALUE (2)	R	R
Present_Value	REAL	16 .. 32°C / 60 .. 90°F	R	R/W
Description	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Update_Interval	Unsigned	-	O	-
Units	BACnetEngineeringUnits	Degrees Celsius (62) Degrees Fahrenheit (64)	R	R
Min_Pres_Value	REAL	0	O	-
Max_Pres_Value	REAL	65535	O	-
Resolution	REAL	-	O	-
COV_Increment	REAL	0	O	W
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-



NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

7.1.3.27. OccupiedHeatSetPoint (Analog Value Object Type)

It indicates the temperature setpoint when the room is occupied, the heat mode is selected, and the occupancy object is enabled.



NOTE

To know more, see [Occupancy Function \(page 55\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Value, 2)	R	R
Object_Name	CharacterString	OccupiedHeatSetPoint	R	R
Object_Type	BACnetObjectType	ANALOG_VALUE (2)	R	R
Present_Value	REAL	16 .. 32°C / 60 .. 90°F	R	R/W
Description	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Update_Interval	Unsigned	-	O	-
Units	BACnetEngineeringUnits	Degrees Celsius (62) Degrees Fahrenheit (64)	R	R
Min_Pres_Value	REAL	16°C / 60°F	O	-
Max_Pres_Value	REAL	32°C / 90°F	O	-
Resolution	REAL	-	O	-
COV_Increment	REAL	0	O	W
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-



NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

7.1.3.28. UnoccupiedCoolSetPoint (Analog Value Object Type)

It indicates the setpoint when the room is unoccupied, the cool mode is selected, and the occupancy object is enabled.



NOTE

To know more, see [Occupancy Function \(page 55\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Value, 3)	R	R
Object_Name	CharacterString	UnoccupiedCoolSetPoint	R	R
Object_Type	BACnetObjectType	ANALOG_VALUE (2)	R	R
Present_Value	REAL	16 .. 32°C / 60 .. 90°F	R	R/W
Description	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Update_Interval	Unsigned	-	O	-
Units	BACnetEngineeringUnits	Degrees Celsius (62) Degrees Fahrenheit (64)	R	R
Min_Pres_Value	REAL	16°C / 60°F	O	-
Max_Pres_Value	REAL	32°C / 90°F	O	-
Resolution	REAL	-	O	-
COV_Increment	REAL	0	O	W
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-



NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

7.1.3.29. UnoccupiedHeatSetPoint (Analog Value Object Type)

It indicates the setpoint temperature when the room is unoccupied, the heat mode is selected, and the occupancy object is enabled.



NOTE

To know more, see [Occupancy Function \(page 55\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Value, 4)	R	R
Object_Name	CharacterString	UnoccupiedHeatSetPoint	R	R
Object_Type	BACnetObjectType	ANALOG_VALUE (2)	R	R
Present_Value	REAL	16 .. 32°C / 60 .. 90°F	R	R/W
Description	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Update_Interval	Unsigned	-	O	-
Units	BACnetEngineeringUnits	Degrees Celsius (62) Degrees Fahrenheit (64)	R	R
Min_Pres_Value	REAL	16°C / 60°F	O	-
Max_Pres_Value	REAL	32°C / 90°F	O	-
Resolution	REAL	-	O	-
COV_Increment	REAL	0	O	W
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
High_Limit	REAL	-	O	-
Low_Limit	REAL	-	O	-
Deadband	REAL	-	O	-
Limit_Enable	BACnetLimitEnable	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-



NOTE

You can set the temperature scale in Celsius or Fahrenheit scale via DIP switches. More information in [DIP Switches \(page 11\)](#).

7.1.3.30. OccupancyContinuousCheck (Binary Value Object Type)

It indicates if the system is continuously checking the setpoint and occupancy conditions.



NOTE

To know more, see [Occupancy Function \(page 55\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Binary Value, 0)	R	R
Object_Name	CharacterString	OccupancyContinuousCheck	R	R
Object_Type	BACnetObjectType	BINARY_VALUE (5)	R	R
Present_Value	BACnetBinaryPV	INACTIVE (0) / ACTIVE (1)	R	R/W
Description	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Inactive_Text	CharacterString	Disabled	O	R
Active_Text	CharacterString	Enabled	O	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Minimum_Off_Time	Unsigned32	-	O	-
Minimum_On_Time	Unsigned32	-	O	-
Priority_Array	BACnetPriorityArray	BACnetPriorityArray	R	-
Relinquish_Default	BACnetBinaryPV	INACTIVE (0)	R	-
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.31. UnoccupiedDeadbandAction (Binary Value Object Type)

It indicates the action to be performed when Unoccupancy is enabled, and Room Temperature is within the deadband.



NOTE

To know more, see [Occupancy Function \(page 55\)](#).

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Binary Value, 1)	R	R
Object_Name	CharacterString	UnoccupiedDeadbandAction	R	R
Object_Type	BACnetObjectType	BINARY_VALUE (5)	R	R
Present_Value	BACnetBinaryPV	INACTIVE (0) / ACTIVE (1)	R	R/W
Description	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Inactive_Text	CharacterString	Off	O	R
Active_Text	CharacterString	CurrentMode	O	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Minimum_Off_Time	Unsigned32	-	O	-
Minimum_On_Time	Unsigned32	-	O	-
Priority_Array	BACnetPriorityArray	BACnetPriorityArray	R	-
Relinquish_Default	BACnetBinaryPV	INACTIVE (0)	R	-
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.32. LockRemoteControl (Binary Value Object Type)

It is used to lock or unlock the wired remote controller.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Binary Value, 2)	R	R
Object_Name	CharacterString	LockRemoteControl	R	R
Object_Type	BACnetObjectType	BINARY_VALUE (5)	R	R
Present_Value	BACnetBinaryPV	INACTIVE (0) / ACTIVE (1)	R	R/W
Description	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE	R	R
Inactive_Text	CharacterString	Unlocked	O	R
Active_Text	CharacterString	Locked	O	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Minimum_Off_Time	Unsigned32	-	O	-
Minimum_On_Time	Unsigned32	-	O	-
Priority_Array	BACnetPriorityArray	BACnetPriorityArray	R	-
Relinquish_Default	BACnetBinaryPV	INACTIVE (0)	R	-
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

7.1.3.33. DIP_SW_S1_status (Analog Input Object Type)

It indicates the status of the DIP switch block SW1 in decimal value. To get the status of each individual switch (position) of SW1, just convert it to binary. The gateway reads this value only when booting up.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Input, 9)	R	R
Object_Name	CharacterString	DIP_SW_S1_status	R	R
Object_Type	BACnetObjectType	ANALOG_INPUT (0)	R	R
Present_Value	BACnetBinaryPV	0 .. 255	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE / TRUE	R	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-
Units	BACnetEngineeringUnits	No units (95)	R	R
COV_Increment	REAL	0	O	W

7.1.3.34. DIP_SW_S2_status (Analog Input Object Type)

It indicates the status of the DIP switch block SW2 in decimal value. To get the status of each individual switch (position) of SW2, just convert it to binary. The gateway reads this value only when booting up.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Input, 10)	R	R
Object_Name	CharacterString	DIP_SW_S2_status	R	R
Object_Type	BACnetObjectType	ANALOG_INPUT (0)	R	R
Present_Value	BACnetBinaryPV	0 .. 255	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Out_Of_Service	BOOLEAN	FALSE / TRUE	R	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-
Units	BACnetEngineeringUnits	No units (95)	R	R
COV_Increment	REAL	0	O	W

7.1.3.35. SerialNumber (Analog Input Object Type)

It indicates the serial number of the gateway with the pattern **000EXXXXX**, where:

- **000E** is constant and not included in the Present Value property.
- **XXXXX** is the unique device serial number. This is the information provided by the Present Value.

Property Identifier	Property Datatype	Value	ASHRAE	Gateway
Object_Identifier	BACnetObjectIdentifier	(Analog Input, 11)	R	R
Object_Name	CharacterString	SerialNumber	R	R
Object_Type	BACnetObjectType	ANALOG_INPUT (0)	R	R
Present_Value	BACnetBinaryPV	00000 .. 99999	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0)	O	R
Polarity	BACnetPolarity	NORMAL (0)	R	R
Change_Of_State_Time	BACnetDatetime	-	O	-
Change_Of_State_Count	Unsigned	-	O	-
Time_Of_State_Count_Reset	BACnetDatetime	-	O	-
Elapsed_Active_Time	Unsigned	-	O	-
Time_Of_Active_Time_Reset	BACnetDatetime	-	O	-
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Value	BACnetBinaryPV	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-
Units	BACnetEngineeringUnits	No units (95)	R	R
COV_Increment	REAL	0	O	W

7.1.3.36. ResetBehaviour (Multistate Value Object Type)

It indicates the Reset behavior of the gateway.

Property Identifier	Property Datatype	Value	ASHRAE	Intesis
Object_Identifier	BACnetObjectIdentifier	(Multistate Value, 4)	R	R
Object_Name	CharacterString	ResetBehaviour	R	R
Object_Type	BACnetObjectType	MULTISTATE_Value (19)	R	R
Present_Value	Unsigned	1 .. 2	R	R
Description	CharacterString	-	O	-
Device_Type	CharacterString	-	O	-
Status_Flags	BACnetStatusFlags	{FALSE, FALSE/TRUE, FALSE, FALSE}	R	R
Event_State	BACnetEventState	STATE_NORMAL (0)	R	R
Reliability	BACnetReliability	NO_FAULT_DETECTED (0), UNRELIABLE_OTHER (7)	O	R
Out_Of_Service	BOOLEAN	FALSE/TRUE	R	R
Number_Of_States	Unsigned	2	R	R
State_Text	BACnetArray[N] of CharacterString	Check the ResetBehavior setting table below.	O	R
Time_Delay	Unsigned	-	O	-
Notification_Class	Unsigned	-	O	-
Alarm_Values	List of Unsigned	-	O	-
Fault_Values	List of Unsigned	-	O	-
Event_Enable	BACnetEventTransitionBits	-	O	-
Acked_Transitions	BACnetEventTransitionBits	-	O	-
Notify_Type	BACnetNotifyType	-	O	-
Event_Time_Stamps	BACnetArray[N] of BACnetTimeStamp	-	O	-
Profile_Name	CharacterString	-	O	-

ResetBehaviour interpretation is possible using the value in the following correspondence table.

Table 13. ResetBehavior setting table

Present_Value	Contents displayed in State_Text	Description
1	Store AC status	Values for On/Off, Mode, Fan speed, Vanes position, and Setpoint are stored in the gateway's non-volatile memory. After a reset, the gateway restores these values.
2	Do not store AC status	Values for On/Off, Mode, Fan speed, Vanes position, and Setpoint are not stored. After a reset, the values for these signals will be the BACnet default ones.

7.2. Occupancy Function



IMPORTANT

The Occupancy function is only available for BACnet.

The Occupancy function determines the AC unit's behavior depending on the presence or absence of people in the room. This signal is processed directly in the Intesis gateway and has the capacity to modify three parameters of the AC system: Setpoint, Mode, and On/Off.



IMPORTANT


This function requires a presence sensor on the control system (BMS) side, which determines the state of the **Occupancy** object:

- **Occupied:** Someone is in the room.
- **Unoccupied:** No one is in the room.
- **Disabled:** The function is disabled

Besides the Occupancy object, and to adjust the settings of the Occupancy function, the gateway offers these BACnet objects:

- **Occupancy Cool Setpoint (OCS):** Setpoint temperature when the AC unit is in cool mode and someone is present in the room.
- **Unoccupancy Cool SetPoint (UCS):** Setpoint temperature when the AC unit is in cool mode and no one is in the room.
- **Occupancy Heat Setpoint (OHS):** Setpoint temperature when the AC unit is in heat mode and someone is present in the room.
- **Unoccupancy Heat SetPoint (UHS):** Setpoint temperature when the AC unit is in heat mode and no one is in the room.

Figure 5. Temperature setpoint objects related to the room's occupancy status and the AC unit's mode

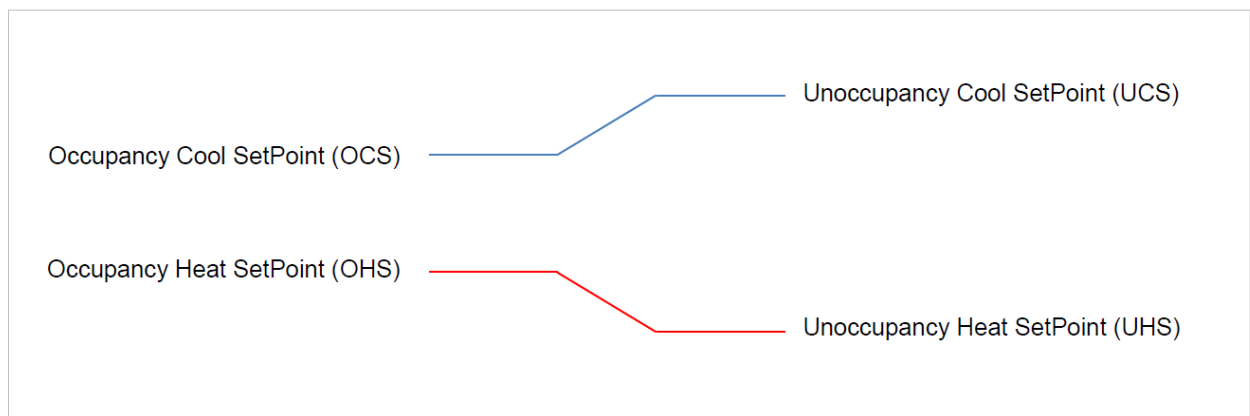

NOTICE

The minimum difference between Cool and Heat setpoints must be 2°C / 4°F.

- **Occupancy Continuous check:** It determines when the gateway checks the room's occupancy:
 - If this object's value is 1 (active), the gateway checks the occupancy when the occupancy status and the room's temperature change.

- If this object's value is 0 (inactive), the gateway only checks the occupancy when the occupancy status changes.
- **Unoccupied Deadband Action:** It determines the AC unit's behavior when the room is unoccupied and the ambient temperature is within the deadband.
 - If this object's value is 1 (active), the indoor unit will remain on.
 - If this object's value is 0 (inactive), the indoor unit will turn off.

When there is presence in the room, and according to the current room temperature, the AC unit's **mode**, **setpoint**, and **on/off** will be set to:

Condition	Setpoint	Mode	On/Off
Room temperature > OCS	Current OCS value	Cool	On
Room temperature < OHS	Current OCS value	Heat	On
OCS < Room temperature > OHS	OCS/OHS depending on the current mode (If Fan or Dry mode is active, no setpoint is sent)	Current mode	On

When there is no presence in the room, and according to the current room temperature, the AC unit's **mode**, **setpoint** and **on/off** will be set to:

Condition	Setpoint	Mode	On/Off
Room temperature > OCS	Current UCS value	Cool	On
Room temperature < OHS	Current UHS value	Heat	On
OCS < Room temperature > OHS	UCS/UHS depending on the current mode (If Fan or Dry mode is active, no setpoint is sent)	Current mode	On (Deadband action=1)
			Off (Deadband action=0)



NOTICE

Any local change (for example with the remote control) in the Setpoint, Mode, or the On/Off signal will disable the Occupancy function.

8. Modbus Specifications

The following sections provide the gateway's specifications when it is set for Modbus RTU.

8.1. Implemented Modbus Functions

The IN485HIT001R000 gateway implements the following standard Modbus functions:

- 03: Read Holding Registers
- 04: Read Input Registers
- 06: Write Single Register
- 16: Write Multiple Registers



IMPORTANT

Even though function 16 is available, the gateway does not allow writing operations on more than one register with the same request, so the length field when using this function should always be one.

8.1.1. Modbus Physical Layer

The IN485HIT001R000 gateway implements a Modbus RTU (server) interface to be connected to an EIA-485 bus. It features an 8-N-2 communication (eight data bits, no parity, and two stop bits) with several available baud rates: 2400, 4800, **9600 -default-**, 19200, 38400, 57600, 76800, and 115200 bps. It also supports 8-N-1 communication (eight data bits, no parity, and one stop bit).



NOTE

AUTO-DETECT FUNCTION. The gateway will automatically detect the communication type (8-N-1 or 8-N-2) and set itself accordingly. No user action or manual settings are required.

8.1.2. Modbus Registers

Register name	Possible values	Register protocol address	Register PLC address	R/W
ON/OFF	0: Off 1: On	0	1	R/W
OPERATION MODE	0: Auto 1: Heat 2: Dry 3: Fan 4: Cool NOTE The available modes may vary depending on the AC model.	1	2	R/W
FAN SPEED	0: Auto 1 .. 5: Speed 1 .. Speed 5 NOTE The available fan speeds may vary depending on the AC model.	2	3	R/W

Register name	Possible values	Register protocol address	Register PLC address	R/W
VANE U/D POSITION	1 .. 7: Position 1 .. Position 7 10: Swing  NOTE The available vane positions may vary depending on the AC model.	3	4	R/W
TEMPERATURE (USER) SETPOINT  NOTE Temperature requested from the Modbus side. To know more, see Considerations on Temperature Signals (page 67) .	-32768 (Initialization value) Value in °C; °F; x1; x10  NOTE The value range depend on the AC model.	4	5	R/W
INDOOR UNIT REFERENCE TEMPERATURE  NOTE Ambient temperature that the indoor unit is using as a reference. To know more, see Considerations on Temperature Signals (page 67) .	Value in °C; °F; x1; x10  NOTE Set the temperature units via the DIP switch SW2.  NOTE The value range depend on the AC model.	5	6	R
WINDOW CONTACT PROTOCOL INPUT	0: Closed (default) 1: Open	6	7	R/W
CONTROL OBJECTS DISABLEMENT  NOTE It disables the control of the AC unit through the registers of the gateway. This value is stored in non-volatile memory	0: Control objects enabled (default) 1: Control objects disabled  TIP Send a 0 to this register if, for an unknown reason, the gateway doesn't work.	7	8	R/W
REMOTE CONTROL DISABLEMENT  NOTE It disables the control of the AC unit through any RC. This value is stored in non-volatile memory	0: Remote control enabled (default) 1: Remote control disabled	8	9	R/W
OPERATION TIME (IN HOURS)  NOTE This value is stored in non-volatile memory	0 .. 65535 hours	9	10	R/W
ALARM STATUS	0: No alarm condition 1: Alarm condition	10	11	R
ERROR CODE	0: No error present 65535 (-1 if it is read as a signed value): Communication error between the gateway or the remote controller and the AC unit. For any other value, see Error Codes (page 69)	11	12	R

Register name	Possible values	Register protocol address	Register PLC address	R/W
OPEN WINDOW TIMEOUT (IN MINUTES)  NOTE Once window contact is "open", this is the time in minutes before turning the AC unit off.	0 .. 30 minutes Default value: 30	13	14	R/W
BAUDRATE	Baudrate currently selected via DIP switch SW2.	14	15	R
MODBUS SLAVE ADDRESS	1 .. 63	15	16	R
MAX NUM OF FANSPEEDS	3 .. 6	21	22	R
INPUT SENSOR TEMPERATURE  NOTE Ambient temperature provided by a sensor from the Modbus side. See Ambient Temperature and Virtual Temperature Function (page 63).	0x8000 (-32768): (Initialization value). No temperature is provided by an external sensor. Any other value: Ambient temperature reported by the Modbus sensor.	22	23	R/W
AC REAL SETPOINT  NOTE Temperature setpoint sent to the indoor unit. To know more, see Considerations on Temperature Signals (page 67).	Value in °C; °F; x1; x10  NOTE Set the temperature units via the DIP switch SW2.  NOTE The value range depend on the AC model.	23	24	R
ACTUAL AC MAX SETPOINT  NOTE Set the temperature units via the DIP switch SW2.  NOTE The value range depend on the AC model.	-32768 (Initialization value) Value in °C; °F; x1; x10	24	25	R
ACTUAL AC MIN SETPOINT  NOTE Set the temperature units via the DIP switch SW2.  NOTE The value range depend on the AC model.	-32768 (Initialization value) Value in °C; °F; x1; x10	25	26	R
WINDOW CONTACT FUNCTIONAL STATUS (FEEDBACK)	0: Not active (default) 1: Active (the window is open)	31	32	R
WIN CONTACT ON/OFF DISABLEMENT	0: Window contact is not disabling On/Off (it is not working). 1: Window contact is disabling On/Off (it is in use).	40	41	R
FILTER RESET	1: Reset	43	44	W
FILTER STATUS	0: Off 1: On	44	45	R

Register name	Possible values	Register protocol address	Register PLC address	R/W
ERROR RESET	1: Reset	45	46	W
SWITCH VALUE	DIP switches current value	48	49	R
ANTIFREEZE OPERATION	0: Disabled 1: Enabled	56	57	R/W
INPUT REFERENCE TEMPERATURE (Feedback)	Value in °C; °F; x1; x10  NOTE Set the temperature units via the DIP switch SW2.	65	66	R
RETURN PATH TEMPERATURE	Value in °C; °F; x1; x10  NOTE Set the temperature units via the DIP switch SW2.	66	67	R
ERROR ADDRESS	It indicates the AC indoor unit address reporting the error	81	82	R
FILTER SIGNAL ADDRESS	It indicates the AC indoor unit address reporting the filter signal	86	87	R
FW version MSB	It shows the first two numbers of the firmware version. Example: For version 1.2.3.4, it will show 1.2 (in hexadecimal).	94	95	R
FW version LSB	It shows the last two numbers of the firmware version. Example: For version 1.2.3.4, it will show 3.4 (in hexadecimal).	95	96	R
MASTER/SLAVE	0: Slave 1: Master	98	99	R
RESET	1: Reset	99	100	W
VIRTUAL TEMP ACTIVE	0: No active 1: Active	129	130	R
WINDOW CONTACT STEP	0: Idle (window is closed). 1: Timeout1 (window is opened, timeout starts). 2: Timeout2 (it doesn't apply to window contact). 3: Window contact applies (window is opened, time is finished, window contact action is applied).	130	131	R
WINDOW CONTACT RELOAD LAST VALUE	0: No (default) 1: Yes	1000	1001	R/W
WINDOW CONTACT LOCK WHEN OPEN	0: No 1: Yes	1001	1002	R/W
WINDOW TIMEOUT (IN MINUTES)	0 .. 30	1002	1003	R/W
RESET BEHAVIOUR  NOTE Data to store for setting the AC unit's behavior after a power cut.	0: Don't store AC status 1: Store current AC status (default)  NOTE If the value is 0, the default values are: ON/OFF: OFF, Mode: Cool, SetTemp: 25°C, Fan speed: 1, Vanes position: 1	1100	1101	R/W
ONOFF DEFAULT	0: Off 1: On	1101	1102	R/W
USERMODE DEFAULT	0: Auto 1: Heat 2: Dry 3: Fan 4: Cool	1102	1103	R/W

Register name	Possible values	Register protocol address	Register PLC address	R/W
FANSP DEFAULT	0: Auto 1: Quiet 2: Low 3: Med 4: High	1103	1104	R/W
SETPTEMP DEFAULT	-32768 (Initialization value) 16 .. 30 (°C) (0: undetermined) 61 .. 86 (°F) (0: undetermined)	1104	1105	R/W
VANESUD DEFAULT	1: Position-1 (Horizontal) 2: Position-2 (Horizontal) 3: Position-3 (Medium) 4: Position-4 (Vertical) 10: Swing	1105	1106	R/W
MACHINE MODE	0: Normal (default) 1: Autochangeover 2: Limited setpoint	1150	1151	R/W
MACHINE MIN SETPOINT COOL	Value in °C; °F; x1; x10 By default: 24°C / 75°F  NOTE Set the temperature units via the DIP switch SW2.	1153	1154	R/W
MACHINE MAX SETPOINT COOL	Value in °C; °F; x1; x10 By default: 24°C / 75°F  NOTE Set the temperature units via the DIP switch SW2.	1154	1155	R/W
MACHINE MIN SETPOINT HEAT	Value in °C; °F; x1; x10 By default: 28°C / 82°F  NOTE Set the temperature units via the DIP switch SW2.	1155	1156	R/W
MACHINE MAX SETPOINT HEAT	Value in °C; °F; x1; x10 By default: 19°C / 66°F  NOTE Set the temperature units via the DIP switch SW2.	1156	1157	R/W
REMOTE LOCK AFTER RESET	0: Remote lock is disabled after reset 1: It keeps the value set in register 8 (AC remote control disablement)	1220	1221	W
DEVICE IDENTIFIER	5120	2000	2001	R
MODE_MAP	Indicates the available states of the signal. Each bit in the register has its own meaning. See the table below.	2001	2002	R
FAN_MAP	Indicates the available states of the signal. Each bit in the register has its own meaning. See the table below.	2002	2003	R
VANES_MAP	Indicates the available states of the signal. Each bit in the register has its own meaning. See the table below.	2003	2004	R
U_D_VANES_MAP	Indicates the available states of the signal. Each bit in the register has its own meaning. See the table below.	2004	2005	R

Register name	Possible values	Register protocol address	Register PLC address	R/W
RUNTIME_MODE_RESTRICTIONS_MAP	Indicates the available states of the signal. Each bit in the register has its own meaning. See the table below.	2012	2013	R

Table 14. MODE_MAP bit characterization

Bit 15	Bit 04	Bit 03	Bit 02	Bit 01	Bit 00
1: Invalid 0: Valid	COOL	FAN	DRY	HEAT	AUTO
	1: Enabled 0: Disabled				

Table 15. FAN_MAP bit characterization

Bit 15	Bit 05	Bit 04	Bit 03	Bit 02	Bit 01	Bit 00
1: Invalid 0: Valid	FAN_5	FAN_4	FAN_3	FAN_2	FAN_1	AUTO
	1: Enabled 0: Disabled					

Table 16. VANES_MAP bit characterization

Bit 15	Bit 03	Bit 02	Bit 01	Bit 00
1: Invalid 0: Valid	PULSE L/R	PULSE U/D	SPECIFIC L/R	SPECIFIC U/D
	1: Enabled 0: Disabled			

Table 17. U_D_VANES_MAP bit characterization

Bit 15	Bit 10	Bit 07	Bit 06	Bit 05	Bit 04	Bit 03	Bit 02	Bit 01
1: Invalid 0: Valid	SWING	POS_7	POS_6	POS_5	POS_4	POS_3	POS_2	POS_1
	1: Enabled 0: Disabled							

Table 18. RUNTIME_MODE_RESTRICTIONS_MAP bit characterization


Bit 15	Bit 04	Bit 03	Bit 02	Bit 01	Bit 00
1: Invalid 0: Valid	COOL	FAN	DRY	HEAT	AUTO
	1: Not writable 0: Writable				

9. Ambient Temperature and Virtual Temperature Function

The IN485HIT001R000 gateway enables the use of a temperature sensor from the BACnet/Modbus-based BMS.

The reason for using this sensor could be that it is better positioned than the sensor in the indoor unit or the wired remote controller. If an indoor unit or wired remote controller is mounted far away, it can lead to a significant difference between the temperature perceived by their sensors and the actual temperature in the occupied space.

Figure 6. In this case, the room temperature is four degrees Celsius less than the temperature perceived by the indoor unit's sensor.

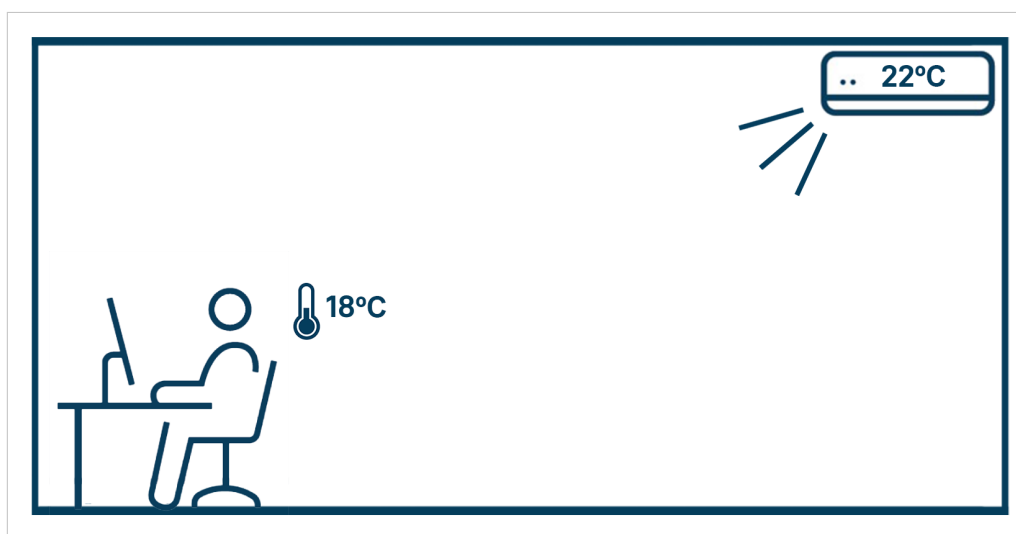

When using the temperature sensor from the BMS side, the IN485HIT001R000 gateway allows two different options:

- Direct overwriting of the AC system reference temperature.
- Activation of the Virtual Temperature function.

As explained below, the choice between these options depends on the role of both the gateway and the Hitachi wired RC. It also depends on the thermostat used by the AC system to determine its reference temperature, which can be either the sensor inside the indoor unit or the sensor inside the wired RC.

DIRECT OVERWRITING OF THE INDOOR UNIT'S REFERENCE TEMPERATURE

1. Set the IN485HIT001R000 gateway as the header of the bus by setting the SW1-1 (DIP switch 1, position 1) ON. See [DIP Switches \(page 11\)](#).
2. Set the IN485HIT001R000 gateway to read the temperature provided by the wired RC by setting the SW1-2 (DIP switch 1, position 2) ON. See [DIP Switches \(page 11\)](#).
3. Set the Hitachi wired RC as the follower of the bus.



NOTE

Refer to the documentation provided with the Hitachi system to know the needed procedure to set the role of the wired RC.

- Set the Hitachi AC system to read the temperature provided by the sensor inside the wired RC.

**NOTE**

This configuration must be performed by a Hitachi authorized installer through the remote controller.

- At this point, the indoor unit could report an error warning that there is an abnormality in the wired RC's thermistor.

**NOTICE**

This error is reported because no valid value has been written yet as the ambient temperature. Take into consideration that, after commissioning the gateway for the first time, the default value for the BACnet object **RoomTemperature_command (Analog Output)/Modbus register Input sensor temperature (protocol address register 22 / PLC address register 23)**¹ is -32768, which is an invalid value.

- Write the value reported by the BMS sensor using the BACnet object **RoomTemperature_command (Analog Output)/Modbus register Input sensor temperature (protocol address register 22 / PLC address register 23)**¹.

**NOTE**

¹ The names of the Modbus registers provided in this section are for reference purposes only; pay attention chiefly to their numerical addresses.

**NOTE**

At this point, any error reported by the indoor unit will disappear. From now on, the AC system will use the value reported by the BACnet/Modbus temperature sensor as its reference temperature.

ACTIVATION OF THE VIRTUAL TEMPERATURE FUNCTION

**NOTE**

Before explaining how to activate the Virtual Temperature function, it is important to understand how this function works.

How the Virtual Temperature function works:

The Virtual Temperature function uses the value reported by the temperature sensor connected to the BMS side to apply a formula that establishes the setpoint temperature for the indoor unit. This recalculated setpoint offsets the difference between the real temperature in the room and the temperature at which the indoor unit is operating.

The formula used by the Virtual Temperature function is the following:

$$S_{AC} = T_{AC} - (T_{BMS} - S_{BMS})$$

Where:

- S_{AC} : Recalculated temperature setpoint sent to the indoor unit after the gateway applies the formula.
- T_{AC} : Indoor unit's reference temperature.
- T_{BMS} : Ambient temperature reported by the sensor connected to the BMS side.
- S_{BMS} : Temperature setpoint requested from the BMS side.

Once activated, the Virtual Temperature function recalculates the setpoint when any of these values changes.

In practical terms, when you write a value in the BACnet object **RoomTemperature_command (Analog Output)/** Modbus register **Input sensor temperature (protocol address register 22 / PLC address register 23)**, the gateway activates the Virtual Temperature function, using this value to recalculate the indoor unit's reference temperature.

How to activate the Virtual Temperature function:

The Virtual Temperature function can be activated with the gateway acting either as the header or the follower of the wired RC bus.

- **Procedure with the gateway acting as the header of the RC bus:**

1. Set the IN485HIT001R000 gateway as the header of the bus by setting the SW1-1 (DIP switch 1, position 1) ON. See [DIP Switches \(page 11\)](#).
2. Set the IN485HIT001R000 gateway to read the temperature provided by the indoor unit by setting the SW1-2 (DIP switch 1, position 2) OFF. See [DIP Switches \(page 11\)](#).
3. Set the Hitachi wired RC as the follower of the bus.



NOTE

Refer to the documentation provided with the Hitachi system to know the needed procedure to set the role of the wired RC.

4. Set the Hitachi AC system to read the temperature provided by the sensor inside the indoor unit.



NOTE

This configuration must be performed by a Hitachi authorized installer through the remote controller.

- **Procedure with the gateway acting as the follower of the RC bus:**

1. Set the IN485HIT001R000 gateway as the follower of the bus by setting the SW1-1 (DIP switch 1, position 1) OFF. See [DIP Switches \(page 11\)](#).
2. Set the Hitachi wired RC as the header of the bus.



NOTE

Refer to the documentation provided with the Hitachi system to know the needed procedure to set the role of the wired RC.

3. Set both the gateway and the AC system to read the temperature from the same source, either from the thermistor inside the indoor unit or the wired RC.
 - a. For the gateway, this is done via the SW1-2 (DIP switch 1, position 2):
 - ON: The gateway reads the temperature from the thermistor of the wired RC.
 - OFF: The gateway reads the temperature from the thermistor of the indoor unit.
 To know more, see [DIP Switches \(page 11\)](#).
 - b. For the AC system, this configuration is done via the wired RC must and must be performed by a Hitachi authorized installer.

Once the roles and reading sources of both the gateway and the wired RC are set, proceed as follows:

1. Write the desired setpoint temperature in the BACnet object **Setpoint_command (Analog Output)/** Modbus register **Temperature (user) setpoint (protocol address 4, PLC address 5)**.

2. Read the temperature value reported by a temperature sensor from the BMS side.
3. Write this value in the BACnet object **RoomTemperature_command (Analog Output)**/Modbus register **Input sensor temperature (protocol address register 22 / PLC address register 23)**.

**NOTE**

At this point, the Virtual Temperature function is automatically activated. From now on, the AC system will use the value reported by the formula described above as its reference temperature.

**NOTICE**

Due to the formula applied by the Virtual Temperature function, the temperature reported by the AC system and the actual ambient temperature may differ. This must not be taken as an error, but as the normal behavior when the Virtual Temperature function is working.

To know more about the BACnet objects/Modbus registers dedicated to the temperature signals and to the Virtual Temperature function, see [Considerations on Temperature Signals \(page 67\)](#).

**NOTE**

When starting up the gateway, the dedicated object/register to write the ambient temperature perceived from the BMS side reports a value of -32768 (0x8000). For BACnet, this object is **RoomTemperature_command (Analog Output)**. For Modbus, this register is **Input sensor temperature (protocol address 22 / PLC address 23)**.

**FOR BACNET**

When starting up the gateway, the Present_Value property for the RoomTemperature_command object is 0, and the Reliability property displays **UNRELIABLE_OTHER (7)**. This means that no external temperature reference has been provided to the object, so the system is not applying the Virtual Temperature function. However, after receiving the first value, the Reliability property changes to **NO_FAULT_DETECTED (0)**. After that, any value can be used in the temperature range, including 0.

TROUBLESHOOTING

Typical malfunctions with the ambient temperature and the Virtual Temperature function are related to mistakes in the configuration of the gateway's or the wired RC's role, or in the values written in the BACnet objects/Modbus registers. If an error occurs, consider the following:

- **The gateway and the wired RC have the correct role.**

Remember that the gateway can overwrite the reference temperature of the AC system using a temperature sensor from the BMS side only when it is set as the header and the wired RC is set as the follower.

To set the gateway as the header of the bus, set the SW1-1 (DIP switch 1, position 1) ON. To know more, see [Coexistence of the Gateway with a Remote Controller \(page 9\)](#).

The role of the wired RC is usually set through a DIP switch mounted on its board, but you should read the documentation delivered with the AC system to ensure the necessary procedure.

- **The gateway and the wired RC are reading the temperature from the same source.**

Both the gateway and the AC system can be set to read the temperature from the indoor unit or the wired RC. Only when both the gateway and the AC system are set to read the temperature from the wired RC can the gateway overwrite the reference temperature of the AC system using a temperature sensor from the BMS side. Set the gateway to read the temperature of the wired RC thermistor by setting the SW1-2 (DIP switch 1, position 2) ON. To know more, see [DIP Switches \(page 11\)](#).

- **Valid values are written in the BACnet objects/Modbus registers dedicated to the temperature.²**

Pay special attention to the BACnet object **RoomTemperature_command (Analog Output)/Modbus register Input sensor temperature (protocol address register 22 / PLC address register 23)**, which are dedicated to write the value reported by the BMS sensor.

**NOTE**

² The following section provides an extended explanation of all the BACnet objects/Modbus registers dedicated to the temperature signals and to the Virtual Temperature function.

9.1. Considerations on Temperature Signals

**NOTE**

You can set the temperature signals in degrees Celsius or Fahrenheit via the DIP switch SW2. More information in [DIP Switches \(page 11\)](#).

**NOTE**

The names of the Modbus registers provided in this section are for reference purposes only; pay attention chiefly to their numerical addresses.

Table 19. Objects and registers dedicated to temperature signals and to the Virtual Temperature function

BACnet object	Modbus register	Function when the Virtual Temperature function is inactive	Function when the Virtual Temperature function is active
Setpoint_status (Analog Input)	AC real setpoint (R) (protocol address 23 / PLC address 24)	It indicates the temperature setpoint sent to the indoor unit. It will report the same value as the value introduced in the Setpoint_command/AC unit temperature setpoint.	It indicates the recalculated temperature setpoint sent to the indoor unit after the gateway applies the $S_{AC} = T_{AC} - (T_{BMS} - S_{BMS})$ formula. It may report a value different from the value introduced in the Setpoint_command/AC unit temperature setpoint.
Setpoint_command (Analog Output)	Temperature (user) setpoint (R/W) (protocol address 4 / PLC address 5)	It is used to request the temperature setpoint from the BMS side. It will report the same value as a wired remote controller connected to the indoor unit (if available).	It is used to request the temperature setpoint from the BMS side. It may report a value different from the one reported by a wired remote controller connected to the indoor unit (if available).
RoomTemperature_status (Analog Input)	Indoor unit reference temperature (R) (protocol address 5 / PLC address 6)	It indicates the ambient temperature perceived by the sensor from the AC system side (the sensor inside the indoor unit or inside the wired remote controller, if available).	It indicates the ambient temperature perceived by the sensor from the AC system side (the sensor inside the indoor unit or inside the wired remote controller, if available).
RoomTemperature_command (Analog Output)	Input sensor temperature (R/W) (protocol address 22 / PLC address 23)*	It is used to activate the Virtual Temperature function by writing the value reported from a BMS side sensor.	It indicates the temperature reported from a BMS side sensor.
VirtualTemperatureActive (Binary Input)	Virtual Temp Active (R) (protocol address 129 / PLC address 130)**	It reports a value of 0	It reports a value of 1
UserSetpoint_status (Analog Input)	Temperature (user) setpoint (R/W) (protocol address 4 / PLC address 5)	It indicates the temperature setpoint requested from the BMS side.	It indicates the original temperature setpoint requested from the BMS side.

**NOTE**

* This register has been available since firmware version 0.8.

**NOTE**

** This Modbus register may be missing in your gateway since it is only implemented in the 485 series. However, the Virtual Temperature function is not dependent on this register, and it is available in your gateway if its order code is listed in the note at the beginning of this section.

**NOTE**

As explained in this topic, and due to the Virtual Temperature function, Hitachi cannot guarantee that the value reported by the **RoomTemperature_command** object/**Input sensor temperature** register is consistently equal to the actual room temperature.

VIRTUAL TEMPERATURE FUNCTION EXAMPLE CASE

Imagine a very cold room with a temperature of 10°C. There's an AC indoor unit mounted in the ceiling, which is very high.

The technician responsible for the BMS wants to raise the room temperature to 20°C. To achieve this, she accesses the console and sets this value in the BACnet object **Setpoint_command (Analog Output)**/Modbus register **Temperature (user) setpoint (protocol address 4 / PLC address 5)**. The same value of "20" is also reflected in the BACnet object **Setpoint_status (Analog Input)**/Modbus register **AC real setpoint (protocol address 23 / PLC address 24)**.

A few minutes later, the technician checks the BACnet object **RoomTemperature_status (Analog Input)**/Modbus register **Indoor unit reference temperature (protocol address 5 / PLC address 6)** to determine the temperature reported by the indoor unit's sensor, which reads 17°C. However, the BMS sensor in the room reports a temperature of 13°C. The technician knows that the BMS sensor is better positioned than the indoor unit's sensor. Unfortunately, the indoor unit does not allow the gateway a direct overwriting of the value reported by its sensor temperature. To address this, the technician activates the Virtual Temperature function.

To activate it, she writes the temperature currently perceived by the BMS sensor (13°C) into the BACnet object **RoomTemperature_command (Analog Output)**/Modbus register **Input sensor temperature (protocol address 22 / PLC address 23)**. As soon as she inputs "13" into that object/register, the BACnet object **VirtualTemperatureActive (Binary Input)**/Modbus register **Virtual Temp Active (protocol address 129 / PLC address 130)** transitions from "0" to "1." This indicates that the Virtual Temperature function is now active and will continuously apply the formula to recalculate the setpoint temperature sent to the indoor unit.

At this moment, the formula values are: $17 - (13 - 20) = 24$. Therefore, the Virtual Temperature function is currently sending a setpoint of 24°C to the indoor unit, and this value is reflected in the BACnet object **Setpoint_status (Analog Input)**/Modbus register **AC real setpoint (protocol address 23 / PLC address 24)**.

After a few minutes, the technician checks the BACnet object **RoomTemperature_command (Analog Output)**/Modbus register **Input sensor temperature (protocol address 22 / PLC address 23)** to find the temperature perceived by the BMS sensor: 19°C. Then, she looks at the BACnet object **RoomTemperature_status (Analog Input)**/Modbus register **Indoor unit reference temperature (protocol address 5 / PLC address 6)**, which reports the temperature sensed by the indoor unit: 24°C.

At this point, the formula applied by the Virtual Temperature function is based on these numbers: $24 - (19 - 20) = 25$. The technician observes the BACnet object **Setpoint_status (Analog Input)**/Modbus register **AC real setpoint (protocol address 23 / PLC address 24)** and realizes that the Virtual Temperature function has established the setpoint at 25°C.

10. Error Codes

10.1. Gateway Codes

Error Code	Error CodeM		Error in Controller	Error Category	Error Description
	Value	Text			
0	1	—	N/A	Intesis AC Interface	No active error
-1 (65535)	2	CommError	N/A	Intesis AC Interface	Error in the communication of Intesis AC Interface or the Remote Controller with the AC Unit
-3	3	MainSub RC Settings	N/A	Indoor Unit	Tripping of Protection Device
-4	4	Initialization	N/A	Outdoor Unit	Tripping of Protection Device

10.2. AC System Codes

Error Code	Error CodeM		Error in Controller	Error Category	Error Description
	Value	Text			
1	5	E-01	1	Indoor Unit	Tripping of Protection Device
2	6	E-02	2	Outdoor Unit	Tripping of Protection Device
3	7	E-03	3	Transmission	Abnormality between Indoor and Outdoor
4	8	E-04	4	Inverter	Abnormality between Inverter and Control PCB
5	9	E-05	5	Transmission	Abnormality in Power Source Wiring
6	10	E-06	6	Voltage drop	Fan motor locked, overload, over current
			6.		Swing flap motor error
7	11	E-07	7	Cycle	Overcurrent of AC input
8	12	E-08	8		Electronic expansion valve drive error
9	13	E-09	9	Outdoor Unit	Heater overheat
17	14	E-11	11	Sensor on Indoor Unit	Dust collector error / No-maintenance filter error
18	15	E-12	12		Capacity setting error (indoor)
19	16	E-13	13		Shortage of water supply
20	17	E-14	14		Malfunctions of a humidifier system (water leaking)
25	18	E-19	19		Malfunctions in a sensor system
33	19	E-21	21	Sensor on Outdoor Unit	Sensor system of drain water error
34	20	E-22	22		Heat exchanger (1) (Liquid pipe) thermistor system error
35	21	E-23	23		Heat exchanger (1) (Gas pipe) thermistor system error
36	22	E-24	24		Sensor system error of fan motor locked, overload
41	23	E-29	29		Sensor system of swing flap motor error
48	24	E-30	30		Sensor system of over-current of AC input
49	25	E-31	31		Suction air thermistor error

50	26	E-32	32		Discharge air thermistor system error
53	27	E-35	35		Contamination sensor error
54	28	E-36	36		Humidity sensor error
56	29	E-38	38		Remote control thermistor error
57	30	E-39	39		Radiation sensor error
67	31	E-43	43	Pressure	High pressure switch sensor
68	32	E-44	44		Protection devices activated
69	33	E-45	45		Outdoor unit PCB assembly failure
70	34	E-46	46		High pressure switch (HPS) activated
71	35	E-47	47		Low pressure switch (LPS) activated
81	36	E-51	51	Inverter	Overload of inverter compressor motor
82	37	E-52	52		Over current of STD compressor motor
83	38	E-53	53		Overload of fan motor / Over current of fan motor
84	39	E-54	54		Overcurrent of AC input
86	40	E-56	56	Outdoor Fan	Electronic expansion valve drive error
87	41	E-57	57		Four-way valve error
88	42	E-58	58		Pump motor over current
176	44	E-B0	b0	IU model setting	Incorrect setting address or refrigerant cycle
177	43	E-B1	b1	Number setting	Incorrect setting address or refrigerant cycle
181	44	E-B5	b5		Incorrect setting of indoor unit number for H- LINK type
238	45	E-EE	EE	Inverter	Water temperature abnormal

**NOTE**

If you detect a non-listed error code, please contact Hitachi technical support.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[HMS Networks:](#)

[IN485HIT001R000](#)