#### **General Description**

The MAX20046 evaluation kit (EV kit) demonstrates the MAX20046 automotive Hi-Speed USB 2.0 protector switch IC, featuring overvoltage protection (OVP), electrostatic discharge (ESD) protection, and undervoltage lockout (UVLO)/overcurrent protection (OCP) for automotive USB applications.

The device protects the USB BUS, D+, and D- data lines from overvoltage conditions, such as a short-to-battery and ESD events. UVLO protects the BUS against low-voltage conditions such as a short-to-ground. The BUS OCP uses a blanking period allowing momentary BUS shorts to be ignored. All faults can be monitored using the FAULT output signal.

The device can pass high-speed USB differential (D+ and D-) signals up to 480Mbps and has a low  $500m\Omega$   $R_{ON}$  (max) for the BUS and a  $3.3\Omega$   $R_{ON}$  (typ) for the D+ and D- lines. The EV kit is powered by the USB BUS. An on-board MAX15007A automotive regulator provides the IN reference voltage. If a 60mA/120mA current threshold is desired, the MAX20046GTC/V+ can be ordered and interchanged with U1.

#### **Benefits and Features**

- Protects USB BUS, D+, and D- Signals from Overvoltages Up to 18V and ESD Events
- USB BUS Undervoltage Lockout
- 23mA/45mA (typ) USB BUS Overcurrent-Protection Threshold
- 1ms Overcurrent Blanking Time
- Passes 480Mbps USB Data Signals
- Low On-Resistance
  - BUS: 500mΩ (max)
  - D+ and D-: 3.3Ω (typ)
- FAULT Output Signal
- USB Powered
- Fully Assembled and Tested
- Evaluates the MAX20046 IC in a 12-Pin TQFN Package

<u>Ordering Information</u> appears at end of data sheet.

#### **Quick Start**

#### **Required Equipment**

- MAX20046 EV kit
- 5V, 2A DC power supply (Supply A)
- 18V, 2A DC power supply (Supply B)
- Logic function generator
- Oscilloscope

#### **Procedure**

The EV kit is fully assembled and tested. Follow the steps below to verify board operation. Caution: Do not turn on the power supplies until all connections are completed.

**Evaluates: MAX20046** 

- 1) Verify that shunts are installed as follows:
  - JU1: Pins 1-2 (MAX20046 BUS switch disabled)
  - JU2: Pins 1-2 (IN connected to on-board 3.3V reference)
- 2) Set the Supply A output to 5V, the Supply B output to 18V, and disable both outputs.
- Set the logic function generator as follows: 3V<sub>P-P</sub>, 1.5V
  DC offset square wave, 500kHz, and disable the output.
- 4) Connect the Supply A positive output to the red BUS test point on the EV kit and connect the supply ground to the nearby black GND test point.
- 5) Connect the Supply B ground to the GND test point close to the HVBUS test point on the EV kit. Connect a voltage probe test lead to the Supply B positive output for later use.
- 6) Using a Type A USB receptacle inserted into J3, connect the logic function generator to D+ and GND.
- 7) Enable both power-supply outputs.
- 8) Enable the function generator output.
- 9) Install a shunt on jumper JU1, pins 2-3 (MAX20046 BUS switch enabled).
- 10) Use the oscilloscope to probe the HVBUS and HVD+ test points.
- 11) Verify that HVBUS is 5V and that the waveform on HVD+ is a 500kHz square wave and is approximately 3V<sub>P-P</sub>.
- 12) Momentarily touch the HVBUS test point on the EV kit with the voltage probe from the Supply B positive output. The FAULT signal asserts a logic-low while the fault is present.



### **Detailed Description of Hardware**

The MAX20046 EV kit demonstrates the MAX20046 automotive Hi-Speed USB 2.0 protector switch IC, featuring OVP, ESD protection, UVLO protection, and OCP for automotive USB applications.

The IC protects the USB BUS, D+, and D- data lines from overvoltage conditions, such as a short-to-battery up to 18V and ESD events up to 25kV (air) and 8kV (contact). The OVP feature protects the D+ and D- lines against high-voltage conditions such as a short-to-BUS. The UVLO feature protects the BUS line against low-voltage conditions such as a short-to-ground. The BUS OCP threshold is fixed at 23mA/45mA (typ). A 1ms blanking period allows momentary BUS shorts to be ignored, such as those created by hot-swapping a capacitive load. All faults can be monitored using the FAULT PCB pad, pulled up to IN through resistor R1.

The device can pass high-speed USB differential (D+ and D-) signals up to 480Mbps, and has a low  $500m\Omega$   $R_{ON}$  (max) for BUS and a  $3.3\Omega$   $R_{ON}$  (typ) for the D+ and D-data lines. The EV kit is powered by the USB BUS. The 3.3V automotive regulator (U2, MAX15007A) provides an on-board IN reference voltage. A user can provide a 3V to 3.6V IN reference voltage across the VIN and GND PCB pads. The MAX20046 (U1) IC's automotive operating temperature range is from -40°C to +105°C.

Long USB wire lengths contribute to increased wiring inductance, resulting in slow di/dt and dV/dt during a "short to 18V" event. The device includes internal circuitry

that turns off the switch between HVBUS and BUS during an overvoltage on HVBUS; however, energy stored in the wiring inductance can cause the HVBUS node voltage to quickly increase. The RC snubber network limits the positive voltage spike caused by wiring inductance.

Evaluates: MAX20046

#### **Jumper Settings**

#### **BUS Switch Enable (JU1)**

Jumper JU1 on the EV kit enables the device's BUS switch. Test points  $\overline{\text{EN}}$  and GND are provided to control U1's enable signal with an external controller. Refer to the  $\overline{\text{EN}}$  Input section in the *Electrical Characteristics* table in the MAX20046 IC data sheet for proper  $\overline{\text{EN}}$  logic levels when using an external controller. See  $\underline{\text{Table 1}}$  for proper JU1 jumper settings.

#### **IN Reference Voltage Selection (JU2)**

Jumper JU2 on the EV kit selects the reference voltage for the device's IN pin. IN can either be supplied by the USB BUS through the on-board automotive 3.3V regulator (U2, MAX15007A), or by a user-supplied reference voltage. Test points VIN and GND are provided to supply the device with an external 3V to 3.6V reference voltage. See Table 2 for proper JU2 jumper settings.

#### **ISET OCP Threshold Selection (JU3)**

Jumper JU3 on the EV kit selects the current threshold for OCP (overcurrent protection). With pins 1-2 shorted, the current threshold is 45mA. With pins 2-3 shorted, the current threshold is 23mA. See <u>Table 3</u> for proper JU3 jumper settings.

Table 1. MAX20046 Enable (JU1)

SHUNT POSITION	EN PIN	EN PIN BUS SWITCH	
1-2	Connected to IN Disabled		
2-3	Connected to GND	_	
Not installed	Connected to EN PCB pad		

Table 2. MAX20046 IN Reference Voltage Selection (JU2)

SHUNT POSITION	IN PIN
1-2	Connected to on-board LDO
2-3	Connected to IN test point
Not installed	Unconnected

Table 3. MAX20046 EV Kit ISET OCP Threshold Selection (JU3)

SHUNT POSITION	ISET PIN	CURRENT THRESHOLD
1-2	Connected to IN	45mA
2-3	Connected to GND	23mA
Not installed	Internal pulldown	23mA

### **Ordering Information**


PART	TYPE
MAX20046EVKIT#	EV Kit

<sup>#</sup>Denotes RoHS compliant.


#### **MAX20046 EV Bill of Materials**

QTY	REFERENCE	DESCRIPTION	MANUFACTURER	MFG PART NO.
1	C1	0.1uF 0603 50V X7R 10%	Murata	GRM188R71H104KA93D
2	C2, C6	10uF 0805 25V X5R 20%	Murata	GRM219R61E106KA12D
2	C3, C4	1uF 0805 16V X7R 10%	Murata	GRM21BR71C105KA01K
1	C8	10uF 0805 6.3V X7R 20%	Murata	GRM21BR70J106ME76L
4	C14 - C17	OPEN		
1	J1	USB A receptacle	KYCON	KUSBX-SMT-AS1N-B30
1	J3	USB A plug	KYCON	KUSBX-SMT2AP5S-B30
4	L4 - L7	0Ω Resistor 0402	Any (Yageo)	RC0402JR-070RL
3	JU1, JU2, JU3	100 mil header	TE Connectivity	4-103327-0
5	EN, FAULT, GND, VIN	Wire Loop (18 or 20 gauge wire)		
3	R1, R2, R3	100k 0603 0.1W 5%	KOA	RK73B1JTTD104J
1	R4	1Ω 0603 0.1W 1%	Yageo	RC0603FR-071RL
1	U1	USB Protection IC	Maxim	MAX20046GTCA/V+
1	U2	3.3V Linear Voltage Regulator	Maxim	MAX15007AASA+
1	_	PCB: MAX20046 EVALUATION KIT#	Maxim	_

### **MAX20046 EV Kit Schematics**

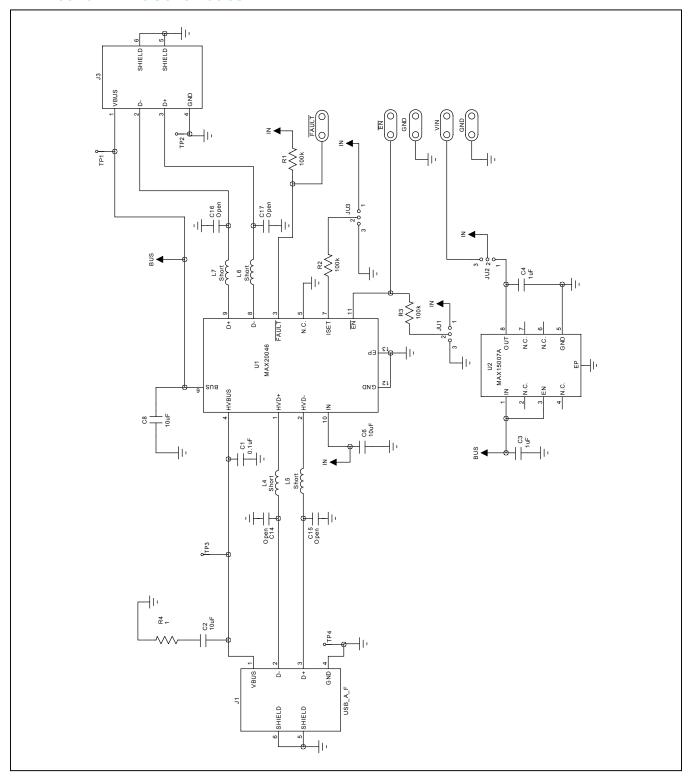


## **MAX20046 EV Kit PCB Layouts**

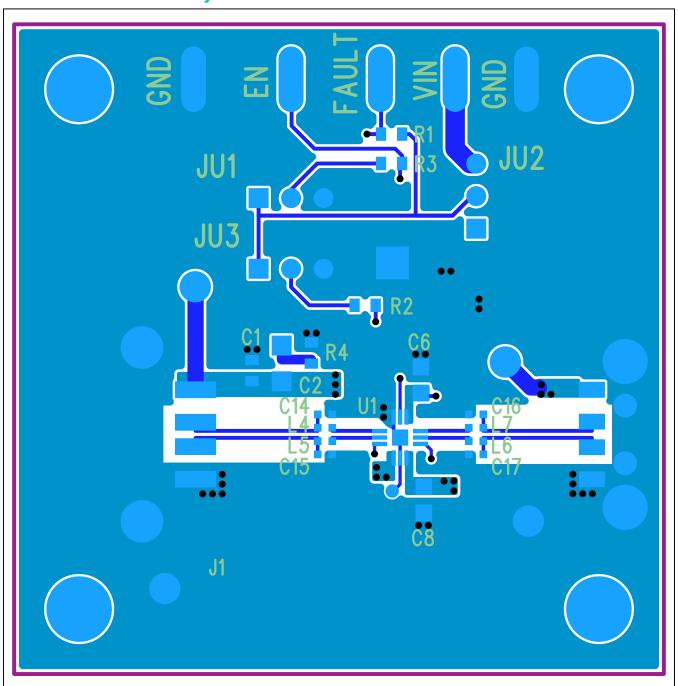


MAX20046 EV Kit Component Placement Guide—Top

## MAX20046 EV Kit PCB Layouts (continued)

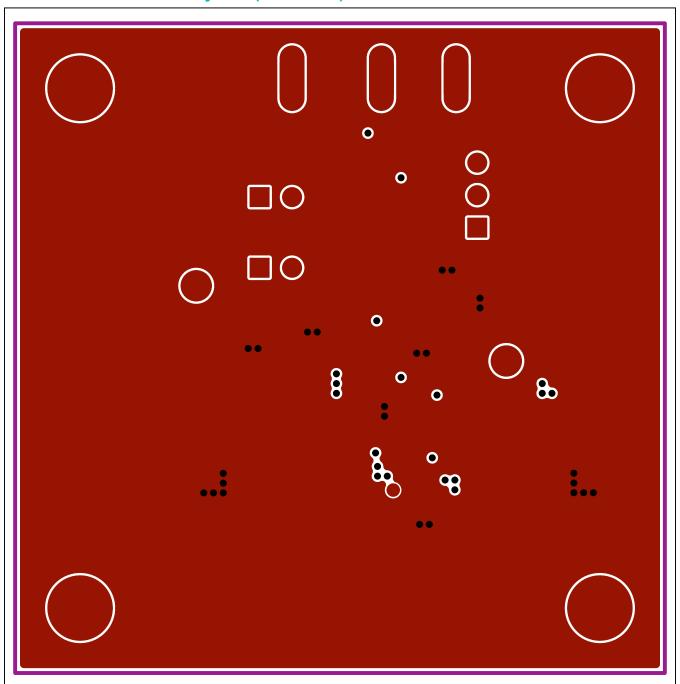


MAX20046 EV Kit PCB Layout—Layer 2

# MAX20046 EV Kit PCB Layouts (continued)

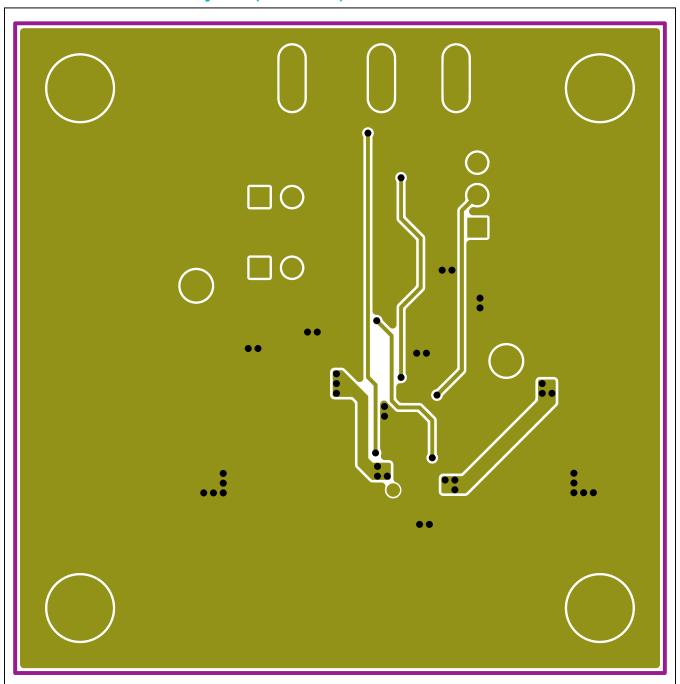


MAX20046 EV Kit PCB Layout—Layer 3

# MAX20046 EV Kit PCB Layouts (continued)

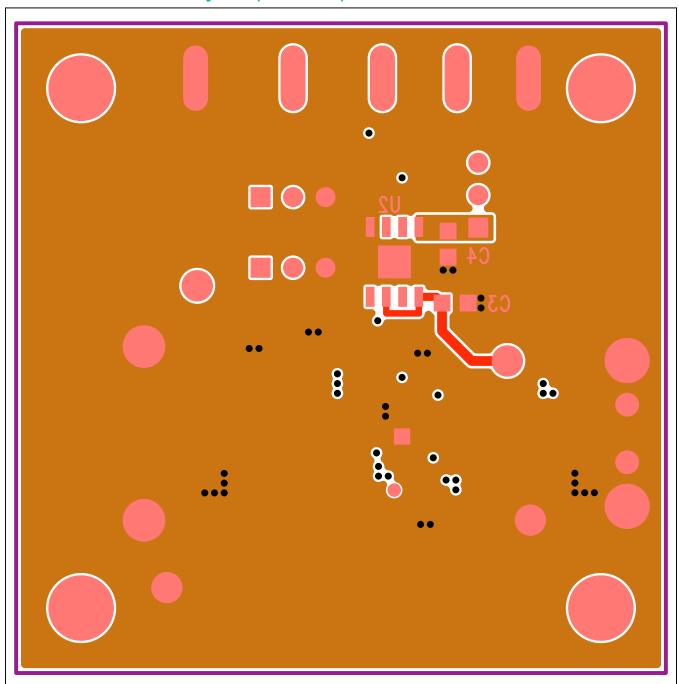


MAX20046 EV Kit PCB Layout—Bottom

### MAX20046 EV Kit PCB Layouts (continued)

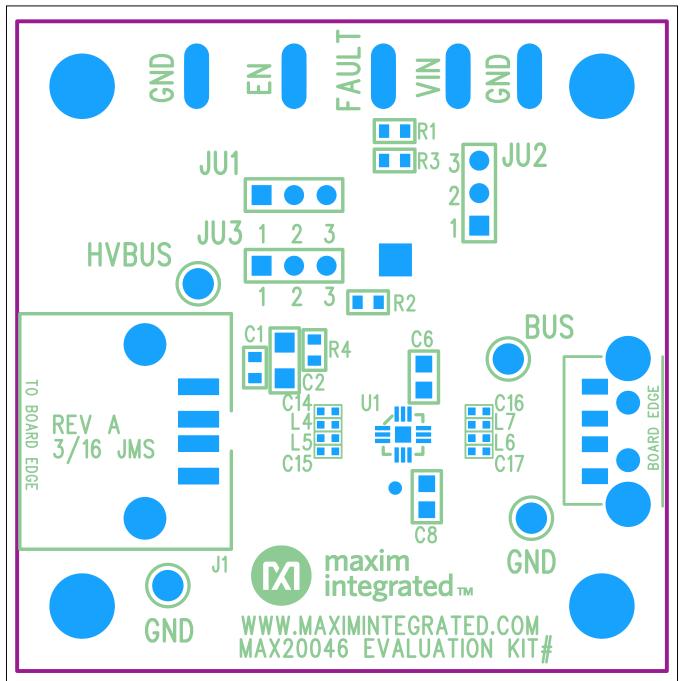

MAX20046 EV Kit Component Placement Guide—Top Silkscreen

## MAX20046 EV Kit PCB Layouts (continued)

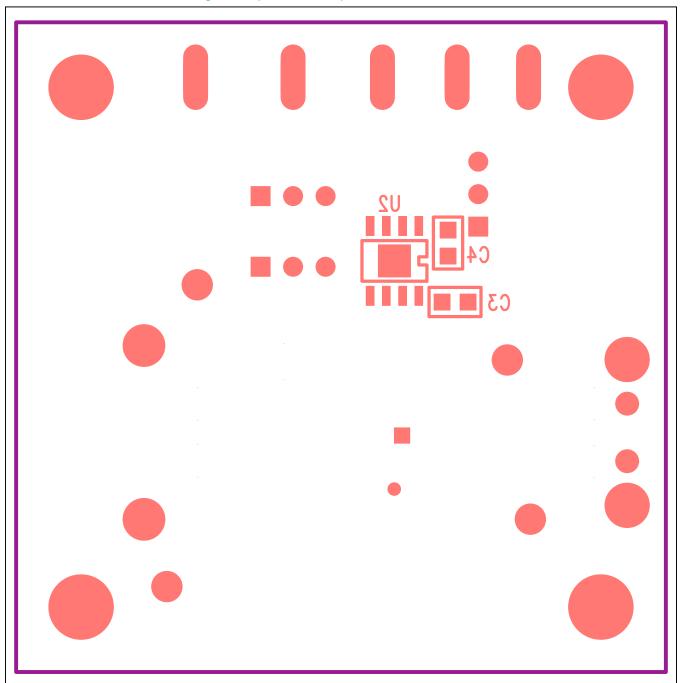

MAX20046 EV Kit Component Placement Guide—Bottom Silkscreen

### MAX20046 Evaluation Kit

### **Revision History**

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	1/17	Initial release	_

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.

Evaluates: MAX20046

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Maxim Integrated: MAX20046EVKIT#