

MAX20096 Evaluation Kit/ MAX20096 Evaluation System

Evaluates: MAX20096

General Description

The MAX20096 evaluation kit (EV kit) provides a proven design to evaluate the MAX20096 dual-channel synchronous buck, high-brightness LED controller with and without SPI interface for high-power HB LED drivers. The EV kit is set up as a dual-buck LED driver and operates from a 4.5V to 65V DC supply voltage. The EV kit is configured to deliver up to 3A in each string of LEDs for both channels. The total voltage of the string can vary from 3V to 55V. The anode of the LED string should be connected to the LED+ terminal; the cathode should be connected to PGND.

Benefits and Features

- 4.5V to 65V Input Voltage
- Drives 1–16 LEDs in Each of the Dual Channels
- 0A to 3A LED Current
- Demonstrates SPI Interface Capability
- Demonstrates PWM Dimming and Analog Dimming Using the SPI Interface
- Demonstrates LED Open/Short Faults Monitoring Using the SPI Interface
- Monitors the LED Current Using the Graphical User Interface (GUI)
- Proven PCB and Thermal Design
- Fully Assembled and Tested

MAX20096 EV Kit Files

| FILE | DESCRIPTION |
|-------------------|------------------------|
| MAX20096EVKit.exe | Windows® GUI Installer |

Ordering Information appears at end of data sheet.

Windows is a registered trademark and registered service mark of Microsoft Corporation.

Quick Start

Required Equipment

- MAX20096 EV kit
- MINIQUSB interface board and USB cable
- 5V to 65V, 4A DC power supply
- Four digital voltmeters
- Two series-connected HB LED strings rated to no less than 4A
- Two current probes to measure the HB LED current
- Small flat-blade screwdriver to turn the potentiometer wiper adjustment pin

Note: In the following sections, software-related items are identified by bolding. Text in **bold** refers to items directly from the EV kit software. Text in **bold and underlined** refers to items from the Windows operating system.

Procedure

- 1) Visit www.maximintegrated/evkitsoftware to download the latest version of the EV kit software, MAX20096EVKit.exe.
- 2) Install the EV kit software GUI on your PC by running the MAX20096EVKit.exe program. The EV kit software application will be installed with the required MINIQUSB drivers.
- 3) Connect the MINIQUSB board to J7 and J14 on the EV kit.
- 4) If connecting multiple EV kits in a daisy-chain, see the [Daisy-Chain Connections](#) section.
- 5) Verify jumper settings, as shown in [Table 1](#) and [Table 2](#).
- 6) Connect the power supply to the IN and GND1 terminals on the EV kit.
- 7) Connect the LED loads to the LED1+/GND1 and LED2+/GND2 terminals on the EV kit.
- 8) Connect the MINIQUSB board to the PC running the software with the provided USB cable.
- 9) For more details on how to use the GUI and all the features available, click on the GUI Help menu item.



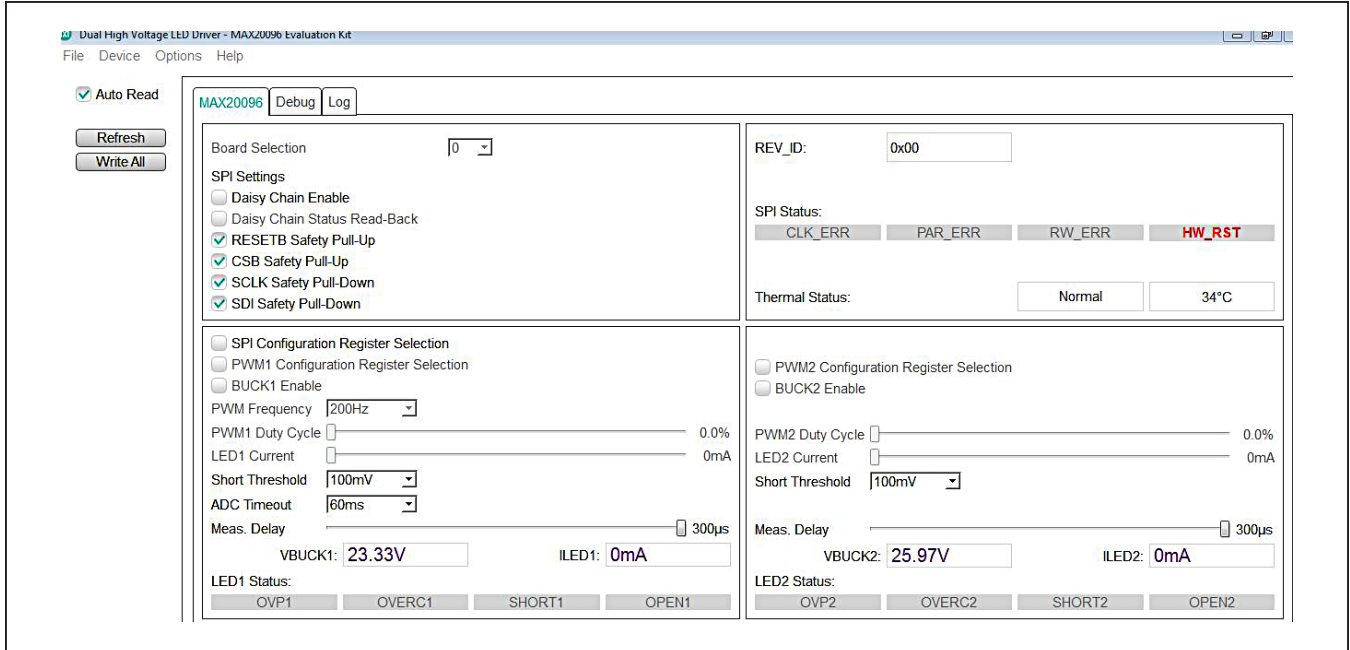


Figure 1. MAX20096 Evaluation Kit Software (GUI Screenshot)

Table 1. Jumper Settings (J1–J6, J12, J15)

| JUMPER | SHUNT POSITION | | |
|--------|--|---|---|
| | 1-2 | 2-3 | OPEN |
| J1 | LED2 analog current set by potentiometer | — | LED2 external analog current control on REF12 |
| J2 | Single input supply (V_{IN}) | — | Dual input supply (V_{IN} and V_{IN2}) |
| J3 | DIM2 pullup to V_{CC} | DIM2 pulldown to GND | DIM2 external control |
| J4 | IC powered by IN | Bypass V_{CC} regulator, V_{IN} range is 4V to 5.5V | — |
| J5 | DIM1 pullup to V_{CC} | DIM1 pulldown to GND | DIM1 external control |
| J6 | LED1 analog current set by potentiometer | — | LED1 external analog current control on REF11 |
| J12 | VIO provided by MINIQUSB board | — | External VIO supply |
| J15 | RESETB pullup | — | No RESETB pullup |

Table 2. Jumper Settings for Single Board and Daisy-Chain (J10, J11, J13)

| JUMPER | SHUNT POSITION | | | |
|--------|----------------|---------------------------|-----------------------------|--------------------------|
| | SINGLE BOARD | DAISY-CHAIN (FIRST BOARD) | DAISY-CHAIN (MIDDLE BOARDS) | DAISY-CHAIN (LAST BOARD) |
| J10 | 1-2 | 1-2 | 2-3 | 2-3 |
| J11 | Open | 1-2 | Open | 2-3 |
| J13 | 1-2 | 2-3 | 2-3 | 2-3 |

Daisy-Chain Connections

When connecting multiple EV kits in a daisy-chain, only connect to the MINIQUSB board from the first EV kit. The other EV kits do not require the MINIQUSB boards; if present, they should not be connected through the USB. Connect J9 of the first EV kit to J8 of the next EV kit, then connect J9 of the second board to J8 of the next board, and so on. **Note:** Do not connect to J9 of the last board or to J8 of the first board. Configure the jumpers on these boards per [Table 2](#).

The EV kit software automatically detects the daisy-chain configuration when it first starts up and connects. If this configuration is changed while the software is running, the user must reconnect by pressing F9 or selecting **Connect** from the **Device** menu bar. Select which board to be controlled by the software from the **Board Selection** drop-down list. The **0** corresponds to the first EV kit board in the daisy-chain; the highest numbered board is the last one in the daisy-chain.

Detailed Description

The MAX20096 EV kit demonstrates the MAX20096 dual-channel synchronous buck controller for high-power HB LED drivers with and without SPI interface. The IC consists of a dual-channel, fully synchronous step-down converter with external MOSFETs. The IC also includes the SPI interface, which can be used for PWM dimming, analog dimming, fault monitoring, turning on and off the dual channels individually, monitoring the LED output voltage, and reading the LED currents of each channel. The IC can drive a series string of LEDs at currents as high as 3A. The IC uses a proprietary average current-mode-control scheme to regulate the inductor current. This control method does not need any control-loop compensation, maintaining nearly constant switching frequency. Inductor current sense is achieved by sensing the current in the bottom synchronous n-channel MOSFET. The EV kit is configured to deliver up to 3A to a series LED string. The string-forward voltage can vary from 3V to 55V.

PWM Dimming

The GUI that comes with the EV kit communicates to the SPI interface of the IC so PWM dimming can be done. The dimming frequency can be varied from 200Hz to 2kHz through the GUI. The duty cycle can also be adjusted to control the brightness of the LEDs. Each of the dual channels can be dimmed separately and with

different duty cycles. PWM dimming can be done without the SPI Interface as well. Keep jumpers J3 and J5 in the open position and connect an external signal to the DIM1 and DIM2 test points. Analog PWM dimming can also be done using the DIM1/DIM2 test points. Force an external analog DC voltage from 0.2V to 3V to vary the duty cycle from 0% to 100%, respectively.

Analog Dimming

The LED currents on both channels can be adjusted through the GUI using the SPI interface. The LED current can be varied from 0A to 3A. If the current-sense resistors are chosen for a different full-scale current, use the GUI's **Options** menu bar and select **Change Design Values**, and then **RCS1** and **RCS2** to set the correct current-sense resistor value.

The LED currents can also be adjusted through the REFI pins. Close jumpers J1 and J6. Using the potentiometers (R5 and R23), LED currents of both channels can be varied. The REFI voltage can be changed from 0.2V to 1.25V. Below the 0.2V threshold, the LED currents are zero and when REFI voltage is adjusted higher than 1.25V, the internal REFI voltage is clamped for the full-scale LED current.

Fault Monitoring

Faults like LED Short, LED Open, LED overcurrent and overvoltage are reported in the GUI through the SPI interface. The Short LED threshold can be programmed from 100mV to 400mV in steps of 100mV.

LED Current Monitor and LED Output Voltage

The GUI reports the LED currents of each of the channels. The IC's IOUTV1 and IOUTV2 pins report a voltage proportional to the LED currents. The internal ADC converts this voltage to a digital value and reports it through the SPI interface, which can be read using the GUI. Similarly, the LED output voltage is also digitized and monitored through the GUI.

Ordering Information

| PART | TYPE |
|----------------|-----------|
| MAX20096EVSYS# | EV System |

#Denotes RoHS compliant.


MAX20096 EV Kit Bill of Materials

| REF DES | QTY | VALUE | DESCRIPTION | MFG PART # | MANUFACTURER |
|--|-----|----------------|---|--|---------------------|
| C1, C28 | 2 | 1UF | CAPACITOR; SMT (0805); CERAMIC CHIP; 1UF; 50V; TOL=20%; TG=-55 DEGC TO +125 DEGC; TC=X7R; AUTO | CGA4J3X7R1H105M125AB | TDK |
| C2, C6, C14, C16, C23, C27 | 6 | 0.1UF | CAPACITOR; SMT (0603); CERAMIC CHIP; 0.1UF; 50V; TOL=10%; TG=-55 DEGC TO +125 DEGC; TC=X7R; AUTO; SOFT TERMINATION | CGA3E2X7R1H104K080AE | TDK |
| C3, C12, C18, C26 | 4 | 1000PF | CAPACITOR; SMT (0603); CERAMIC CHIP; 1000PF; 100V; TOL=5%; TG=-55 DEGC TO +125 DEGC; TC=C0G; AUTO | CGA3E2C0G2A102J080AA | TDK |
| C4, C20 | 2 | 1UF | CAPACITOR; SMT (0603); CERAMIC CHIP; 1UF; 35V; TOL=10%; TG=-55 DEGC TO +125 DEGC; TC=X7R; AUTO | CGA3E1X7R1V105K | TDK |
| C9, C11, C17, C21 | 4 | 4.7UF | CAPACITOR; SMT (1210); CERAMIC CHIP; 4.7UF; 100V; TOL=10%; TG=-55 DEGC TO +125 DEGC; TC=X7S; AUTO | CGA6M3X7S2A475K200AE | TDK |
| C10, C19 | 2 | 0.22UF | CAPACITOR; SMT (0603); CERAMIC CHIP; 0.22UF; 50V; TOL=10%; TG=-55 DEGC TO +125 DEGC; TC=X7R; AUTO | CGA3E3X7R1H224K080AB; GCM188R71H224KA49 | TDK; MURATA |
| C13 | 1 | 2.2UF | CAPACITOR; SMT (0603); CERAMIC; 2.2UF; 6.3V; TOL=10%; TG=-55 DEGC TO +125 DEGC; TC=X7R; AUTO | CGA3E1X7R0J225K080AC | TDK |
| C15 | 1 | 0.1UF | CAPACITOR; SMT (0805); CERAMIC CHIP; 0.1UF; 100V; TOL=10%; TG=-55 DEGC TO +125 DEGC; TC=X7R; AUTO | CGA4J2X7R2A104K125AA | TDK |
| CS, SDI, SDO, VCC, VIO, DIM1, DIM2, RSTB, SCLK, REF1, REF2, IOUTV1, IOUTV2 | 13 | N/A | TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.35IN; BOARD HOLE=0.063IN; WHITE; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH; RECOMMENDED FOR BOARD THICKNESS=0.062IN; NOT FOR COLD TEST | 5007 | KEYSTONE |
| D1, D4 | 2 | 1N4448WS-7-F | DIODE; SWT; SOD-323; PIV=75V; IF=0.5A | 1N4448WS-7-F | DIODES INCORPORATED |
| D2, D3, D5, D6 | 4 | B180-13-F | DIODE; SCH; SCHOTTKY BARRIER RECTIFIER; SMA; PIV=80V; IF=1A | B180-13-F | DIODES INCORPORATED |
| IN, IN2, AGND, GND1-GND4, LED1+, LED2+ | 9 | MAXIMPAD | EVK KIT PARTS; MAXIM PAD; WIRE; NATURAL; SOLID; WEICO WIRE; SOFT DRAWN BUS TYPE-S; 20AWG | 9020 BUSS | WEICO WIRE |
| J1, J2, J6, J12, J15 | 5 | PCC02SAAN | CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT THROUGH; 2PINS; -65 DEGC TO +125 DEGC | PCC02SAAN | SULLINS |
| J3-J5, J10, J11, J13 | 6 | PCC03SAAN | CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT THROUGH; 3PINS; -65 DEGC TO +125 DEGC | PCC03SAAN | SULLINS |
| J7 | 1 | SSQ-108-23-G-S | CONNECTOR; FEMALE; THROUGH HOLE; SSQ SERIES; STRAIGHT; 8PINS | SSQ-108-23-G-S | SAMTEC |

MAX20096 EV Kit Bill of Materials (continued)


| REF DES | QTY | VALUE | DESCRIPTION | MFG PART # | MANUFACTURER |
|--------------------------------------|-----|-------------------------|--|--|----------------------------|
| J8, J9 | 2 | B6B-PH-K-S(LF)(SN) | CONNECTOR; MALE; THROUGH HOLE; PH SERIES; STRAIGHT; 6PINS | B6B-PH-K-S(LF)(SN) | JST MANUFACTURING |
| J14 | 1 | PEC08DAAN | CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT; 16PINS; -65 DEGC TO +125 DEGC | PEC08DAAN | SULLINS ELECTRONICS CORP. |
| L1, L2 | 2 | 33UH | INDUCTOR; SMT; FERRITE BOBBIN CORE; 33UH; TOL=+/-20%; 3.1A; -40 DEGC TO +125 DEGC | MSS1278T-333ML | COILCRAFT |
| Q1, Q4 | 2 | BUK9Y58-75B | TRAN; N-CHANNEL TRENCHMOS LOGIC LEVEL FET; NCH; LFPAK; PD-(60.4W); I-(20.7A); V-(75V) | BUK9Y58-75B | NEXPERIA |
| Q2, Q3 | 2 | BUK9Y107-80E | TRAN; N-CHANNEL 80V; 107MOHM LOGIC LEVEL MOSFET; NCH; LFPAK; PD-(37W); I-(11.8A); V-(80V) | BUK9Y107-80E | NXP |
| R1, R24 | 2 | 453K | RESISTOR; 0603; 453K OHM; 1%; 100PPM; 0.10W; THICK FILM | ERJ-3EKF4533V | PANASONIC |
| R2, R25 | 2 | 24.9K | RESISTOR; 0603; 24.9K OHM; 1%; 100PPM; 0.10W; THICK FILM | CRCW060324K9FK | VISHAY DALE |
| R3, R21 | 2 | 49.9K | RESISTOR; 0603; 49.9K OHM; 1%; 100PPM; 0.10W; THICK FILM | CRCW060349K9FK; ERJ-3EKF4992V | VISHAY DALE/PANASONIC |
| R4, R14, R22 | 3 | 10K | RESISTOR; 0603; 10K; 1%; 100PPM; 0.10W; THICK FILM | CRCW060310K0FK; ERJ-3EKF1002 | VISHAY DALE; PANASONIC |
| R5, R23 | 2 | 10K | RESISTOR; THROUGH-HOLE-RADIAL LEAD; 3296 SERIES; 10K OHM; 10%; 100PPM; 0.5W; SQUARE TRIMMING POTENTIOMETER; 25 TURNS; MOLDER CERAMIC OVER METAL FILM | 3296W-1-103LF | BOURNS |
| R6, R20, R33, R34 | 4 | 0.13 | RESISTOR; 1206; 0.13 OHM; 1%; 100PPM; 0.5W; THICK FILM | CSR1206FTR130 | STACKPOLE ELECTRONICS INC |
| R7, R8, R10, R16, R18, R19, R31, R32 | 8 | 0 | RESISTOR; 0603; 0 OHM; 0%; JUMPER; 0.10W; THICK FILM | CRCW06030000ZS; MCR03EZPJ000; ERJ-3GEY0R00 | VISHAY DALE/ROHM/PANASONIC |
| R9, R17 | 2 | 1K | RESISTOR; 0603; 1K; 1%; 100PPM; 0.10W; THICK FILM | CRCW06031001FK; ERJ-3EKF1001V | VISHAY DALE; PANASONIC |
| R11-R13, R15 | 4 | 4.7 | RESISTOR; 0603; 4.7 OHM; 1%; 100PPM; 0.10W; THICK FILM | CRCW06034R70FN | VISHAY DALE |
| R26-R28 | 3 | 4.75K | RESISTOR; 0603; 4.75K; 1%; 100PPM; 0.10W; THICK FILM | CRCW06034K75FK; ERJ-3EKF4751 | VISHAY DALE/PANASONIC |
| R29, R30 | 2 | 4.99K | RESISTOR; 0603; 4.99K; 1%; 100PPM; 0.10W; THICK FILM | CRCW06034K99FK; ERJ-3EKF4991V | VISHAY DALE/PANASONIC |
| SW1 | 1 | PTS810 SJM 250 SMTR LFS | SWITCH; SPST; SMT; 16V; 0.05A; PTS 810 SERIES; MICROMINIATURE SMT TOP ACTUATED; GRAY ACTUATOR; RCOIL=0.5 OHM; RINSULATION=100M OHM; C&K COMPONENTS | PTS810 SJM 250 SMTR LFS | C&K COMPONENTS |
| U1 | 1 | MAX20096ATI+ | EVKIT PART-IC; DRV; DUAL CHANNEL HIGH VOLTAGE BUCK LED DRIVER WITH SPI INTERFACE; PACKAGE OUTLINE: 21-0140; PACKAGE CODE: T3255-6C; TQFN32-EP | MAX20096ATI+ | MAXIM |
| — | 1 | PCB | PCB: MAX20096 EVKIT | MAX20096EVKIT# | MAXIM |

MAX20096 EV Kit Schematic

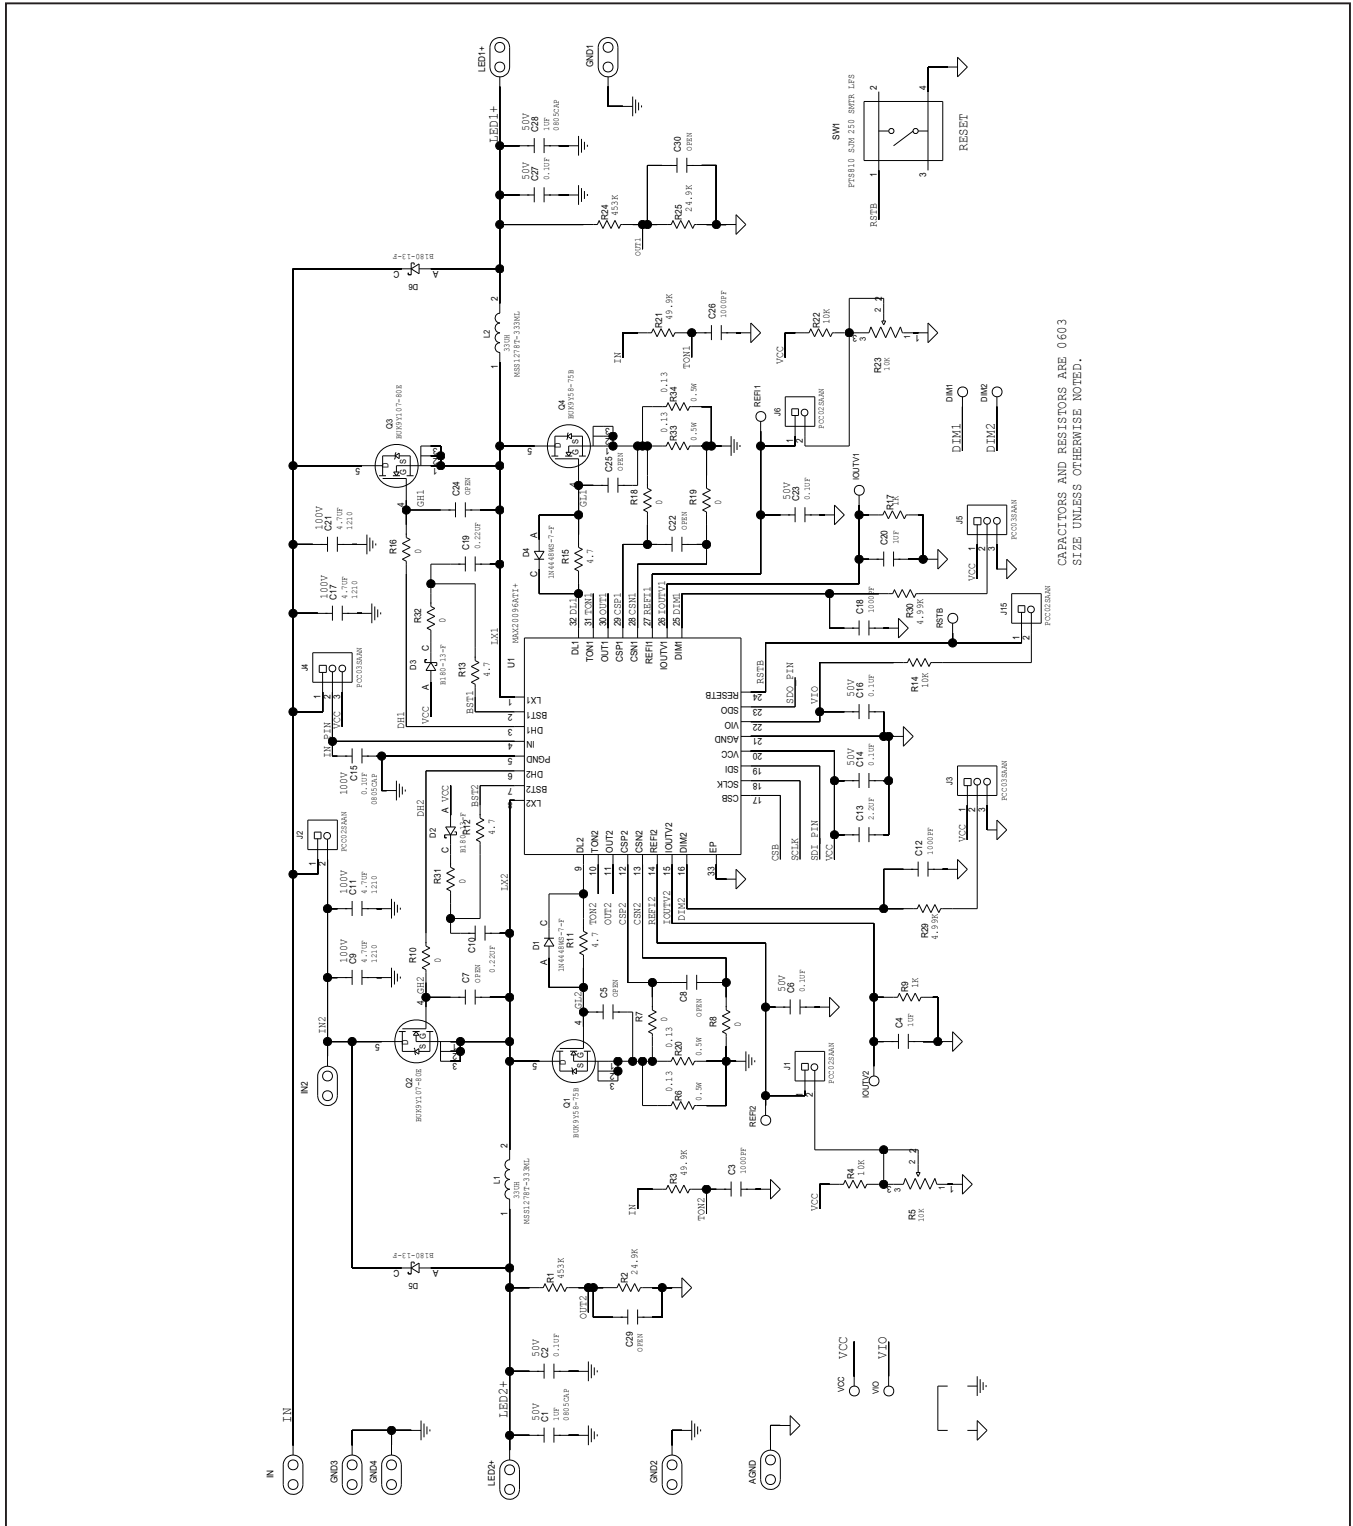


CAPACITORS AND RESISTORS ARE 0603
SIZE UNLESS OTHERWISE NOTED.

MAX20096 EV Kit Schematic (continued)

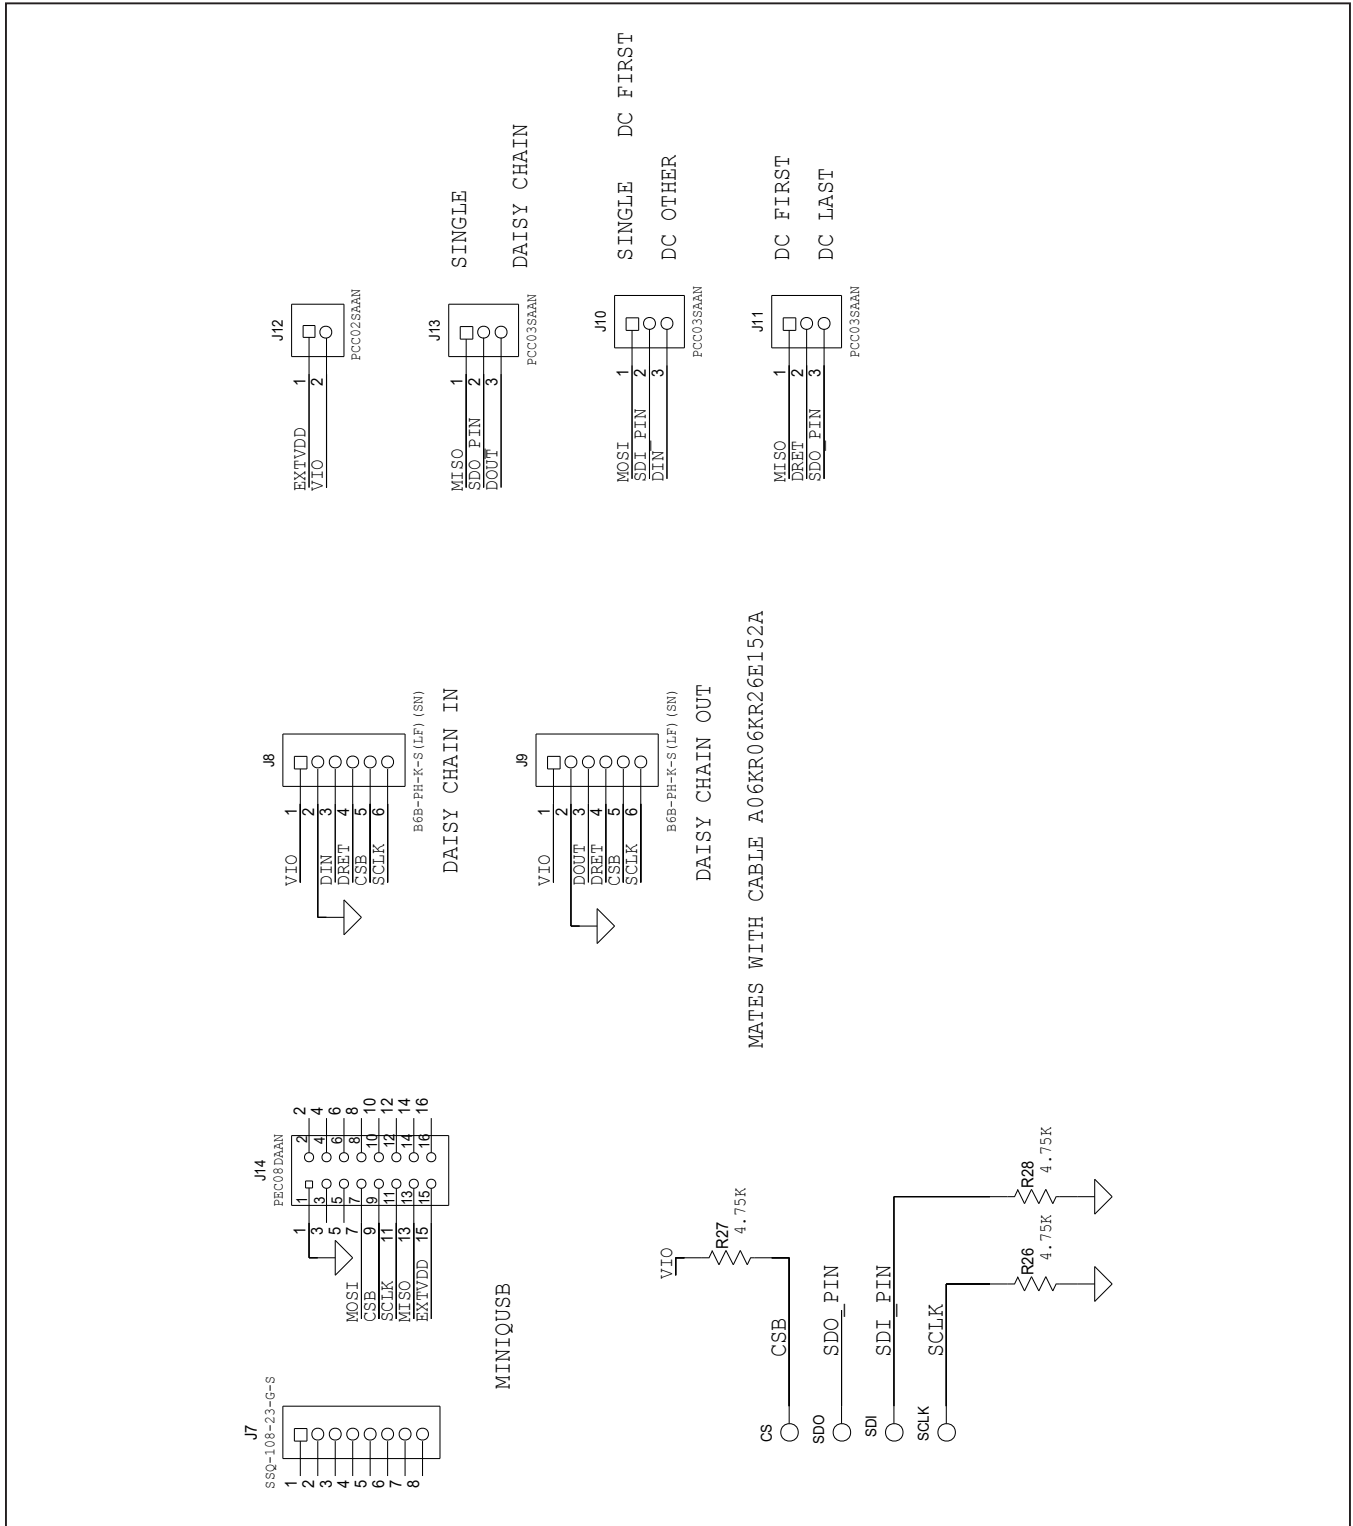


MAX20096 EV Kit PCB Layout Diagrams

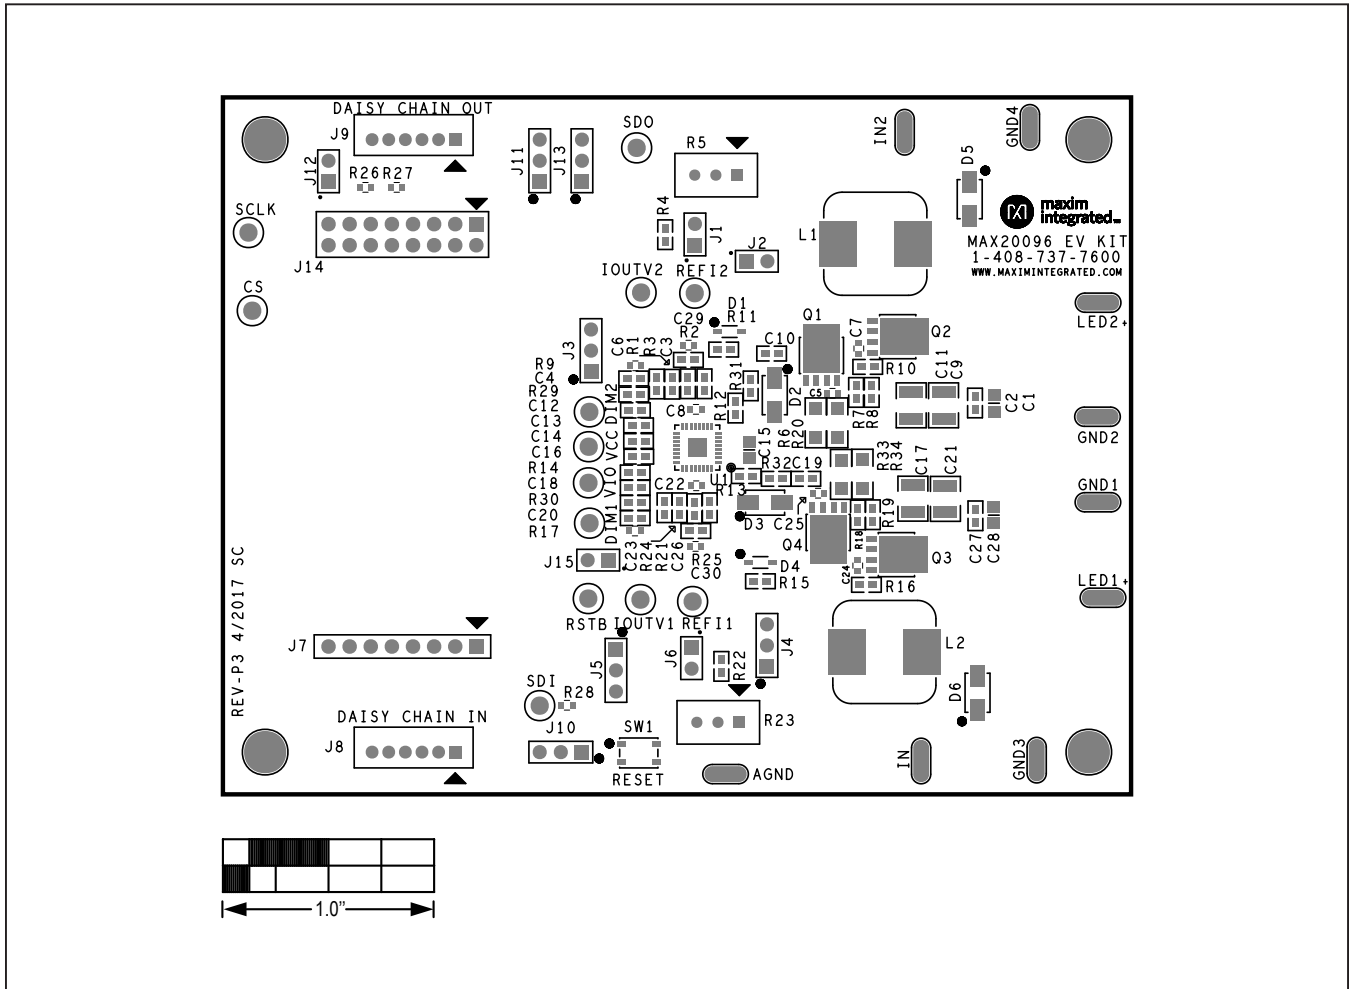


MAX20096 EV Kit Component Placement Guide—Component Side

MAX20096 EV Kit PCB Layout Diagrams (continued)

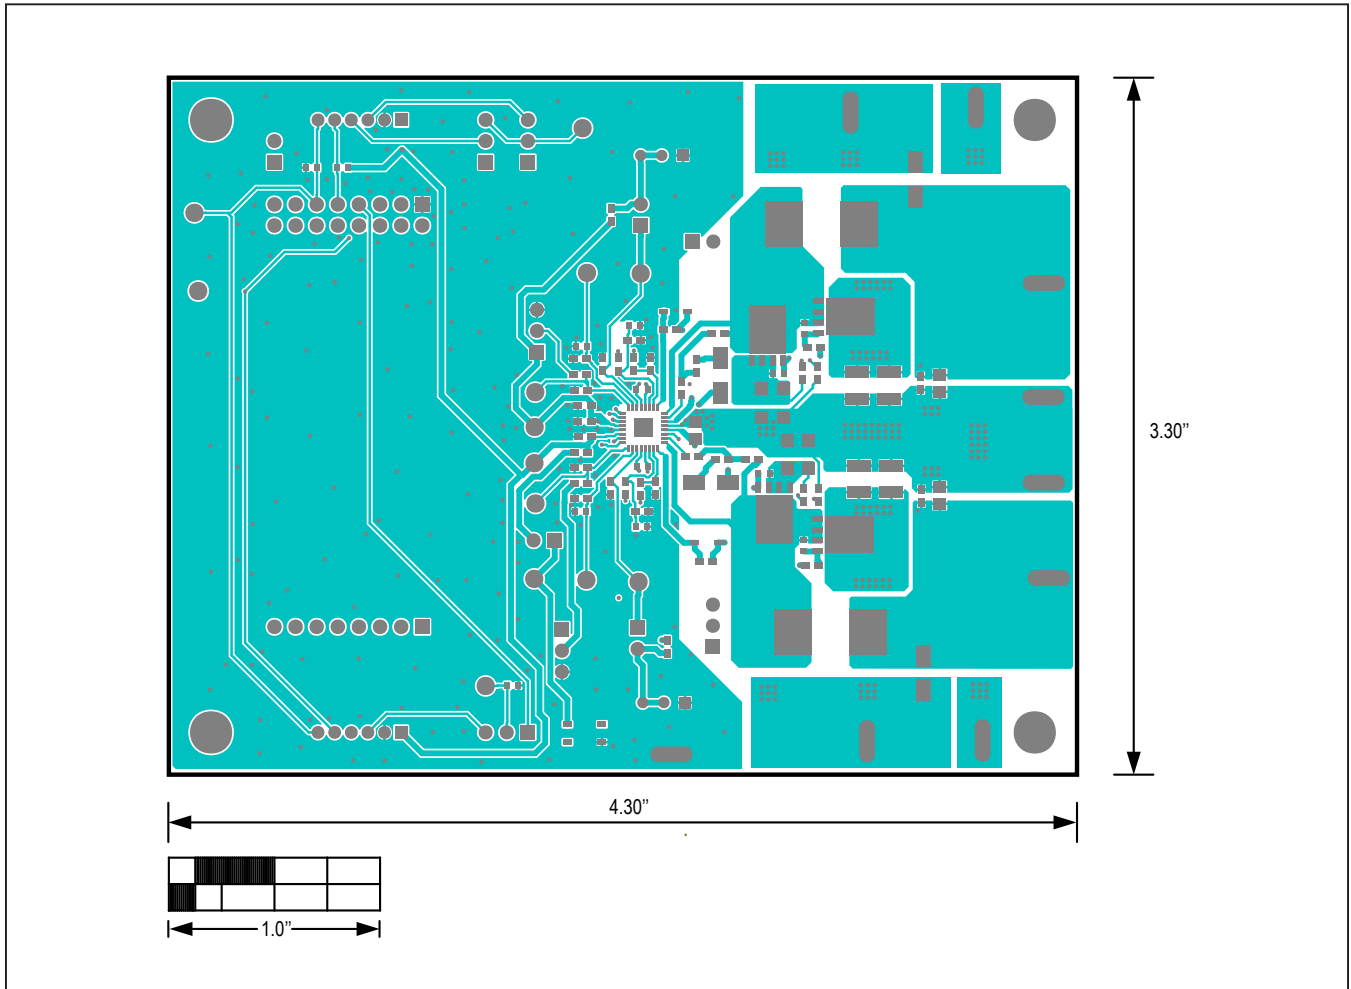


MAX20096 EV Kit PCB Layout—Top Layer

MAX20096 EV Kit PCB Layout Diagrams (continued)

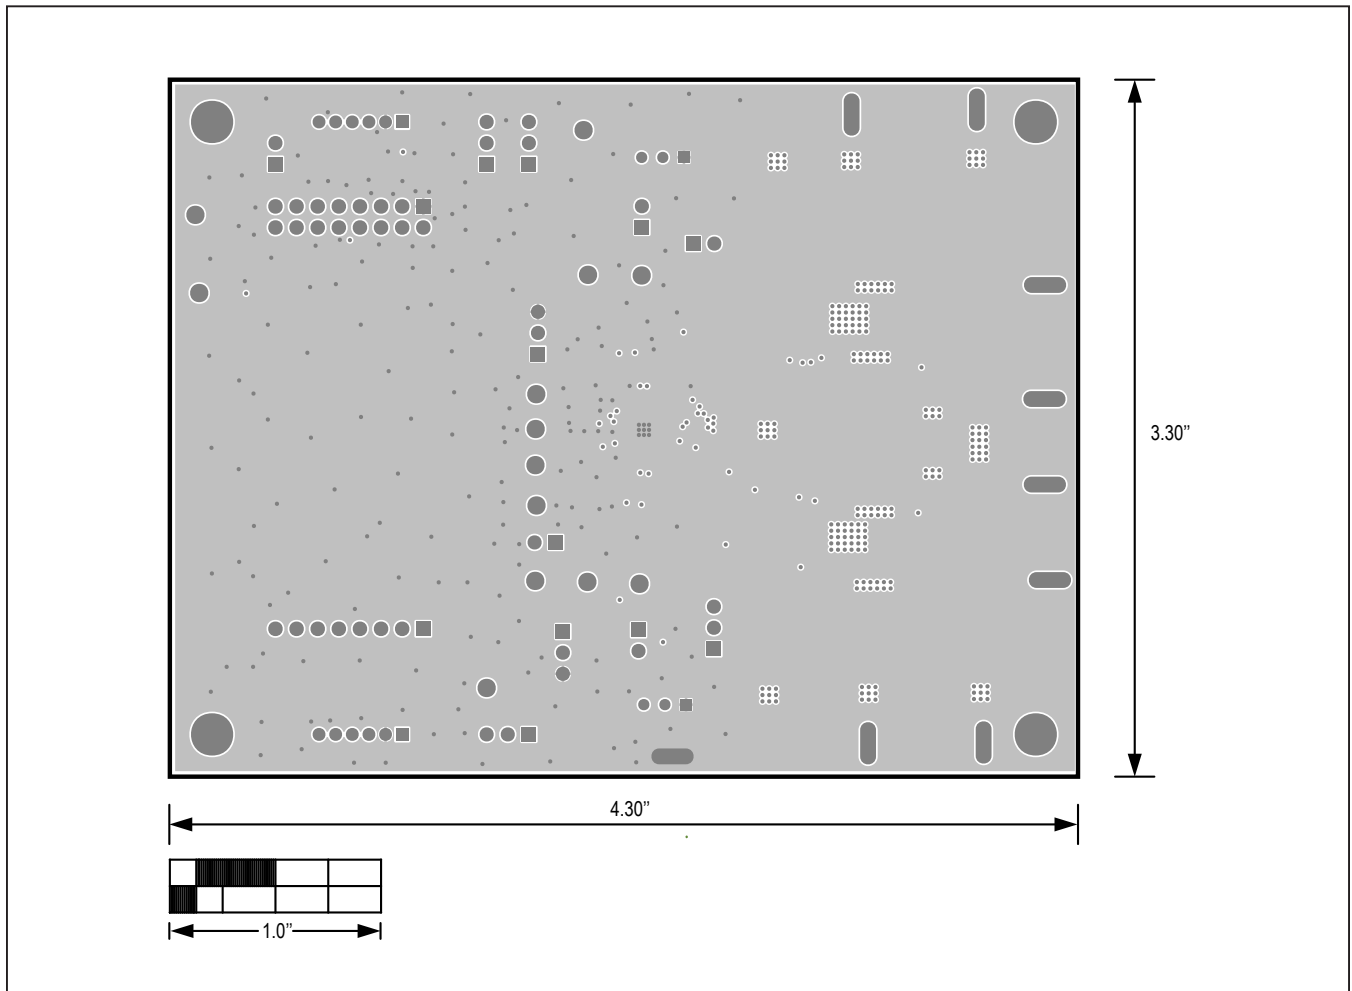


MAX20096 EV Kit PCB Layout—Inner Layer 1

MAX20096 EV Kit PCB Layout Diagrams (continued)

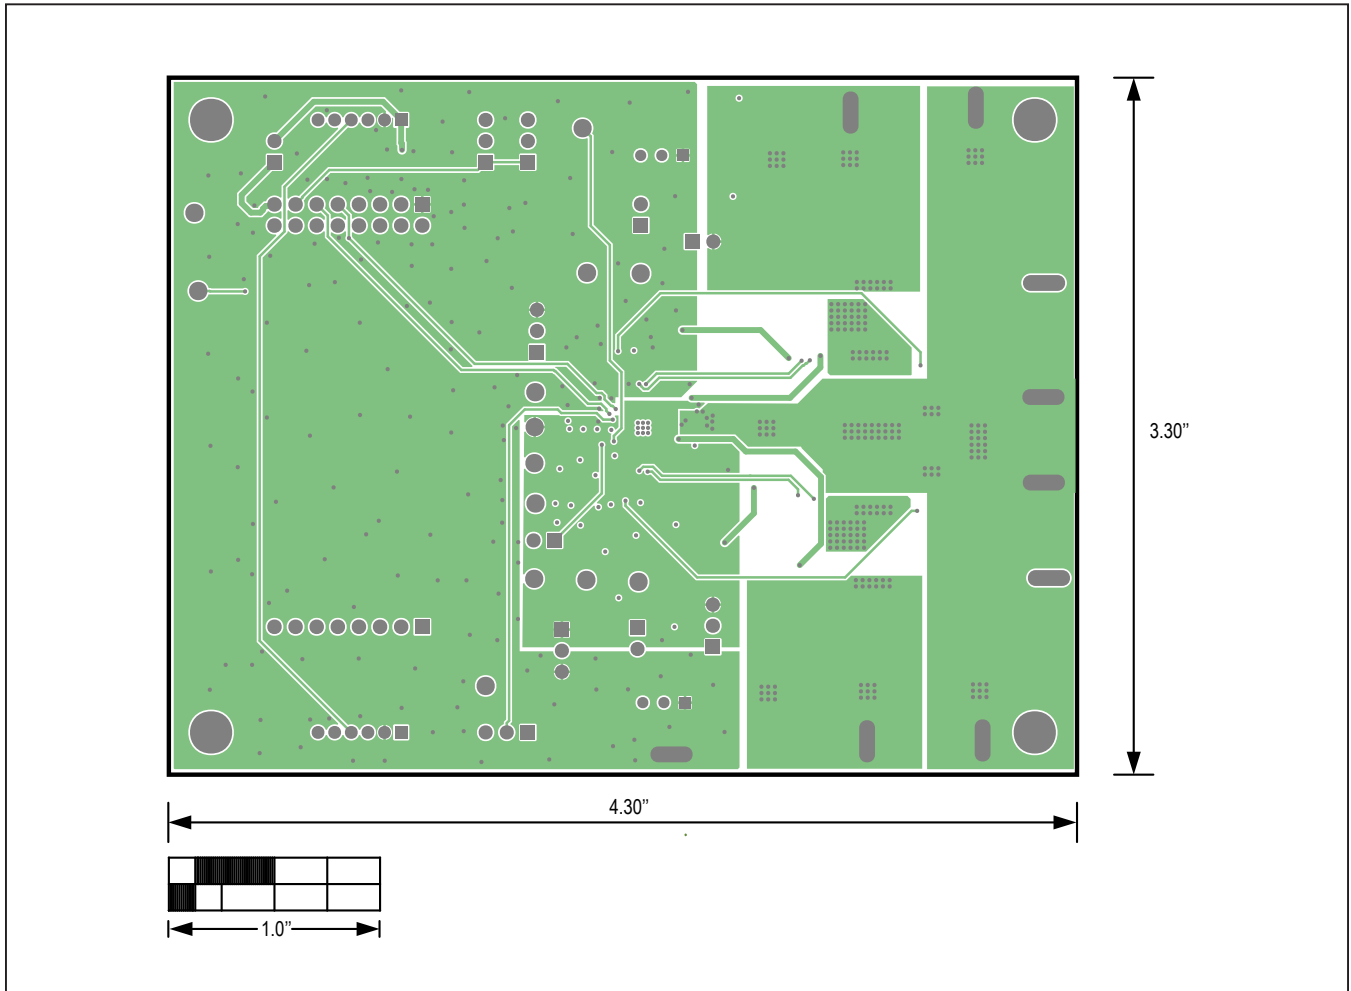

MAX20096 EV Kit PCB Layout—Inner Layer 2

MAX20096 EV Kit PCB Layout Diagrams (continued)

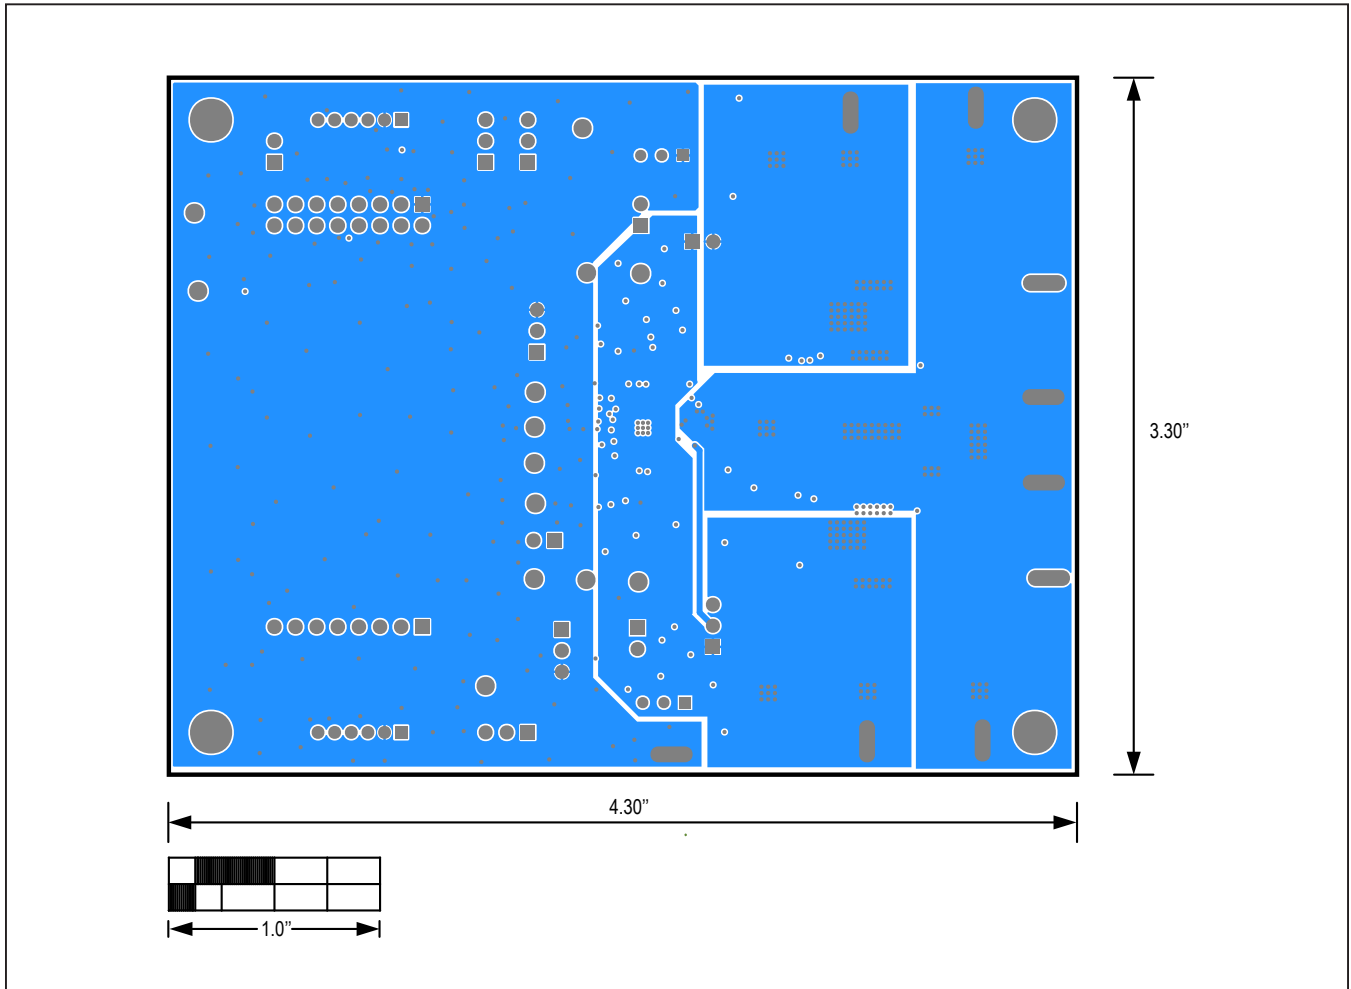

MAX20096 EV Kit PCB Layout—Bottom Layer

Revision History

| REVISION NUMBER | REVISION DATE | DESCRIPTION | PAGES CHANGED |
|-----------------|---------------|---|---------------|
| 0 | 11/17 | Initial release | — |
| 1 | 1/18 | Removed MAX20096 EV System from Ordering Information | 3 |
| 2 | 1/18 | Removed MAX20096 EV System from entire data sheet | 1–13 |
| 3 | 6/19 | Updated title to include MAX20096 Evaluation System, added MAX20096 EV System to Ordering Information | 1–13 |

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Maxim Integrated:](#)

[MAX20096EVSYS#](#)