



EVB-LAN9252-4PORT

Quick Start Guide

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, AnyRate, dsPIC, FlashFlex, flexPWR, Helder, JukeBlox, KeeLoq, KeeLoq logo, Klear, LANCheck, LINK MD, MediaLB, MOST, MOST logo, MPLAB, OptoLyzer, PIC, PICSTART, PIC32 logo, RightTouch, SpyNIC, SST, SST Logo, SuperFlash and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

ClockWorks, The Embedded Control Solutions Company, ETHERSYNCH, Hyper Speed Control, HyperLight Load, IntelliMOS, mTouch, Precision Edge, and QUIET-WIRE are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BodyCom, chipKIT, chipKIT logo, CodeGuard, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, JitterBlocker, KlearNet, KlearNet logo, MiWi, motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PureSilicon, RightTouch logo, REAL ICE, Ripple Blocker, Serial Quad I/O, SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademarks of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2016, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-5224-0264-0

QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
= ISO/TS 16949 =

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

Object of Declaration: EVB-LAN9252-4PORT

EU Declaration of Conformity

Manufacturer: Microchip Technology Inc.
2355 W. Chandler Blvd.
Chandler, Arizona, 85224-6199
USA

This declaration of conformity is issued by the manufacturer.


The development/evaluation tool is designed to be used for research and development in a laboratory environment. This development/evaluation tool is not a Finished Appliance, nor is it intended for incorporation into Finished Appliances that are made commercially available as single functional units to end users under EU EMC Directive 2004/108/EC and as supported by the European Commission's Guide for the EMC Directive 2004/108/EC (8th February 2010).

This development/evaluation tool complies with EU RoHS2 Directive 2011/65/EU.

This development/evaluation tool, when incorporating wireless and radio-telecom functionality, is in compliance with the essential requirement and other relevant provisions of the R&TTE Directive 1999/5/EC and the FCC rules as stated in the declaration of conformity provided in the module datasheet and the module product page available at www.microchip.com.

For information regarding the exclusive, limited warranties applicable to Microchip products, please see Microchip's standard terms and conditions of sale, which are printed on our sales documentation and available at www.microchip.com.

Signed for and on behalf of Microchip Technology Inc. at Chandler, Arizona, USA


Derek Carlson
VP Development Tools

12-Sep-14
Date

NOTES:

Table of Contents

| | |
|--|-----------|
| Preface | 7 |
| Introduction..... | 7 |
| Document Layout | 7 |
| Conventions Used in this Guide | 8 |
| The Microchip Web Site | 9 |
| Development Systems Customer Change Notification Service | 9 |
| Customer Support | 9 |
| Document Revision History | 10 |
| Chapter 1. Overview | |
| 1.1 Introduction | 11 |
| 1.1.1 Abbreviations | 11 |
| Chapter 2. EVB-LAN9252-4PORT | |
| 2.1 Master Configuration | 13 |
| 2.2 Demo | 14 |
| Appendix A. Setting Up Master in Windows® | |
| A.1 Introduction | 17 |
| A.1.1 TwinCAT Ethernet Driver - Installation | 17 |
| Appendix B. EEPROM Programming | |
| B.1 Introduction | 21 |
| B.1.1 EEPROM Programming | 21 |
| Appendix C. Scanning EtherCAT Slaves | |
| C.1 Introduction | 25 |
| C.1.1 Scanning EtherCAT Slaves | 25 |
| Appendix D. Generating SSC Files | |
| D.1 Introduction | 29 |
| D.1.1 Generating SSC Files | 29 |
| Appendix E. Compiling and Programming SoC Firmware | |
| E.1 Introduction | 35 |
| E.1.1 Compiling and Programming SoC Firmware | 35 |
| Appendix F. Programming PIC32 Firmware Using Pre-Built Binaries | |
| F.1 Introduction | 37 |
| F.1.1 Programming PIC32 Firmware Using Pre-Built Binaries | 37 |
| Worldwide Sales and Service | 39 |

NOTES:

Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXA”, where “XXXX” is the document number and “A” is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB® IDE online help. Select the Help menu, and then Topics to open a list of available online help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using and configuring the EVB-LAN9252-4PORT. Items discussed in this chapter include:

- [Document Layout](#)
- [Conventions Used in this Guide](#)
- [The Microchip Web Site](#)
- [Development Systems Customer Change Notification Service](#)
- [Customer Support](#)
- [Document Revision History](#)

DOCUMENT LAYOUT

This document describes how to configure the EVB-LAN9252-4PORT, such as the DIGIO and SPI, as well as various setup options, scanning, and programming. The manual layout is as follows:

- **Chapter 1. “Overview”** – Shows a brief description of the EVB-LAN9252-4PORT board quick setup.
- **Chapter 2. “EVB-LAN9252-4PORT”** – Provides instructions in configuring GPIO.
- **Appendix A. “Setting Up Master in Windows®”** – This appendix shows how to set up Master in Windows.
- **Appendix B. “EEPROM Programming”** – This appendix shows how to program EEPROM.
- **Appendix C. “Scanning EtherCAT Slaves”** – This appendix shows how to scan EtherCAT Slaves.
- **Appendix D. “Generating SSC Files”** – This appendix shows how to change Vendor ID and Object configuration.

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

| Description | Represents | Examples |
|--|---|---|
| Arial font: | | |
| Italic characters | Referenced books | <i>MPLAB® IDE User's Guide</i> |
| | Emphasized text | ...is the <i>only</i> compiler... |
| Initial caps | A window | the Output window |
| | A dialog | the Settings dialog |
| | A menu selection | select Enable Programmer |
| Quotes | A field name in a window or dialog | "Save project before build" |
| Underlined, italic text with right angle bracket | A menu path | <u><i>File>Save</i></u> |
| Bold characters | A dialog button | Click OK |
| | A tab | Click the Power tab |
| N'Rnnnn | A number in verilog format, where N is the total number of digits, R is the radix and n is a digit. | 4'b0010, 2'hF1 |
| Text in angle brackets < > | A key on the keyboard | Press <Enter>, <F1> |
| Courier New font: | | |
| Plain Courier New | Sample source code | #define START |
| | Filenames | autoexec.bat |
| | File paths | c:\mcc18\h |
| | Keywords | _asm, _endasm, static |
| | Command-line options | -Opa+, -Opa- |
| | Bit values | 0, 1 |
| | Constants | 0xFF, 'A' |
| Italic Courier New | A variable argument | <i>file.o</i> , where <i>file</i> can be any valid filename |
| Square brackets [] | Optional arguments | mcc18 [options] <i>file</i> [options] |
| Curly brackets and pipe character: { } | Choice of mutually exclusive arguments; an OR selection | errorlevel {0 1} |
| Ellipses... | Replaces repeated text | var_name [, var_name...] |
| | Represents code supplied by user | void main (void) { ... } |

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

DEVELOPMENT SYSTEMS CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at www.microchip.com, click on Customer Change Notification and follow the registration instructions.

The Development Systems product group categories are:

- **Compilers** – The latest information on Microchip C compilers, assemblers, linkers and other language tools. These include all MPLAB C compilers; all MPLAB assemblers (including MPASM assembler); all MPLAB linkers (including MPLINK object linker); and all MPLAB librarians (including MPLIB object librarian).
- **Emulators** – The latest information on Microchip in-circuit emulators. This includes the MPLAB REAL ICE and MPLAB ICE 2000 in-circuit emulators.
- **In-Circuit Debuggers** – The latest information on the Microchip in-circuit debuggers. This includes MPLAB ICD 3 in-circuit debuggers and PICkit 3 debug express.
- **MPLAB IDE** – The latest information on Microchip MPLAB IDE, the Windows Integrated Development Environment for development systems tools. This list is focused on the MPLAB IDE, MPLAB IDE Project Manager, MPLAB Editor and MPLAB SIM simulator, as well as general editing and debugging features.
- **Programmers** – The latest information on Microchip programmers. These include production programmers such as MPLAB REAL ICE in-circuit emulator, MPLAB ICD 3 in-circuit debugger and MPLAB PM3 device programmers. Also included are nonproduction development programmers such as PICSTART Plus and PIC-kit 2 and 3.

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

EVB-LAN9252-4PORT Quick Start Guide

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at:
<http://www.microchip.com/support>

DOCUMENT REVISION HISTORY

| Revisions | Section/Figure/Entry | Correction |
|----------------------|-----------------------------|------------|
| 50002441A (02-03-16) | Initial release of document | |

Chapter 1. Overview

1.1 INTRODUCTION

This document describes how to use the EVB-LAN9252-4PORT Software development kit as a development tool for the Microchip EVB-LAN9252 EtherCAT® Slave Controller.

| |
|---|
| Note: All the figures in the document are captured from TwinCAT 3.1. |
|---|

1.1.1 Abbreviations

IDE - Integrated Development Environment

ESC - EtherCAT Slave Controller

EVB - Evaluation Board

HAL - Hardware Abstraction Layer

HBI - Host Bus Interface

SPI - Serial Protocol Interface

SSC - Slave Stack Code

NOTES:

Chapter 2. EVB-LAN9252-4PORT

2.1 MASTER CONFIGURATION

The following steps describe how to configure EtherCAT Master and Slave:

1. Configure the EtherCAT Master with the TwinCAT® driver.


Note: Refer to **Appendix A. “Setting Up Master in Windows®”** for Windows® configuration.

2. Download and extract EVB-LAN9252-4PORT_PIC32_SDK_Vx.x.zip from the Microchip website (<http://www.microchip.com/LAN9252-041715a>).

Note: x.xx denotes the version number of the SDK.

3. In SDK, the \ESI Files directory contains the ESI files which can be loaded to EVB-LAN9252-4PORT EEPROM using TwinCAT, as displayed in [Figure 2-1](#).

FIGURE 2-1: ESI FILES DIRECTORY

 Microchip EVB-LAN9252-4PORT.xml

Note: Refer to **Appendix D. “Generating SSC Files”** to change the Vendor ID and slave information in ESI files.

4. Copy Microchip EVB-LAN9252-4PORT.xml to the directory path C:\TwinCAT\3.1\Config\Io\EtherCAT for TwinCAT 3.1.
5. Configure the EVB as mentioned in “Configuration Section 2.4” of *EVB-LAN9252-4PORT EtherCAT® ESC PHY Connection Mode User’s Guide* from the Microchip website (<http://www.microchip.com/DevelopmentTools/ProductDetails.aspx?PartNO=evb-lan9252-4port>).
6. By default, corresponding ESI file of PIC32 firmware is flashed to the delivered EVB-LAN9252-4PORT (Board1 and Board2). To change the firmware in PIC32 SoC for Board1 and Board2, refer to **Appendix D. “Generating SSC Files”** and **Appendix E. “Compiling and Programming SoC Firmware”**.


Note 1: The pre-built binaries are available in the “Binaries” directory. This step can be skipped if pre-built binary is used for programming.

2: SoC firmware must be changed for both Board1 and Board2 in case of firmware re-programming.

7. Launch TwinCAT and scan EtherCAT slaves from TwinCAT. Refer to **Appendix C. “Scanning EtherCAT Slaves”** to scan the slaves.
8. Program EEPROM using Microchip EVB-LAN9252-4PORT.xml. Refer to **Appendix B. “EEPROM Programming”** for EEPROM programming instructions. If the EEPROM is programmed successfully, the device state will enter into ‘OP’ as displayed in [Figure 2-2](#).

Note: EEPROM ESI file must be programmed for both Board1 and Board2.

FIGURE 2-2: OP MODE

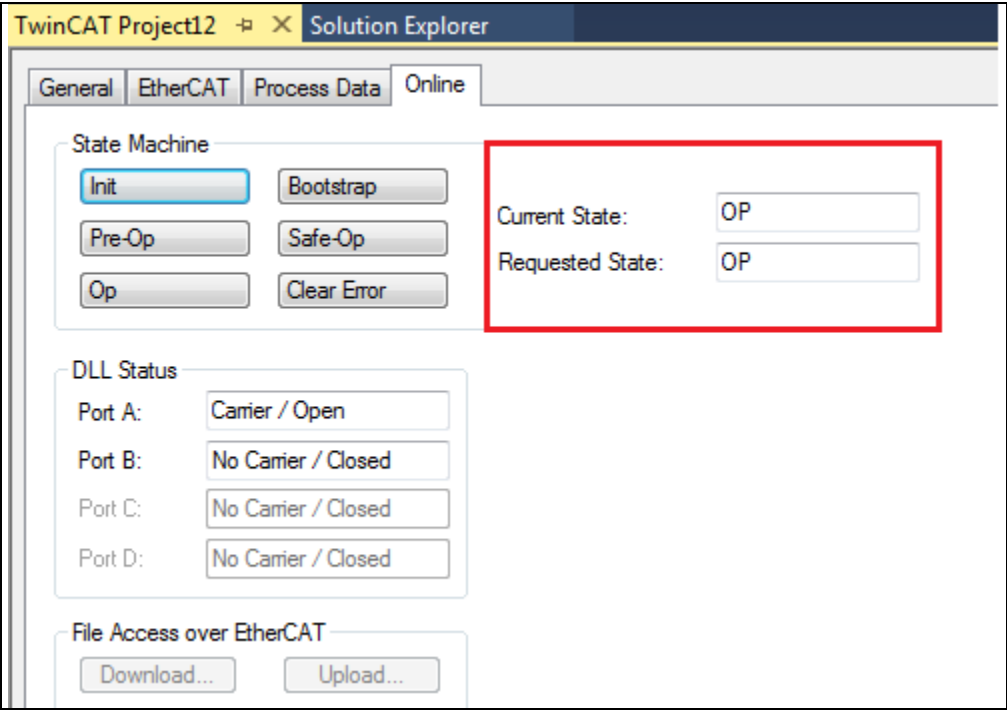


2.2 DEMO

The following describes a demo of the EVB-LAN9252-4PORT:

1. Follow the steps as mentioned in **Section 2.1 “Master Configuration”**. Two demo objects can be seen on the Solution Explorer of TwinCAT, as displayed in [Figure 2-3](#).

FIGURE 2-3: GPIO INPUTS AND OUTPUTS

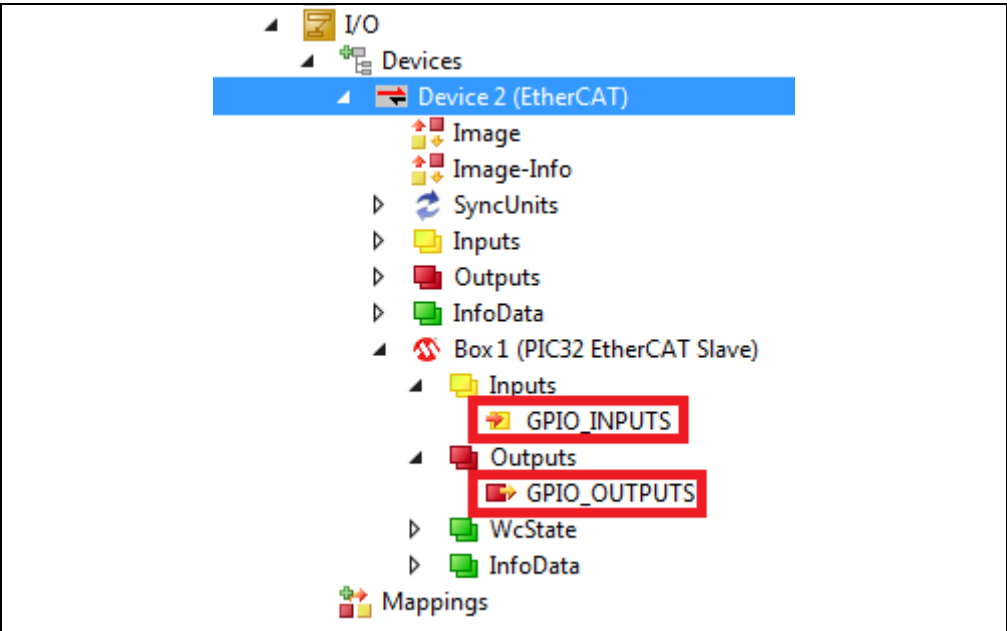


2. As part of this demo, two object variables GPIO_INPUTS and GPIO_OUTPUTS are mapped to PIC32 GPIOs as mentioned below.

GPIO_OUTPUTS - PIC32 RD2

GPIO_INPUTS - PIC32 RD3


- Interconnect RD2 and RD3 hardware pins for demo purpose, as in [Figure 2-5](#).

FIGURE 2-4: RD2 AND RD3

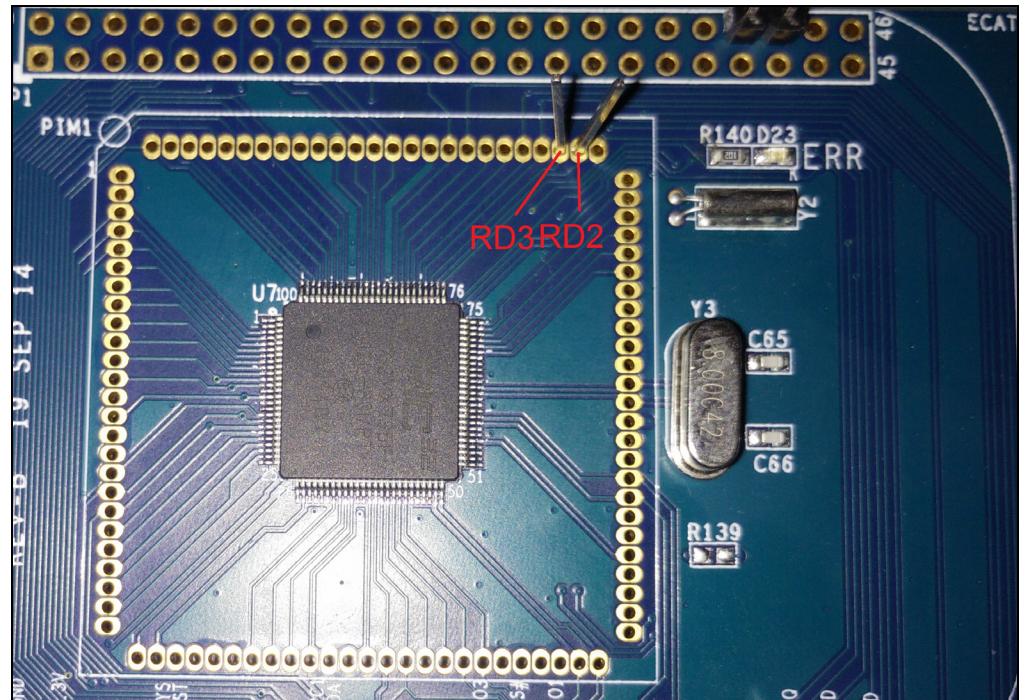


- To change GPIO_OUTPUTS, double-click the GPIO_OUTPUTS option under Outputs in the Solution Explorer, as displayed in [Figure 2-3](#).
The TwinCAT project window displays.
- Click the **Online** tab in TwinCAT project window and select the Write option to change GPIO outputs, as displayed in [Figure 2-5](#).

FIGURE 2-5: GPIO OUTPUTS

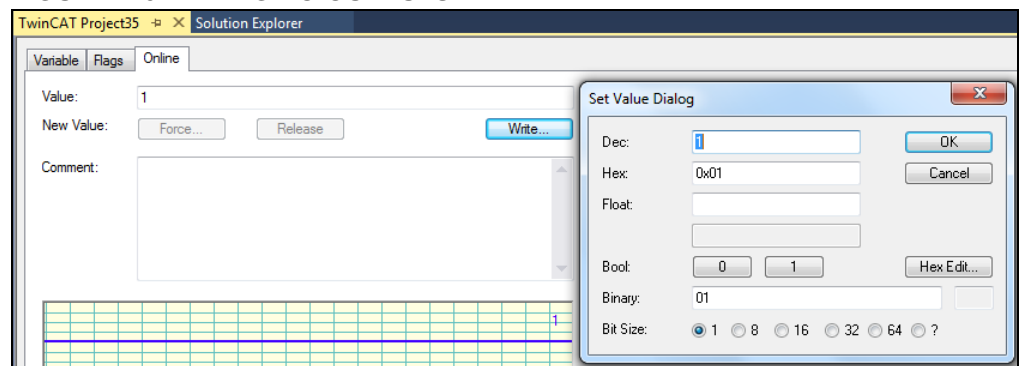

- To view GPIO_INPUTS, double-click GPIO_INPUTS under Inputs in the Solution Explorer, as displayed in [Figure 2-3](#)
- Click the **Online** tab in the TwinCAT explorer window as displayed [Figure 2-6](#).

FIGURE 2-6: GPIO INPUTS

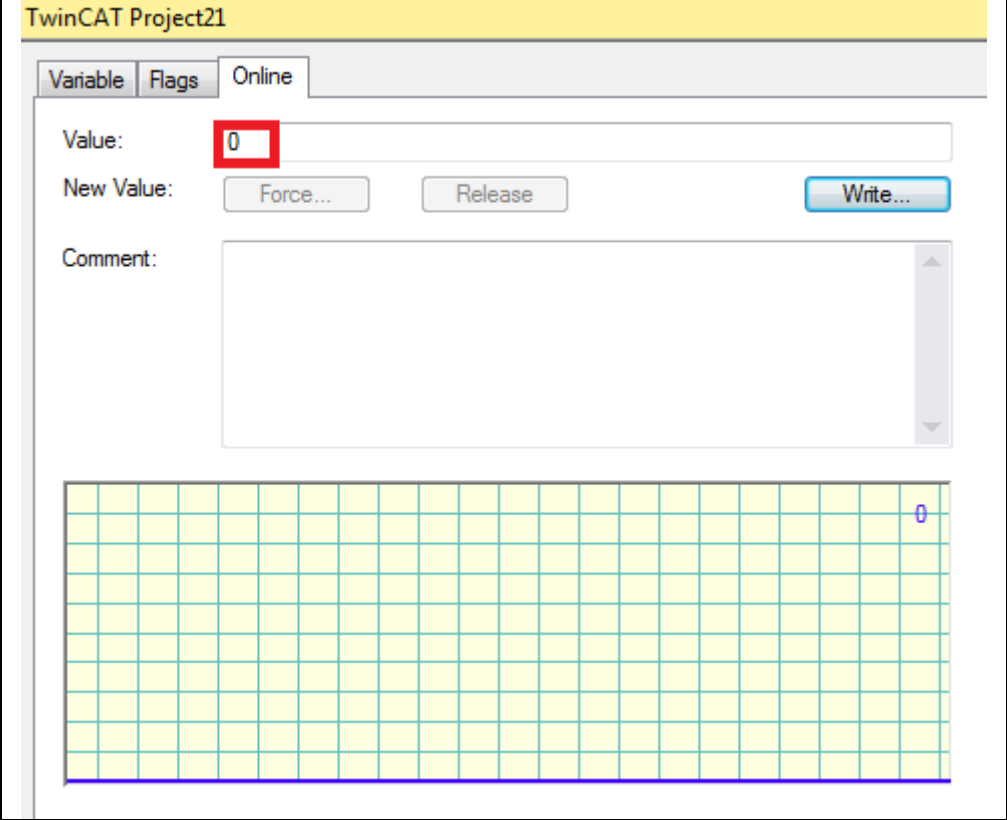

Appendix A. Setting Up Master in Windows[®]

A.1 INTRODUCTION

This appendix shows how to set up Master in Windows[®].

Download and install TwinCAT on Windows from <http://beckhoff.com>.


A.1.1 TwinCAT Ethernet Driver - Installation

To install the TwinCAT Ethernet Driver, do the following:

1. If TwinCAT installed successfully, a TwinCAT icon will display in the bottom-right corner of the desktop. Click the TwinCAT icon.
A pop-up menu displays.
2. Select TWINCAT XAE (VS XXXX), as displayed in [Figure A-1](#).


Note: VS XXXX refers to the version of Visual Studio installed on the computer.

FIGURE A-1: SYSTEM MANAGER

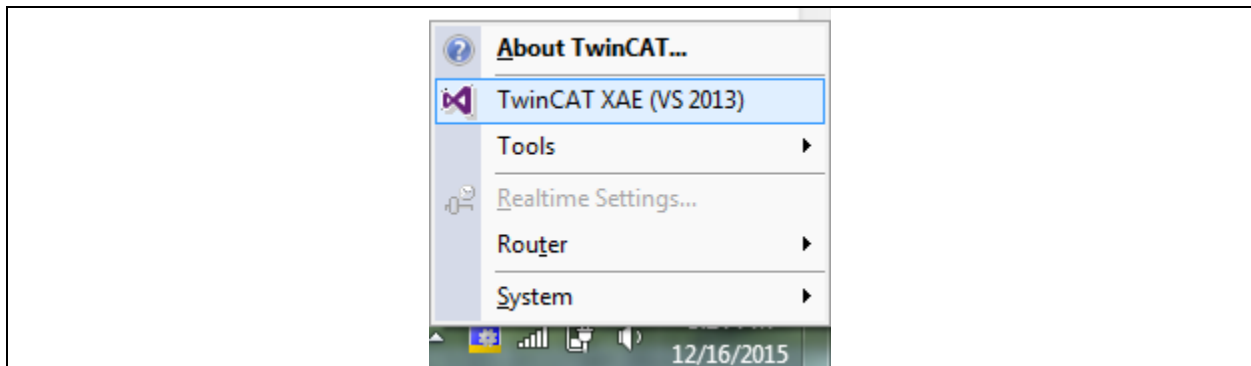


3. Go to TWINCAT>Show Real Time Ethernet Compatible Devices... as in [Figure A-2](#).

FIGURE A-2: SHOW REAL TIME ETHERNET COMPATIBLE DEVICES

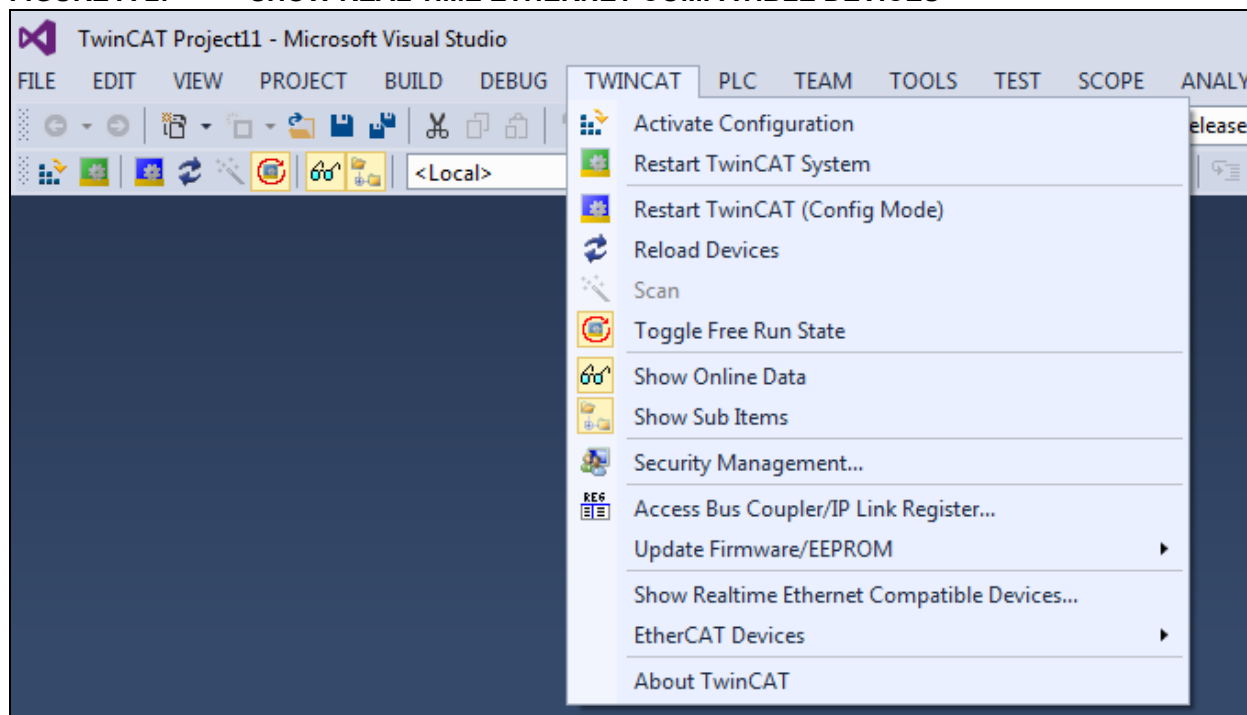

4. Select the Network adapter and install the TwinCAT driver as in [Figure A-3](#).


FIGURE A-3: ETHERNET ADAPTERS DIALOG

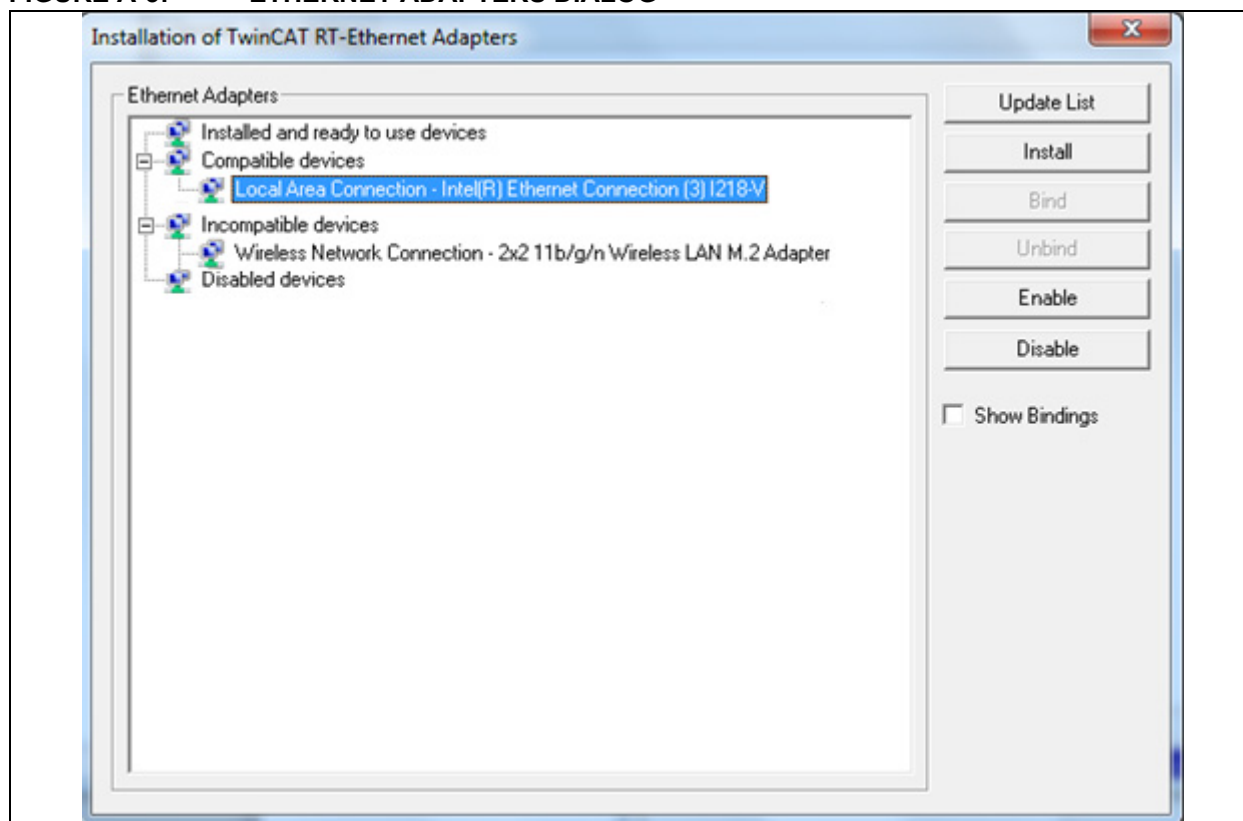

5. Once the TwinCAT driver is installed successfully, the driver is compatible with the TwinCAT master. The network adapter will then be moved to "Installed and ready to use devices" as displayed in

Figure A-4.

FIGURE A-4: INSTALLED AND READY TO USE DEVICES

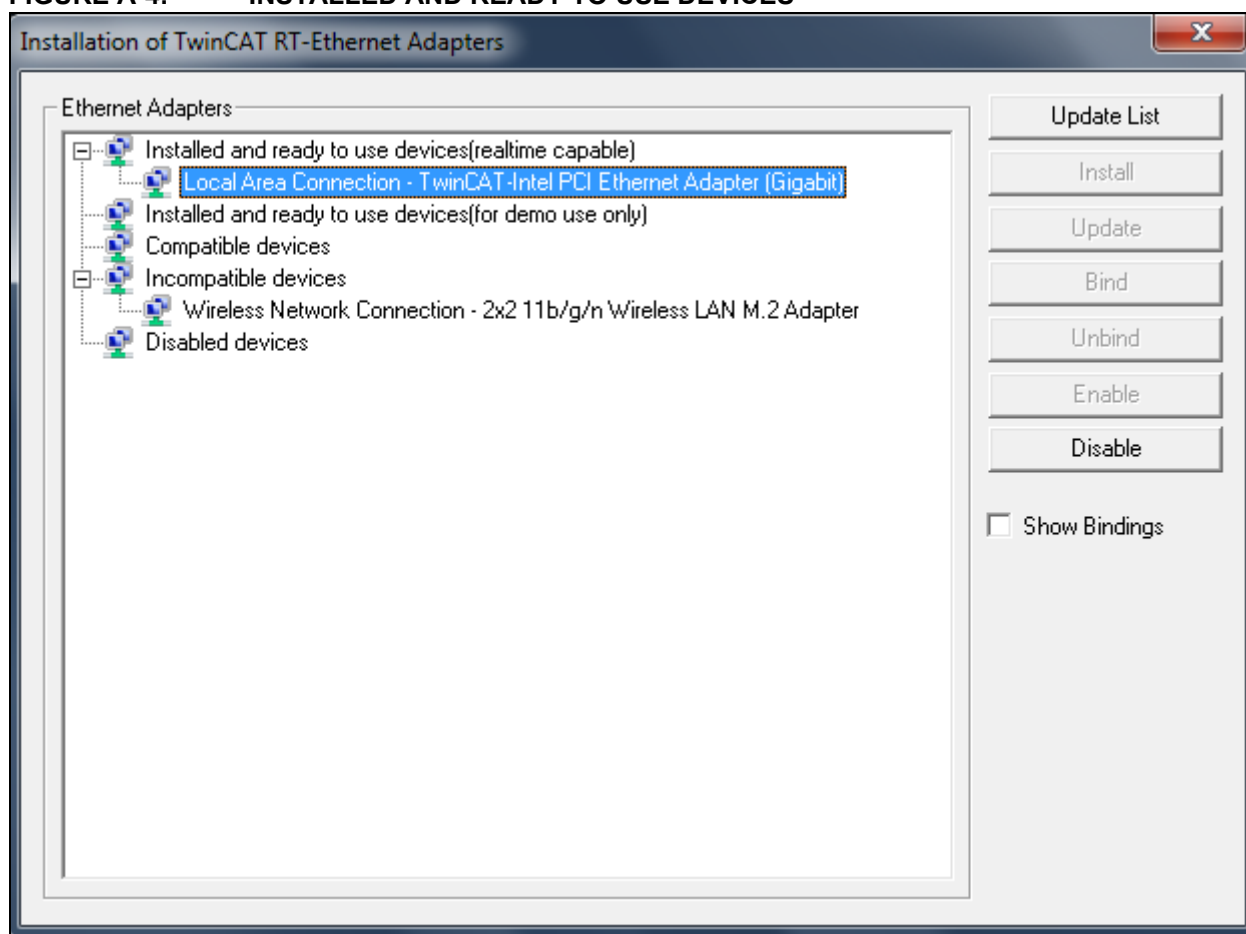

6. Go to the corresponding network adapter properties and then select TwinCAT drivers as displayed in [Figure A-5](#) and [Figure A-6](#).

FIGURE A-5: NETWORK ADAPTER PROPERTIES MENU


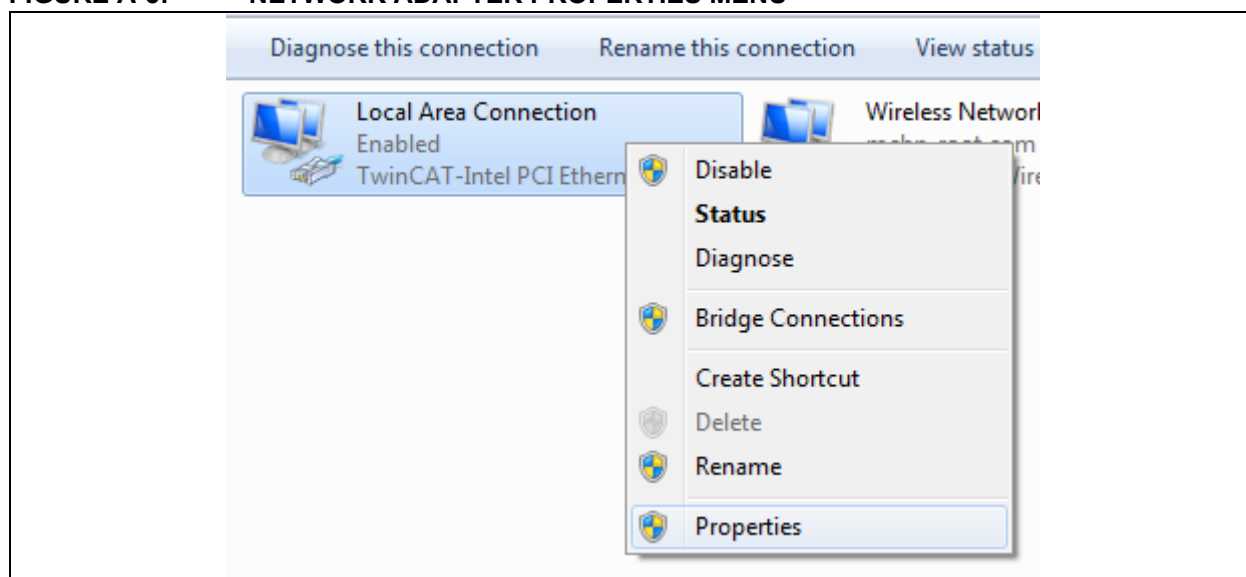


FIGURE A-6: LOCAL AREA CONNECTION PROPERTIES

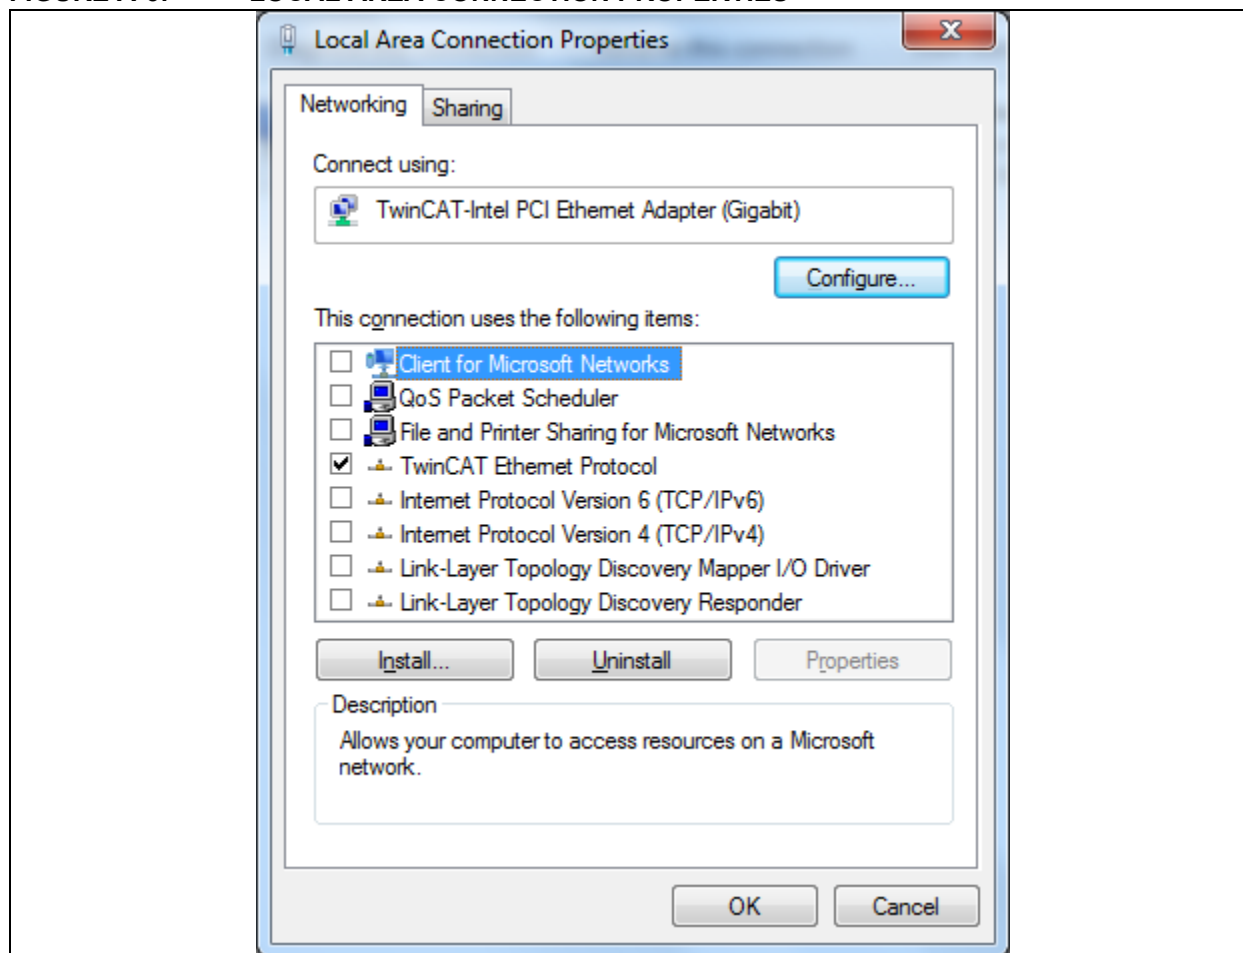

Note 1: Only select TwinCAT drivers.

- 2:** If TwinCAT cannot find the EtherCAT slaves after following the steps in **Appendix C. “Scanning EtherCAT Slaves”**, restart the computer and attempt to scan again.

Appendix B. EEPROM Programming

B.1 INTRODUCTION

This appendix shows how to program EEPROM.


B.1.1 EEPROM Programming

To program EEPROM:

1. After a successful scan, click the “Device 2 (EtherCAT)” drop-down bar from the Solution Explorer of the TwinCAT tool, as displayed in [Figure B-1](#).

The TwinCAT Explorer window displays.


FIGURE B-1: DEVICE 2 (ETHERCAT)

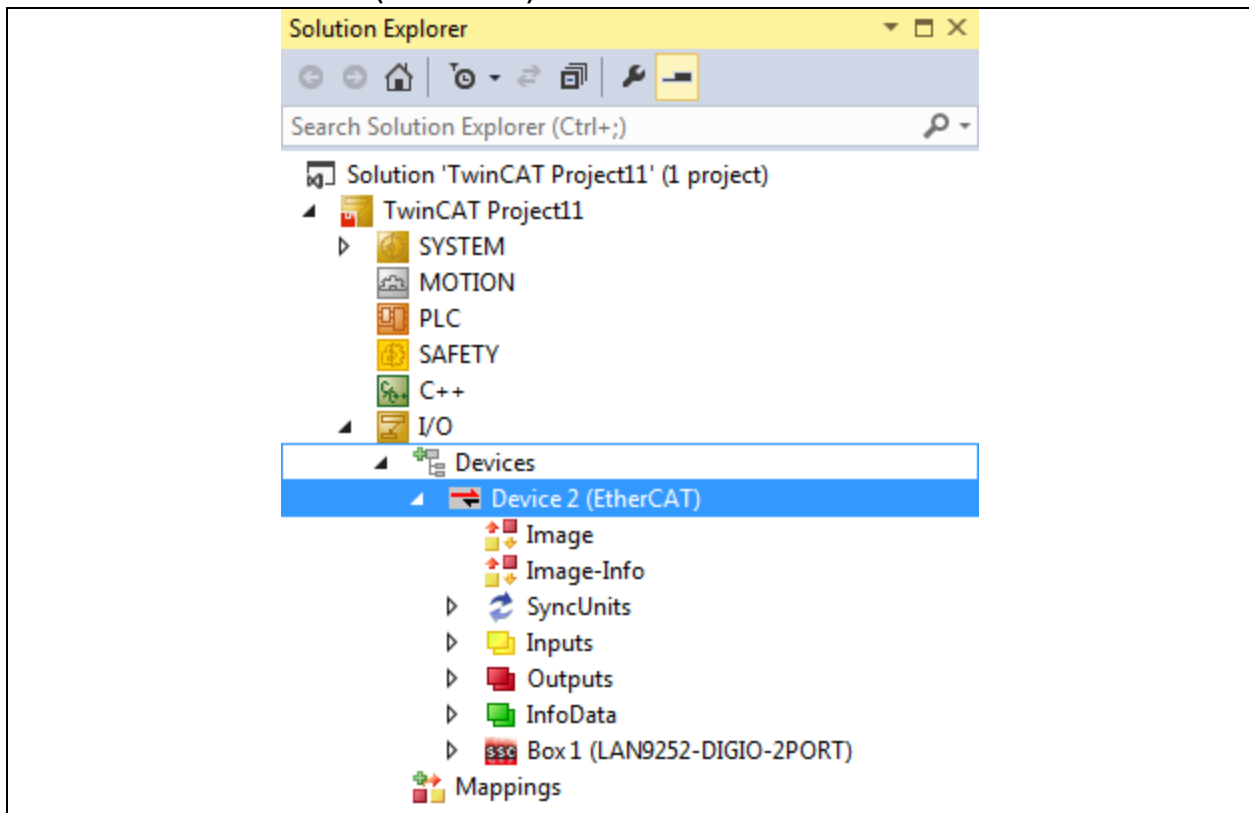

2. Click the **Online** tab in the TwinCAT project window.
3. Right-click the LAN9252 listing and select “EEPROM Update” from the contextual menu, as displayed in [Figure B-2](#).

The Write EEPROM window displays.


FIGURE B-2: ONLINE TAB

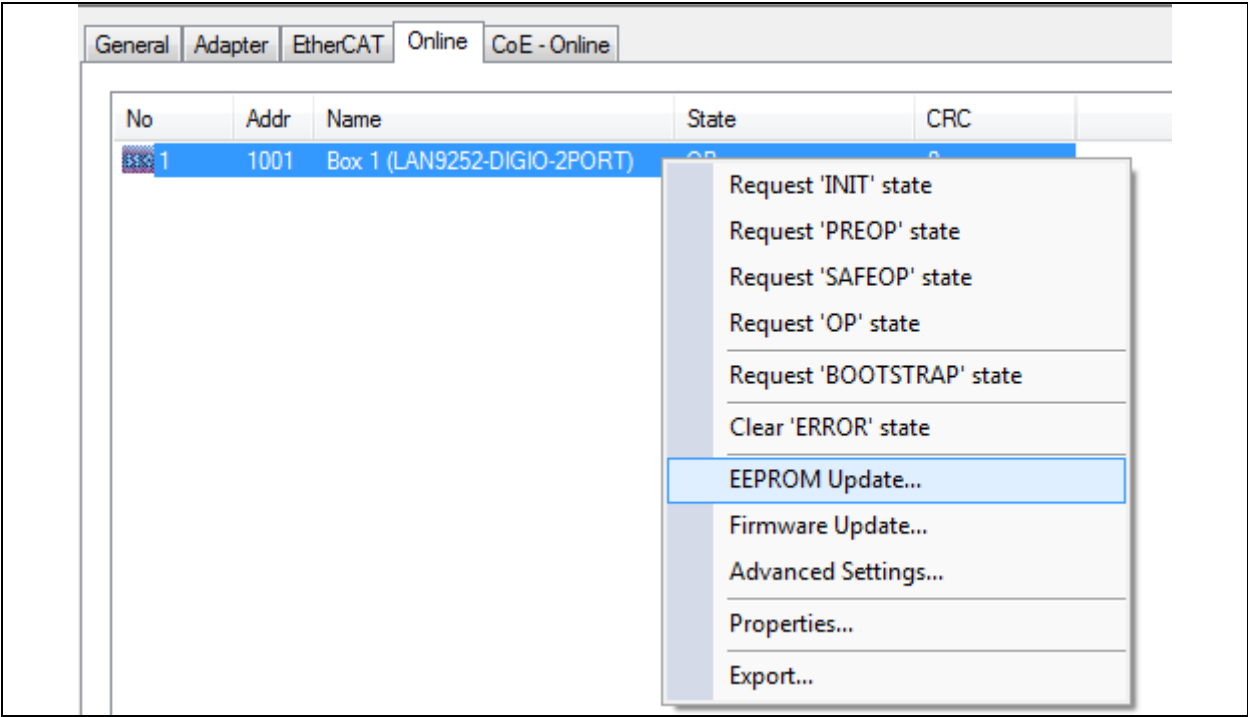

4. Select the corresponding EEPROM configuration and then click **OK** to initiate EEPROM programming.

For example, [Figure B-3](#) shows LAN9252 one of DIGIO configuration is selected for EEPROM programming in the TwinCAT.

FIGURE B-3: WRITE EEPROM DIALOG

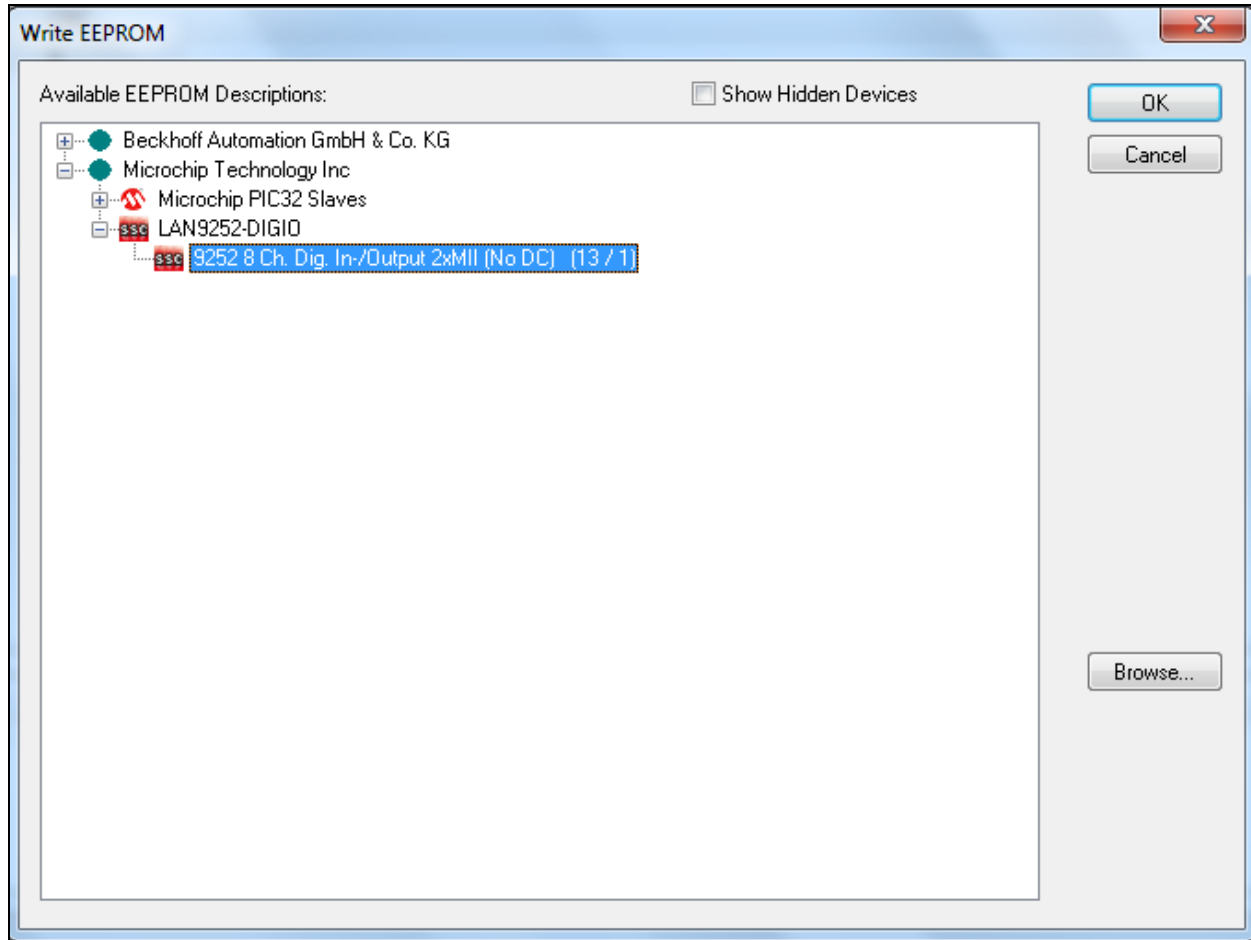

NOTES:

Appendix C. Scanning EtherCAT Slaves

C.1 INTRODUCTION


This appendix shows how to scan EtherCAT Slaves.

C.1.1 Scanning EtherCAT Slaves

To scan EtherCAT slaves:


1. Connect Port 0 of the device to master using RJ45 Ethernet cable, and then power up the board.
The Link/Act LED should be ON at Port 0 when the cable is present. If the Link/Act LED is not ON, it indicates there is an issue with the connection or cable.
2. If any devices are present, delete them accordingly by clicking the device and selecting Delete Device, as displayed in [Figure C-1](#).

FIGURE C-1: DELETE DEVICE

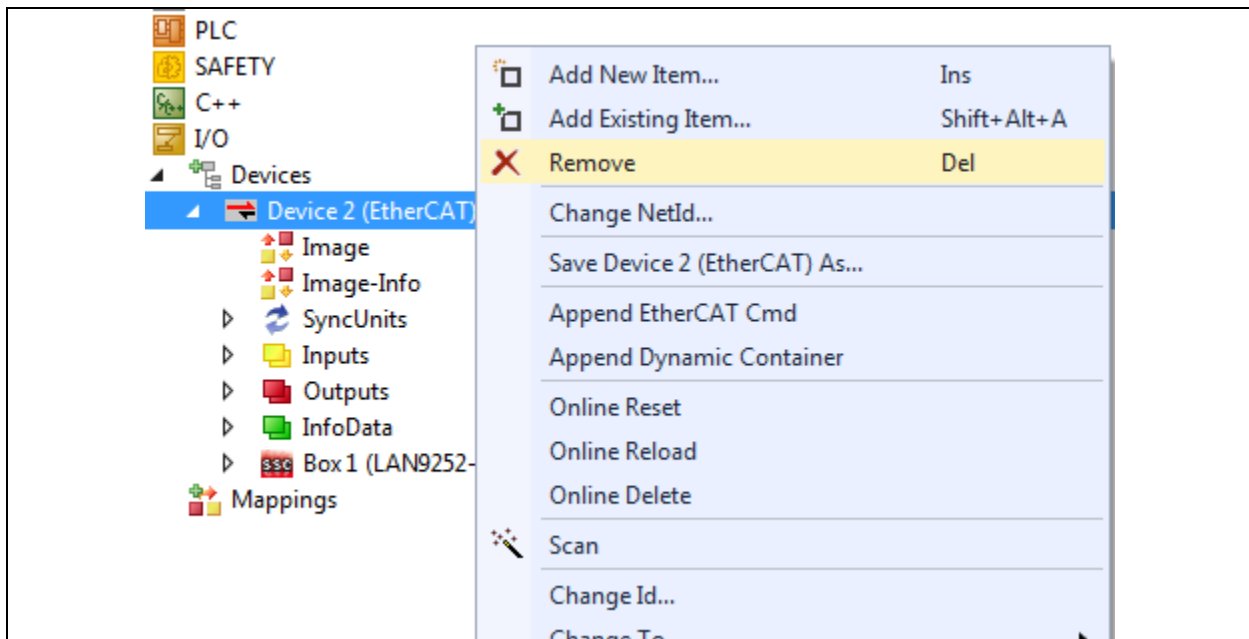


3. Right-click "I/O devices" and then select Scan as displayed in [Figure C-2](#).

FIGURE C-2: SCAN DEVICES MENU

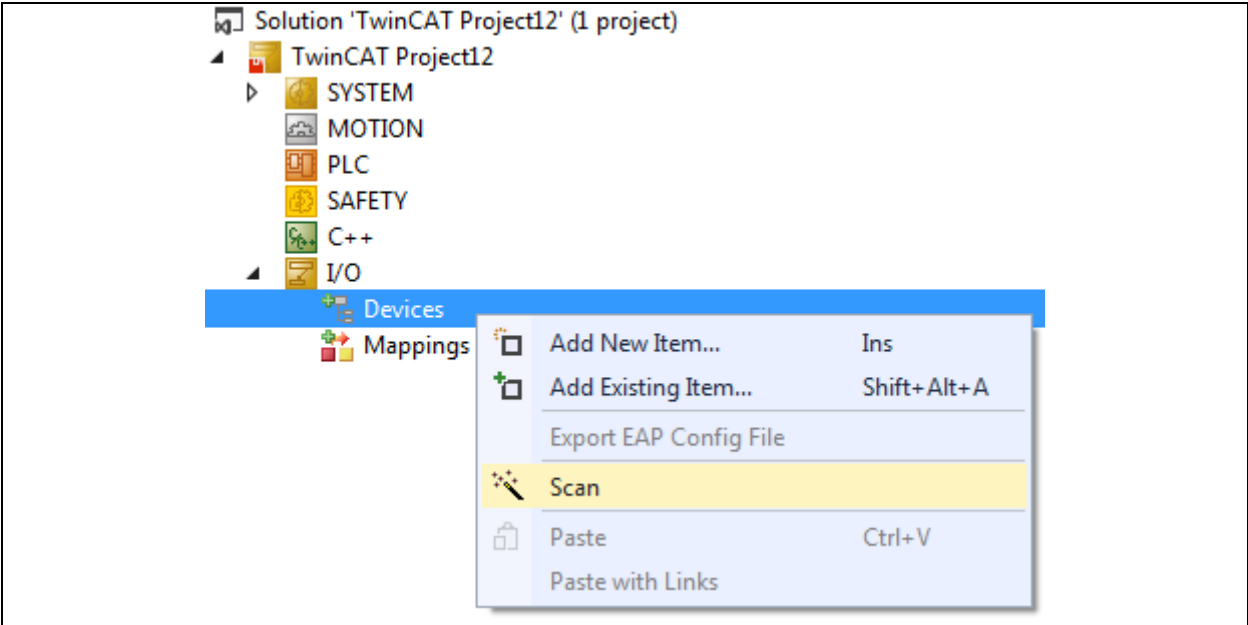


4. Click **OK** to continue scanning as in [Figure C-3](#).

FIGURE C-3: DEVICE DIALOG

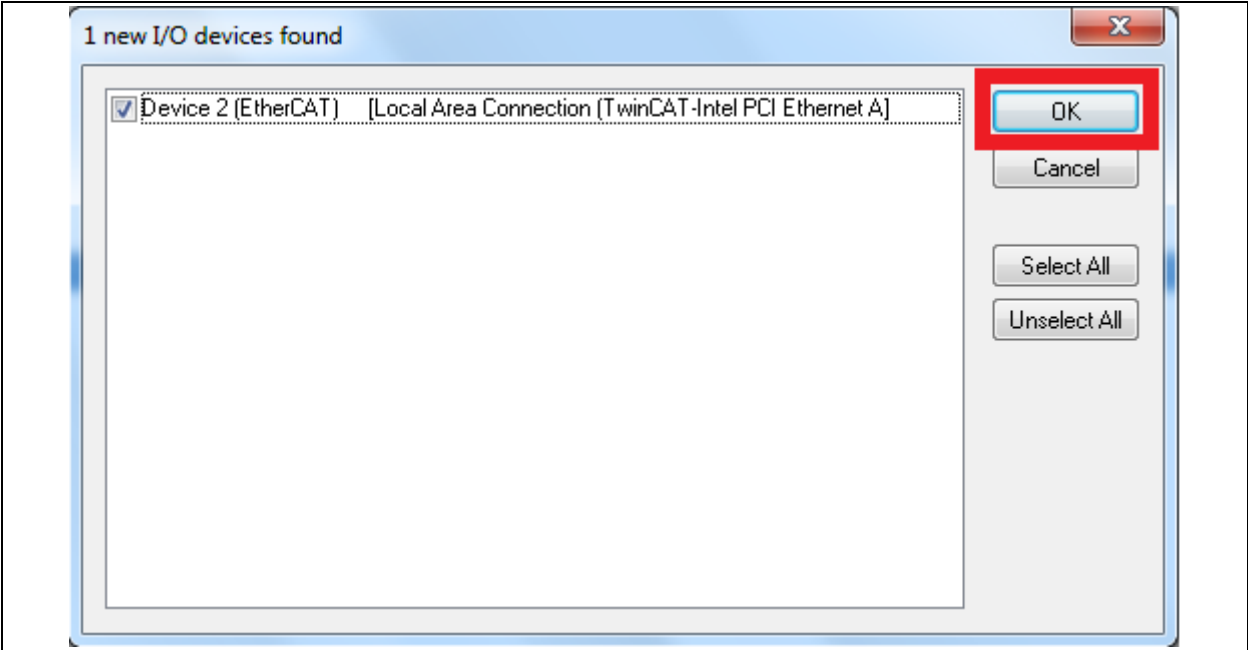


If the check box is not checked as displayed in [Figure C-4](#), then either the device is not functional or driver is not installed properly.

FIGURE C-4: DEVICE DIALOG, UNCHECKED

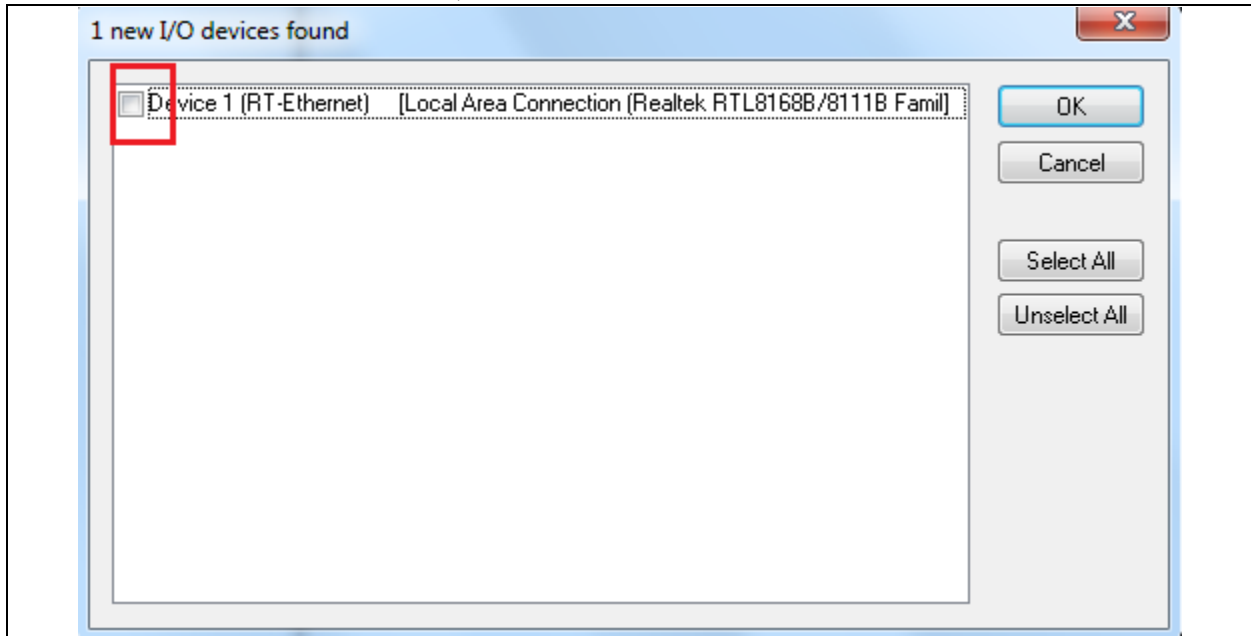


5. Click **Yes** as displayed in [Figure C-5](#) to scan for boxes.

FIGURE C-5: CONFIRMATION DIALOG

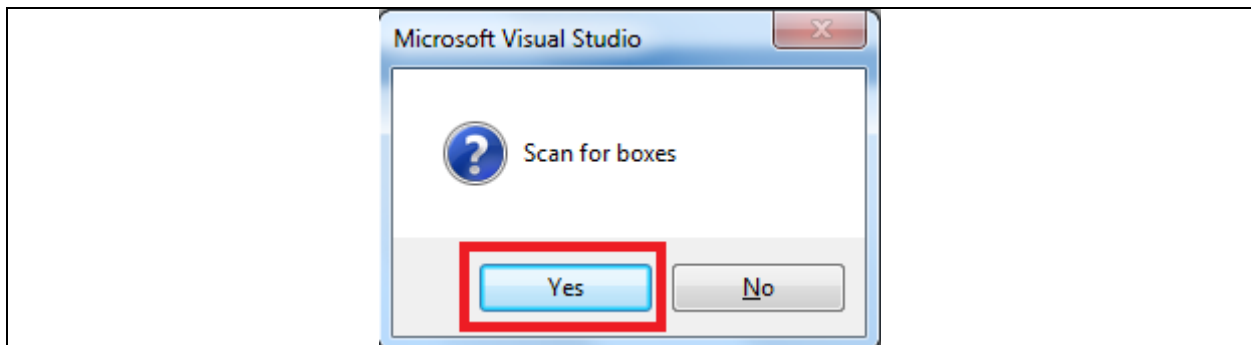

The device list displays as displayed in [Figure C-6](#).

FIGURE C-6: DEVICE LIST

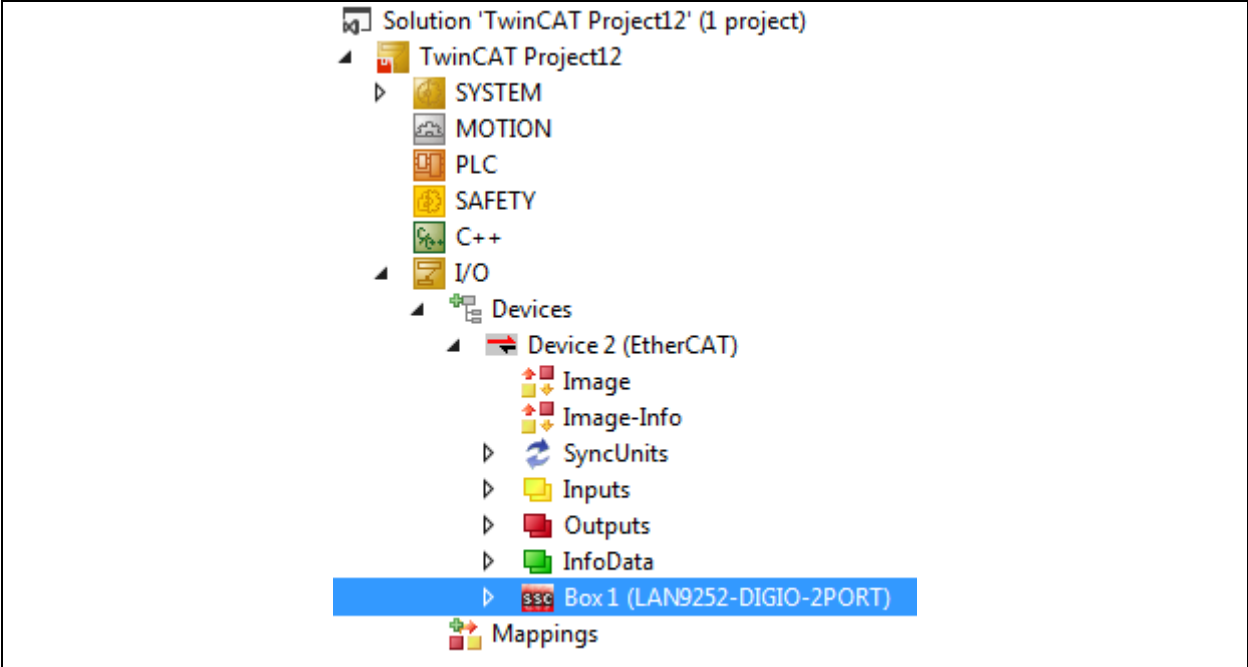

After a successful scan, there will be an activity on Link/Act LED at Port 0.

Appendix D. Generating SSC Files

D.1 INTRODUCTION


This appendix shows how to generate SSC files.

D.1.1 Generating SSC Files

To generate SSC files:


1. Start the SSC Tool from the start menu, as displayed in [Figure D-1](#).

FIGURE D-1: SSC TOOL

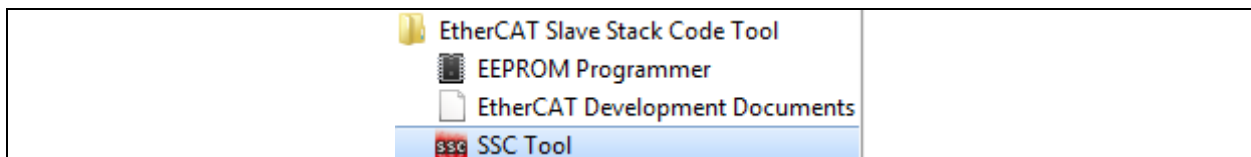


2. From the menu bar, click **File>New** as displayed in [Figure D-2](#).

FIGURE D-2: NEW ETHERCAT SLAVE

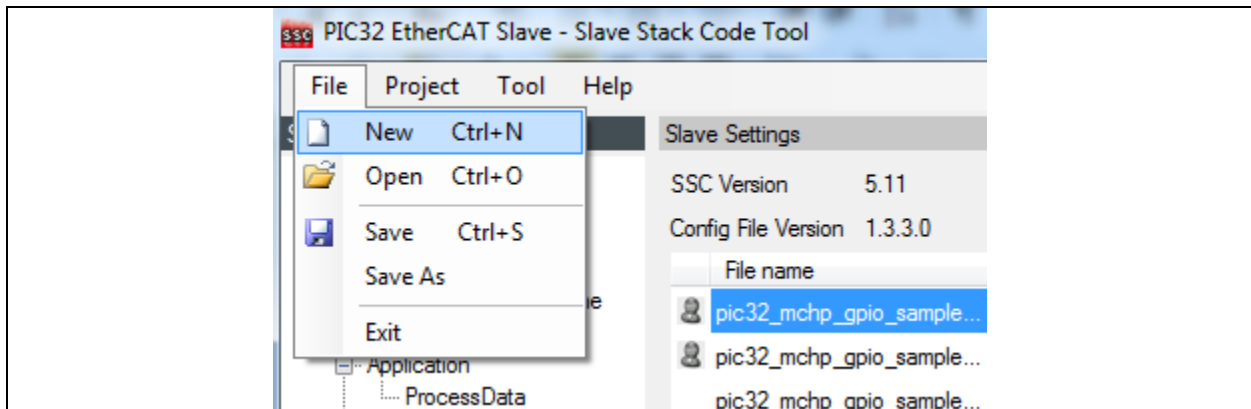

3. Click **Import** to import the SSC Tool configuration file `Microchip EVB-LAN9252-4PORT-SSC-CONFIG.xml` from the directory `{SDK_INSTALL_PATH}\EEVB-LAN9252_SDK_VX.X\EVB-LAN9252-4PORT_PIC32_SDK_VX.X\` as displayed in [Figure D-3](#).


FIGURE D-3: IMPORT PROJECT

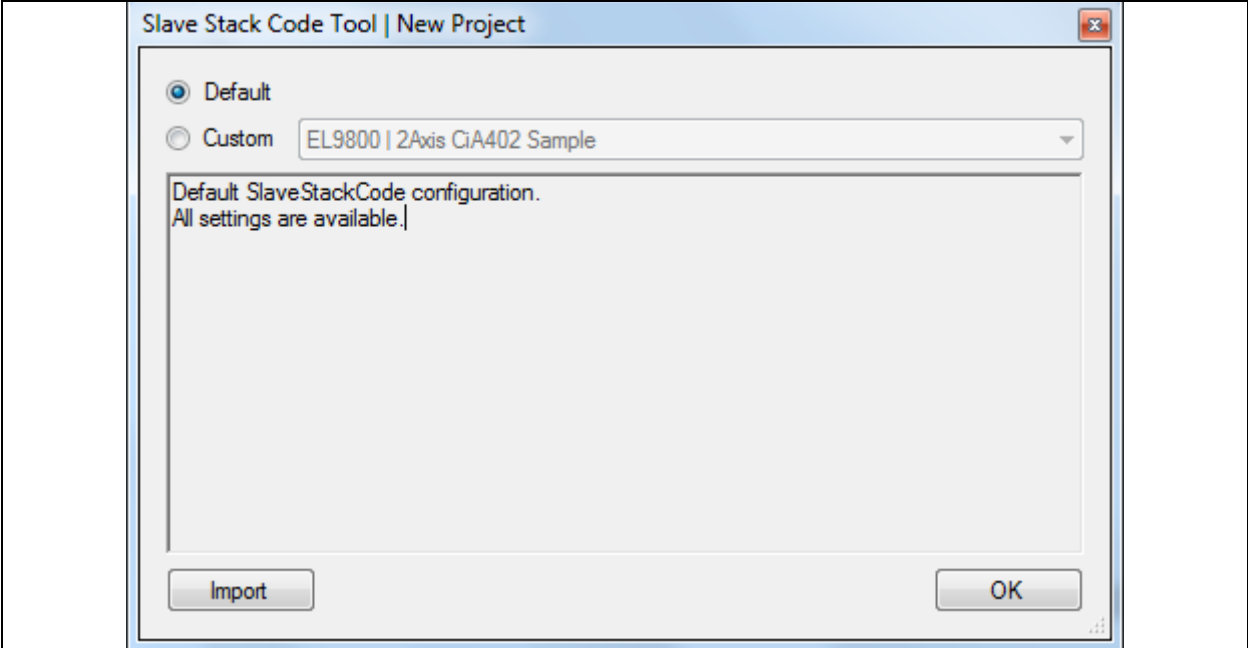

After selecting the file, click **Open** to import the SSC Tool configuration file.

- 4. Once imported, check the “Custom” drop-down box, select “Microchip-EVB-LAN9252-4PORT” configuration, and then click **OK**, as displayed in [Figure D-4](#).


FIGURE D-4: CUSTOM SSC FILE SELECTED

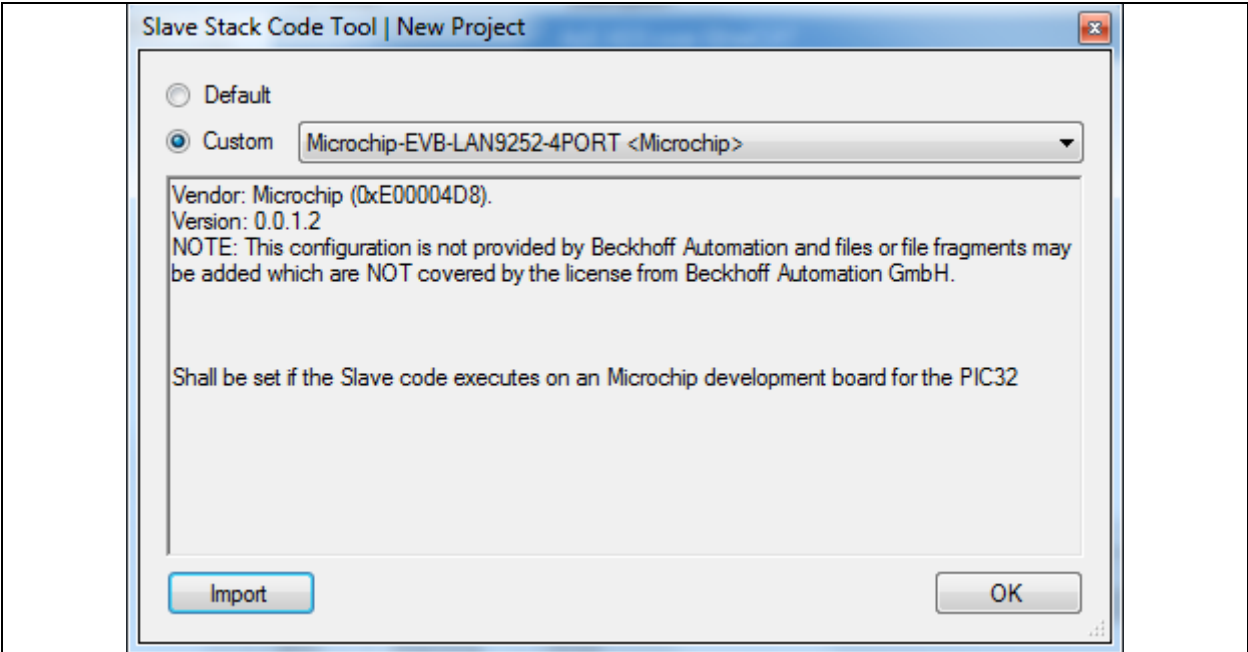

- 5. All listed parameters under the **Slave Information** tab can be changed, as displayed in [Figure D-5](#).


Note: By default, SDK ESI files have an object configuration with Microchip Vendor ID.

FIGURE D-5: SLAVE SETTINGS

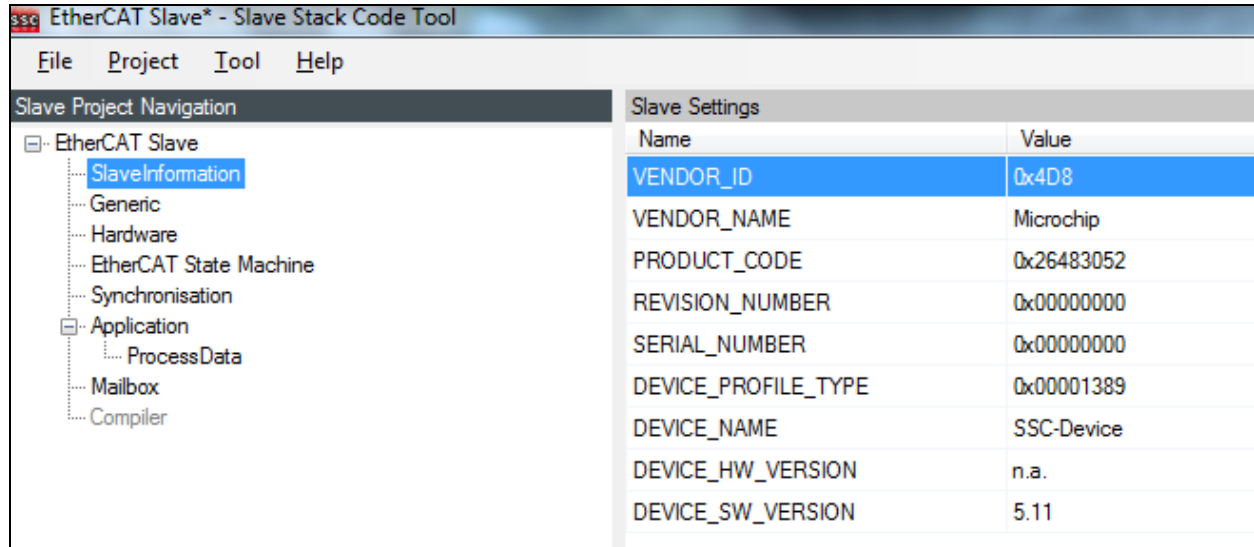

6. Click **Tool>Application>Import** from the menu bar, as displayed in [Figure D-6](#).

FIGURE D-6: IMPORT MENU

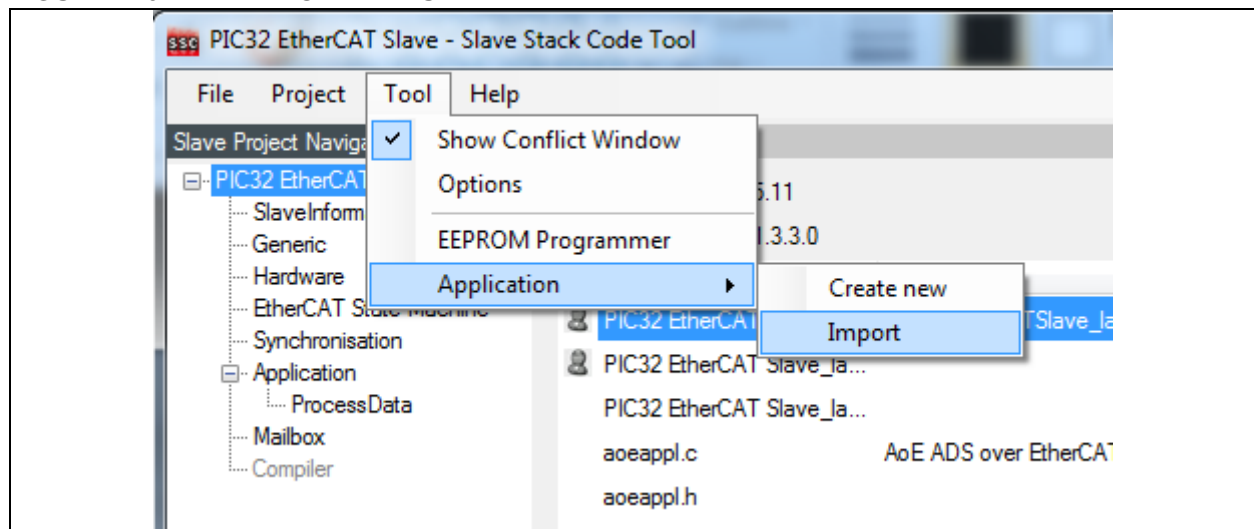


7. Select the file `pic32_mchp_gpio_sample_app.xlsx` which can be found in the directory `{SDK_INSTALL_PATH}/EVB-LAN9252_SDK_VX.X\EVB-LAN9252-4PORT_PIC32_SDK_VX.X/`.

`pic32_mchp_gpio_sample_app.xlsx` is an object file which contains the information about application objects information.


A status message displays as in [Figure D-7](#).

FIGURE D-7: STATUS MESSAGE

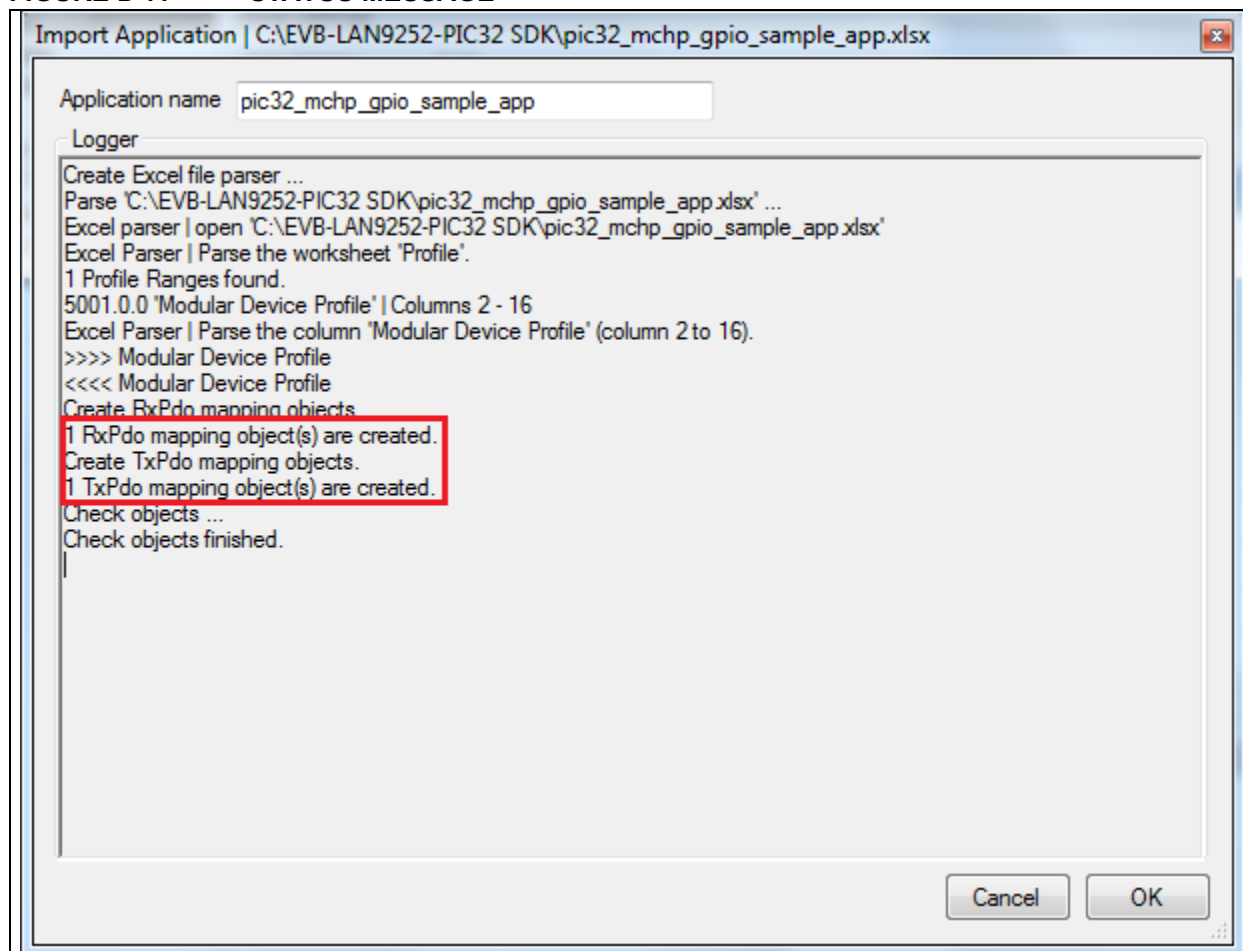

8. Click **OK** to continue.
9. Click the "Project" drop-down menu in the tool bar and then select Create New Slave Files.
The Create new Slave Files window displays, as in [Figure D-8](#).

FIGURE D-8: CREATE NEW SLAVE FILES

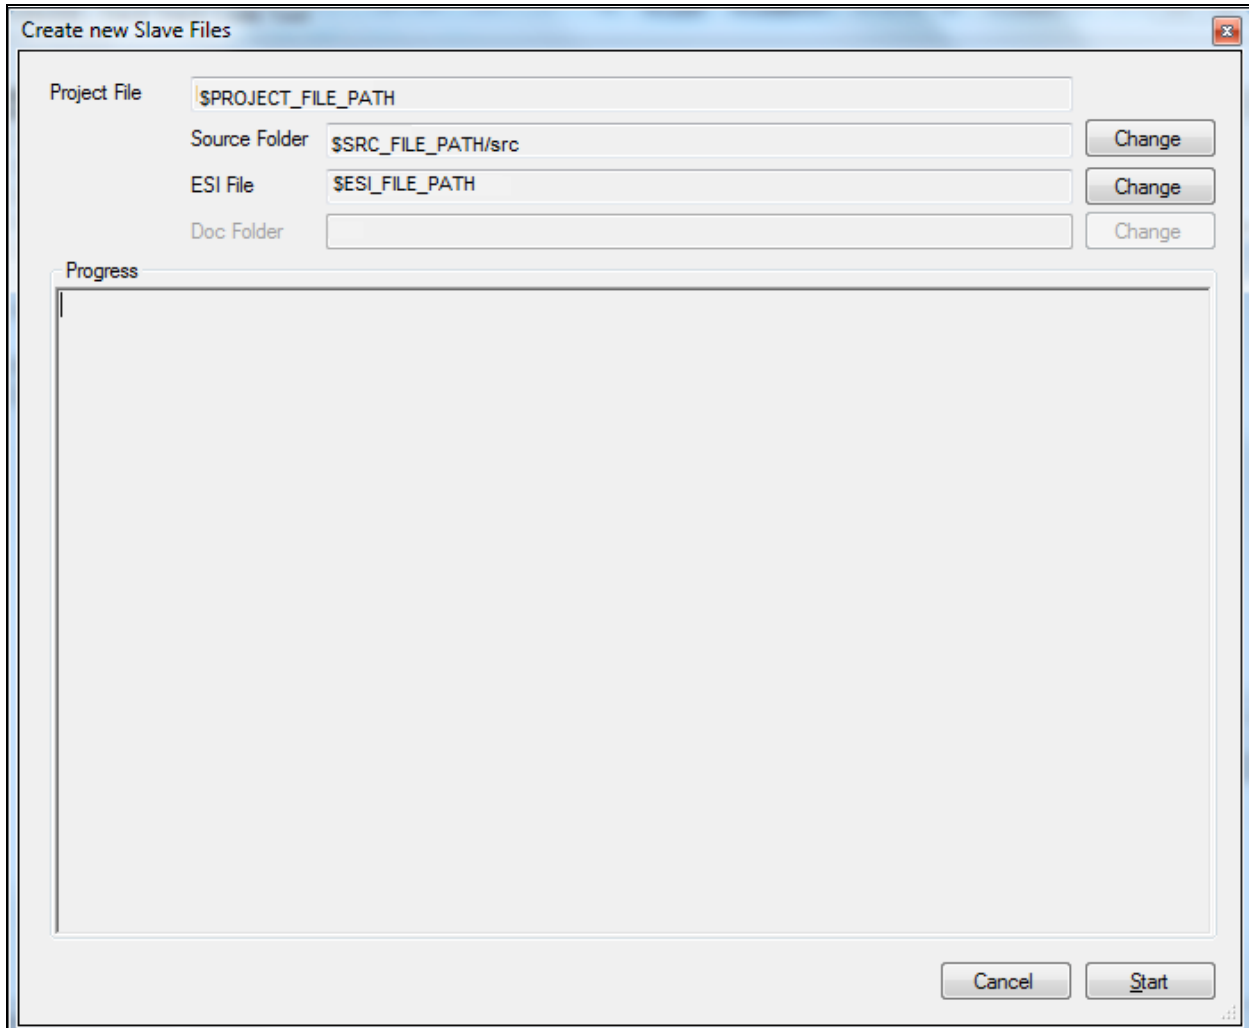

Note: The above values signify the following:

- \$PROJECT_FILE_PATH - The location where the SSC project file is saved.
- \$SRC_FILE_PATH - Default path is \$PROJECT_FILE_PATH. It can be changed by clicking its corresponding **Change** button.
- \$ESI_FILE_PATH - Default path is \$PROJECT_FILE_PATH. It can be changed by clicking its corresponding **Change** button.

10. Click the **Start** button to create a new project file, Src folder, and ESI file (Slave Information file) in the desired directory path.

A pop-up window will indicate that the files have been successfully created.






11. Click **OK** to continue.

Along with generated new slave files, ESI file (.xml file) also will be generated. This ESI file will have information about new Vendor ID and object configuration. Program this ESI file into EEPROM as mentioned in **Appendix B. “EEPROM Programming”**.

12. Replace generated application files with SDK application files as displayed in [Figure D-9](#).



















SDK Application files can be found under `./Common` directory.

FIGURE D-9: SDK APPLICATION FILES

| Name | Date modified | Type | Size |
|---|-------------------|--------------|-------|
|  9252_HW.c | 4/22/2015 3:07 PM | C Source | 26 KB |
|  9252_HW.h | 4/21/2015 6:45 PM | C/C++ Header | 9 KB |
|  pic32_mchp_gpio_sample_app.c | 6/24/2015 5:06 PM | C Source | 13 KB |
|  pic32_mchp_gpio_sample_app.h | 6/24/2015 5:06 PM | C/C++ Header | 2 KB |
|  pic32_mchp_gpio_sample_appObjects.h | 6/24/2015 5:06 PM | C/C++ Header | 9 KB |

Note: Application files would be named as `pic32_mchp_gpio_sample_app` as in [Figure D-10](#). This is because in this demo, input object file is given as `pic32_mchp_gpio_sample_app.xlsx` as provided in step 2.

FIGURE D-10: APPLICATION FILES

| | | | |
|---|-------------------|--------------|-------|
|  ecatslv.h | 6/24/2015 5:06 PM | C/C++ Header | 30 KB |
|  emcy.c | 6/24/2015 5:06 PM | C Source | 10 KB |
|  emcy.h | 6/24/2015 5:06 PM | C/C++ Header | 5 KB |
|  eoeappl.c | 6/24/2015 5:06 PM | C Source | 11 KB |
|  eoeappl.h | 6/24/2015 5:06 PM | C/C++ Header | 10 KB |
|  esc.h | 6/24/2015 5:06 PM | C/C++ Header | 13 KB |
|  foeappl.c | 6/24/2015 5:06 PM | C Source | 11 KB |
|  foeappl.h | 6/24/2015 5:06 PM | C/C++ Header | 2 KB |
|  mailbox.c | 6/24/2015 5:06 PM | C Source | 39 KB |
|  mailbox.h | 6/24/2015 5:06 PM | C/C++ Header | 9 KB |
|  objdef.c | 6/24/2015 5:06 PM | C Source | 74 KB |
|  obidef.h | 6/24/2015 5:06 PM | C/C++ Header | 15 KB |
|  pic32_mchp_gpio_sample_app.c | 6/24/2015 5:06 PM | C Source | 13 KB |
|  pic32_mchp_gpio_sample_app.h | 6/24/2015 5:06 PM | C/C++ Header | 2 KB |
|  pic32_mchp_gpio_sample_appObjects.h | 6/24/2015 5:06 PM | C/C++ Header | 9 KB |
|  pic32_mchp_spigpio_sample_app.xml | 6/24/2015 5:06 PM | XML Document | 42 KB |
|  sdoserv.c | 6/24/2015 5:06 PM | C Source | 60 KB |
|  sdoserv.h | 6/24/2015 5:06 PM | C/C++ Header | 33 KB |

13. Browse to the directory where the new files were created, as shown in the example:
 - Src (Folder): This folder contains the Beckhoff Slave Stack code.
 - Microchip PIC32 Slaves (ESP): This is the SSC Tool project file.
 - Microchip PIC32 Slaves (XML): This is the EtherCAT slave information file that must be used as an input to the EtherCAT master tool to configure EtherCAT slave controllers.
14. Copy all the files inside the Src folder to the following directory:


```
{SDK_INSTALL_PATH}/EVB-LAN9252-4PORT_PIC32_SDK_VX.X/SSC/Common
```

D.1.1.1 WHY REPLACE IS REQUIRED

Generated application files will not have the code for accessing the GPIO lines. GPIO support is provided in delivered SDK application files. Hence, the replace is required to get the demo application.

Appendix E. Compiling and Programming SoC Firmware

E.1 INTRODUCTION

This appendix shows how to compile and program SoC firmware.

E.1.1 Compiling and Programming SoC Firmware


To compile and program SoC firmware:

1. Open the MPLAB IDE and import the SSC project.

The MPLAB project file is located under {SDK_INSTALL_PATH}/EVB-LAN9252-4PORT_PIC32_SDK_VX.X/SSC/.


2. Compile the source code as displayed in [Figure E-1](#).

FIGURE E-1: SOURCE CODE

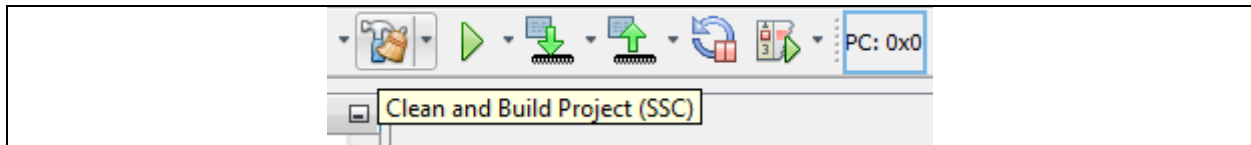

If the compilation is successful, the output window will display “BUILD SUCCESSFUL” as in [Figure E-2](#).

FIGURE E-2: BUILD SUCCESSFUL

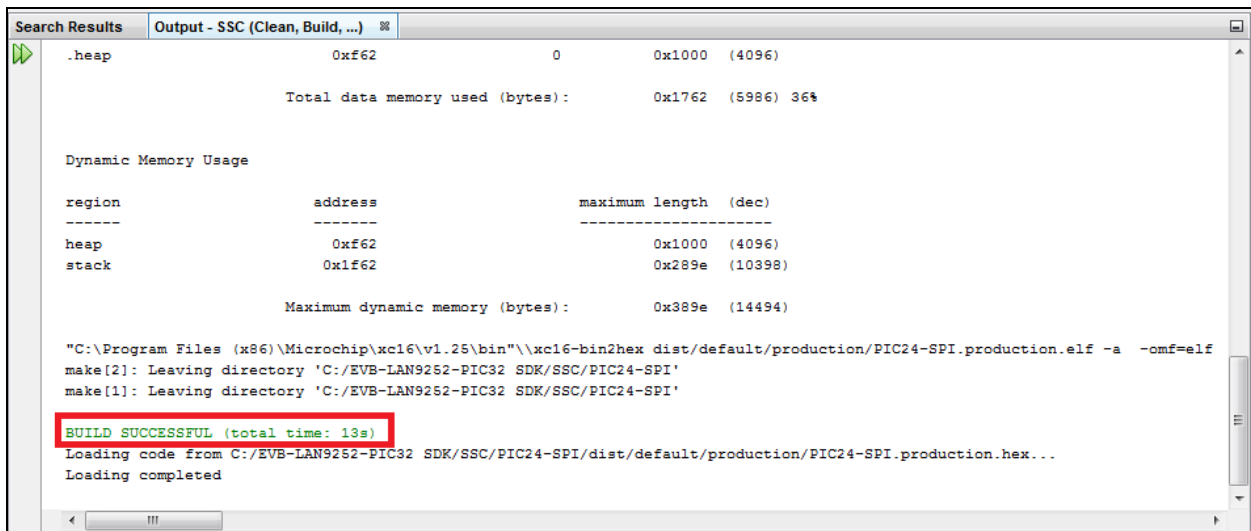


3. Before initiating the firmware download, ensure the debugger/programmer is connected to the EVB's JTAG pins.

Note: This demo project is debugged with the PICkit-3 In-Circuit debugger/programmer.


4. To program the PIC32 SoC, click the **Make and Program Device Main Project** button, as displayed in [Figure E-3](#).

FIGURE E-3: MAKE AND PROGRAM DEVICE MAIN PROJECT BUTTON

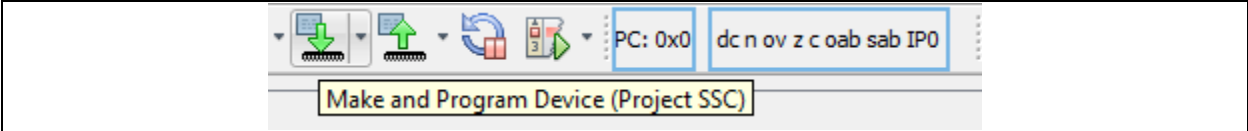

5. To debug the PIC32 SoC, click the **Debug Main Project** button, as displayed in [Figure E-4](#).

FIGURE E-4: DEBUG MAIN PROJECT

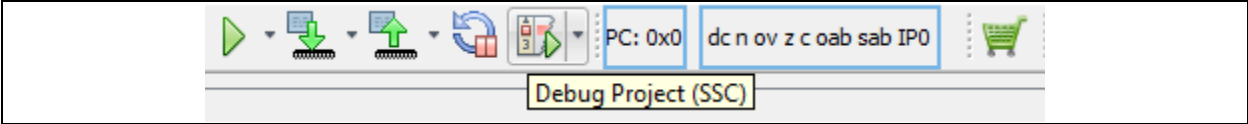

Appendix F. Programming PIC32 Firmware Using Pre-Built Binaries

F.1 INTRODUCTION

This appendix shows how to program PIC32 firmware.

F.1.1 Programming PIC32 Firmware Using Pre-Built Binaries

Follow these steps to program the PIC32 firmware using pre-built binaries:

1. Download and install MPLAB IPE V X.X from the following link:


<http://microchip.wikidot.com/ipe:installation>

| |
|--|
| Note: x.xx denotes the version number of the MPLAB IPE. |
|--|

2. Before initiating the firmware download, ensure the debugger/programmer is connected to the EVB's JTAG pins.
3. Open the MPLAB IPE.

The window displays as in [Figure F-1](#).

FIGURE F-1: MPLAB IPE

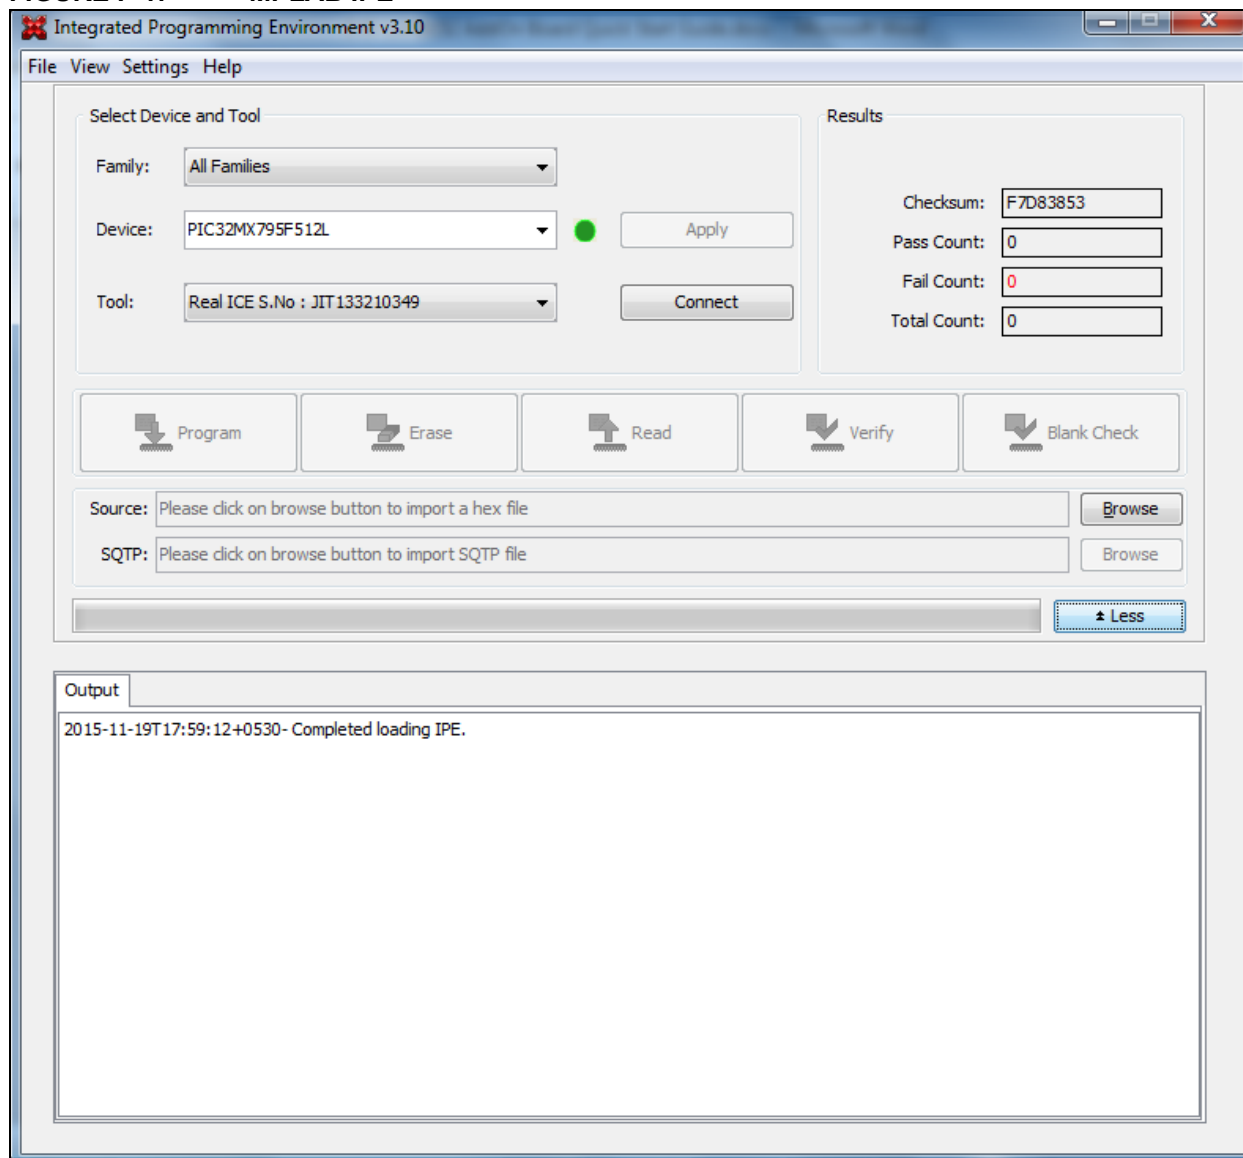

4. Select the corresponding device from the “Device” drop-down box and then click **Apply**.
5. Select the debugger/programmer from the “Tool” drop-down box and then click **Connect**.
6. From “Source,” click the **Browse** button and select the hex files which can be found in the “Binaries” directory of EVB-LAN9252-4PORT_PIC32_SDK_V X.X.
7. Once the hex files are loaded, click **Program**.

Worldwide Sales and Service

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://www.microchip.com/support>
Web Address:
www.microchip.com

Atlanta
Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Austin, TX
Tel: 512-257-3370

Boston
Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago
Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Cleveland
Independence, OH
Tel: 216-447-0464
Fax: 216-447-0643

Dallas
Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit
Novi, MI
Tel: 248-848-4000

Houston, TX
Tel: 281-894-5983

Indianapolis
Noblesville, IN
Tel: 317-773-8323
Fax: 317-773-5453

Los Angeles
Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608

New York, NY
Tel: 631-435-6000

San Jose, CA
Tel: 408-735-9110

Canada - Toronto
Tel: 905-673-0699
Fax: 905-673-6509

ASIA/PACIFIC

Asia Pacific Office
Suites 3707-14, 37th Floor
Tower 6, The Gateway
Harbour City, Kowloon

Hong Kong
Tel: 852-2943-5100
Fax: 852-2401-3431

Australia - Sydney
Tel: 61-2-9868-6733
Fax: 61-2-9868-6755

China - Beijing
Tel: 86-10-8569-7000
Fax: 86-10-8528-2104

China - Chengdu
Tel: 86-28-8665-5511
Fax: 86-28-8665-7889

China - Chongqing
Tel: 86-23-8980-9588
Fax: 86-23-8980-9500

China - Dongguan
Tel: 86-769-8702-9880

China - Hangzhou
Tel: 86-571-8792-8115
Fax: 86-571-8792-8116

China - Hong Kong SAR
Tel: 852-2943-5100
Fax: 852-2401-3431

China - Nanjing
Tel: 86-25-8473-2460
Fax: 86-25-8473-2470

China - Qingdao
Tel: 86-532-8502-7355
Fax: 86-532-8502-7205

China - Shanghai
Tel: 86-21-5407-5533
Fax: 86-21-5407-5066

China - Shenyang
Tel: 86-24-2334-2829
Fax: 86-24-2334-2393

China - Shenzhen
Tel: 86-755-8864-2200
Fax: 86-755-8203-1760

China - Wuhan
Tel: 86-27-5980-5300
Fax: 86-27-5980-5118

China - Xian
Tel: 86-29-8833-7252
Fax: 86-29-8833-7256

ASIA/PACIFIC

China - Xiamen
Tel: 86-592-2388138
Fax: 86-592-2388130

China - Zhuhai
Tel: 86-756-3210040
Fax: 86-756-3210049

India - Bangalore
Tel: 91-80-3090-4444
Fax: 91-80-3090-4123

India - New Delhi
Tel: 91-11-4160-8631
Fax: 91-11-4160-8632

India - Pune
Tel: 91-20-3019-1500

Japan - Osaka
Tel: 81-6-6152-7160
Fax: 81-6-6152-9310

Japan - Tokyo
Tel: 81-3-6880-3770
Fax: 81-3-6880-3771

Korea - Daegu
Tel: 82-53-744-4301
Fax: 82-53-744-4302

Korea - Seoul
Tel: 82-2-554-7200
Fax: 82-2-558-5932 or
82-2-558-5934

Malaysia - Kuala Lumpur
Tel: 60-3-6201-9857
Fax: 60-3-6201-9859

Malaysia - Penang
Tel: 60-4-227-8870
Fax: 60-4-227-4068

Philippines - Manila
Tel: 63-2-634-9065
Fax: 63-2-634-9069

Singapore
Tel: 65-6334-8870
Fax: 65-6334-8850

Taiwan - Hsin Chu
Tel: 886-3-5778-366
Fax: 886-3-5770-955

Taiwan - Kaohsiung
Tel: 886-7-213-7828

Taiwan - Taipei
Tel: 886-2-2508-8600
Fax: 886-2-2508-0102

Thailand - Bangkok
Tel: 66-2-694-1351
Fax: 66-2-694-1350

EUROPE

Austria - Wels
Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen
Tel: 45-4450-2828
Fax: 45-4485-2829

France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Dusseldorf
Tel: 49-2129-3766400

Germany - Karlsruhe
Tel: 49-721-625370

Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781

Italy - Venice
Tel: 39-049-7625286

Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340

Poland - Warsaw
Tel: 48-22-3325737

Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

Sweden - Stockholm
Tel: 46-8-5090-4654

UK - Wokingham
Tel: 44-118-921-5800
Fax: 44-118-921-5820

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Microchip:](#)

[EVB-LAN9252-4PORT](#)