

MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

# **BT Click**

www.mikroe.com





PID: MIKROE-4384

BT Click is a compact add-on board targeted for applications that require both Bluetooth Smart and Classic connectivity. This board features the BT121, a dual-mode Bluetooth Smart Ready module solution that gives unparalleled flexibility to integrate both Bluetooth Smart and Bluetooth Basic Rate/Enhanced Data Rate (BR/EDR) wireless technologies from Silicon Labs. It contains a high-performance Bluetooth radio, a low-power ARM Cortex MCU, and a Bluegiga Bluetooth Smart Ready stack software marking it an extremely easy-to-use device. This Click board<sup>™</sup> can be used in a wide variety of applications such as cable replacement, HID devices, health and fitness, PoS (point-of-sale), industrial and home automation gateways, and others.

BT Click is supported by a mikroSDK compliant library, which includes functions that simplify software development. This Click board™ comes as a fully tested product, ready to be used on a system equipped with the mikroBUS™ socket.

#### How does it work?

BT Click is based on the BT121, a dual-mode Bluetooth Smart Ready module solution that gives unparalleled flexibility to integrate both Bluetooth Smart and Bluetooth Basic Rate/Enhanced Data Rate (BR/EDR) wireless technologies from Silicon Labs. It contains a high-performance Bluetooth radio, a low-power ARM Cortex MCU, and a Bluegiga Bluetooth Smart Ready stack software marking it an extremely easy-to-use device. Also, it contains two configurable powersaving modes. Power Mode 1 is a shallow sleep state with all clocks and peripherals running but with the processor core stopped, while Power Mode 2 is a deep sleep state in which most peripheral devices and system clocks are Power-Down states.


Mikroe produces entire development toolchains for all major microcontroller architectures. Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.







MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918
Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

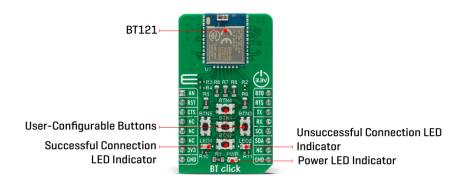

The BT121 module generates all the required clock signals internally. The clocks used by the internal MCU and external peripherals are synchronized to an internal 32.768kHz crystal connected to the internal RTC, always available to Wake-Up the module. It will take approximately two seconds for the RTC oscillator to stabilize after power is connected. To avoid this delay it's recommended not to turn off the power supply of the BT121 but to set the module into the lowest power mode providing the smallest current consumption.

This Click board  $^{\mathsf{TM}}$  uses the UART communication interface as its default communication protocol that supports all standard baud rates up to 4 Mbps. It is also left the option for the user to use the I2C interface if he wants to configure the module and write the library by himself. In addition to standard UART TX/RX pins, it also has UART RTS/CTS pins routed on the CS and PWM pins of the mikroBUS $^{\mathsf{TM}}$  socket recommended for every application for reliable data transfer.

It is necessary to mention the way this Click board™ works so that the user can use it correctly. In the example code that Mikroe offers to its users, the <u>Serial Bluetooth Terminal Android application</u> was used. By clicking on the given link, the user is directed to the free Android application on the Play Store that needs to be downloaded and installed so that he can pair his device with BT Click. Only after successful pairing, the BT Click will be visible in the Serial Bluetooth Terminal Android application.

The BT121 module comes with built-in firmware that provides the ability to use the module Update feature. The module can be updated through the UART interface by holding the built-in ARM® Cortex® MCU of the BT121 module in a Reset state via RST pin, which typically will free the UART communication lines to be used by the Device Firmware Update protocol (DFU). DFU protocol contains commands and events that are related to controlling firmware update over the configured host interface and are available only when the module has been booted into DFU Mode. The user can find all the necessary commands in the attached API reference document.

The Update function consists of the following steps:

- Boot device to DFU mode with DFU Reset Command.
- Wait for the **DFU Boot Event**.
- Send command **Flash Set Address** to start the firmware update.
- Upload the firmware with **Flash Upload Commands** until all the data has been uploaded.

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.





health and safety management system.



MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918

Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

- Send Flash Upload Finish command when all the data has been uploaded.
- Finalize the DFU firmware update with the **Reset command**.

In addition to all features, the BT Click also has additional components such as 2 LED indicators as well as several onboard pushbuttons. Based on the example code, the blue LED labeled as LED1 is used to visually indicate the successfully established connection, and the red LED labeled as LED 2 reports when establishing the connection is unsuccessful. The onboard pushbuttons don't have a precisely defined function. It can be configured to operate as a standard general-purpose digital I/O's, and they are left to the user to configure them according to their needs.

This Click board<sup>TM</sup> is designed to be operated only with a 3.3V logic voltage level. A proper logic voltage level conversion should be performed before the Click board<sup>TM</sup> is used with MCUs with different logic levels. However, the Click board<sup>TM</sup> comes equipped with a library that contains easy to use functions and an example code that can be used as a reference for further development.

# **Specifications**

| Туре             | BT/BLE   |
|------------------|--|
| Applications     | Can be used in a wide variety of applications such as cable replacement, HID devices, health and fitness, PoS (point-of-sale), industrial and home automation gateways, and others.  |
| On-board modules | BT Click is based on the BT121, a dual-mode<br>Bluetooth Smart Ready module solution that<br>gives unparalleled flexibility to integrate both<br>Bluetooth Smart and Bluetooth Basic<br>Rate/Enhanced Data Rate (BR/EDR) wireless<br>technologies from Silicon Labs. |
| Key Features     | Bluetooth 4.1 Smart Ready compliant, integrated antenna, high performance, connectivity to both Bluetooth BR/EDR, and more.  |
| Interface        | Analog,I2C,UART  |
| Feature          | No ClickID   |
| Compatibility    | mikroBUS™  |
| Click board size | M (42.9 x 25.4 mm)   |
| Input Voltage    | 3.3V   |
| Category         | Click Boards   |

# **Pinout diagram**

This table shows how the pinout on BT Click corresponds to the pinout on the mikroBUS™ socket (the latter shown in the two middle columns).

Notes Pin Notes

MIKTOE Produces entire development rooicnains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.



MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918

Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

www.mikroe.com

|               |      | mikro™<br>BUS |      |     |    |     |           |
|---------------|------|---------------|------|-----|----|-----|-----------|
| Analog Signal | AN   | 1             | AN   | PWM | 16 | ВТ0 | Boot Mode |
| Reset         | RST  | 2             | RST  | INT | 15 | RST | UART RTS  |
| UART CTS      | CTS  | 3             | CS   | RX  | 14 | TX  | UART TX   |
|               | NC   | 4             | SCK  | TX  | 13 | RX  | UART RX   |
|               | NC   | 5             | MISO | SCL | 12 | SCL | I2C Clock |
|               | NC   | 6             | MOSI | SDA | 11 | SDA | I2C Data  |
| Power Supply  | 3.3V | 7             | 3.3V | 5V  | 10 | NC  |           |
| Ground        | GND  | 8             | GND  | GND | 9  | GND | Ground    |

# **Onboard settings and indicators**

| Label | Name      | Default | Description                                     |
|-------|-----------|---------|---|
| LD1   | PWR       | -       | Power LED Indicator                             |
| LD2   | LED1      | -       | Successful Connection Blue LED Indicator        |
| LD3   | LED2      | -       | Unsuccessful<br>Connection Red LED<br>Indicator |
| T1-T5 | BTN1-BTN5 | -       | User-Configurable<br>Buttons                    |

## **BT Click electrical specifications**

| Description                 | Min  | Тур | Max  | Unit |
|-----------------------------|------|-----|------|------|
| Supply Voltage              | -0.3 | 3.3 | 3.6  | V    |
| Frequency Range             | 2402 | -   | 2480 | MHz  |
| Operating Range             | 200  | -   | 400  | m    |
| Operating Temperature Range | -40  | -   | +85  | °C   |

# **Software Support**

We provide a library for the BT Click on our <u>LibStock</u> page, as well as a demo application (example), developed using MikroElektronika <u>compilers</u>. The demo can run on all the main MikroElektronika <u>development boards</u>.

### **Library Description**

The library covers all the necessary functions to control BT Click board™. Library performs a standard UART interface communication.

#### Key functions:

- void bt\_send\_data ( uint8\_t \*tx\_data, uint8\_t len ) Send data function
- uint16 t bt get data ( uint8 t \*rx data ) Get response data function.
- void bt hw reset (void) HW reset function.

#### **Examples description**

The application is composed of three sections:

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.





health and safety management system.



Time-saving embedded tools

MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

- System Initialization Initializes UART, sets AN, RST, CS and PWM pins as outputs and set INT pin as input and begins to write a log.
- Application Initialization Initialization driver enables UART, enable uart interrupt
  routine, perform intro start the module, after that we configure the module: set local BT
  name (BT Click), set the Bluetooth Classic Class of Device (COD), set whether the
  device accepts new bondings, set Bluetooth Classic visibility and connectability and
  start a RFCOMM server as defined in the referenced SDP-entry.
- Application Task (code snippet) This example demonstrates the use of the BT Click board<sup>™</sup>. After module configuration, you can establish a Bluetooth Classic connection with a BT Click. If the click connection is successful, the blue LED turns on and communication is possible. Also, if the Bluetooth Classic connection is disconnected, the red LED turns on. The messages sent via a mobile phone are displayed on the Usart Terminal. Results are being sent to the Usart Terminal where you can track their changes.
- void intro\_device\_start ( ) Start the module.
- void display response ( ) Display response.
- void display evt bt conn opened () Display event new connection was opened.
- void display evt bt conn close ( ) Display event new connection was closed.
- void display\_evt\_endpoint\_data ( ) Display event endpoint data.

The full application code, and ready to use projects can be found on our <u>LibStock</u> page.

Other mikroE Libraries used in the example:

- UART
- Conversions

#### Additional notes and informations

Depending on the development board you are using, you may need <u>USB UART click</u>, <u>USB UART 2 click</u> or <u>RS232 click</u> to connect to your PC, for development systems with no UART to USB interface available on the board. The terminal available in all MikroElektronika <u>compilers</u>, or any other terminal application of your choice, can be used to read the message.

#### mikroSDK

This Click board<sup>™</sup> is supported with  $\underline{\mathsf{mikroSDK}}$  - MikroElektronika Software Development Kit. To ensure proper operation of mikroSDK compliant Click board<sup>™</sup> demo applications, mikroSDK should be downloaded from the  $\underline{\mathsf{LibStock}}$  and installed for the compiler you are using.

For more information about mikroSDK, visit the official page.

#### Resources

mikroBUS™

mikroSDK

mikroSDK

Click board™ Catalog

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.



ISO 27001: 2013 certification of informational security management system.
ISO 14001: 2015 certification of environmental management system.
OHSAS 18001: 2008 certification of occupational health and safety management system.





MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918

Phone: + 381 1178 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com www.mikroe.com

#### **Downloads**

**BT click schematic** 

BT121 datasheet

BT click 2D and 3D files

BT click example on Libstock

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.







# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Mikroe:

MIKROE-4384