

Smart Power Monitor

KM50-E1-FLK

• High-performance Power Monitor Suitable for On-panel Mounting and Display

• Assists Energy-saving Analysis

- Energy classification for wasted standby and stopped power. (Classification based on external inputs is also supported.) **NEW**
- Power and current can be measured simultaneously. Measurement of flow rates with a pulse conversion function. **NEW**
- Simple temperature measurements with Temperature Sensor included in the Unit. **NEW**

• High-precision Measurements

- Measurement of generated power (regenerative power), leading reactive power, lagging reactive power, and consumed power. **NEW**
- Power measurements on the primary side of inverters, which are widely used to save energy.
- Automatic range switching for accurate measurement of standby and stopped power.

• Energy-saving Functions

- Conversion to monetary cost. (Also used for classified standby and stopped power.) **NEW**
- Alarm outputs can be selected for active power, reactive power, regenerative power, current, voltage, or power factor. **NEW**
- The Power Monitor can log measurement data and supports Modbus communications.

• Installation and Settings

- Direct measurement of three-phase, four-wire, 400-V line voltage.
- Simple measurements without voltage wiring.
- Incorrect voltage wiring detection. **NEW**



NEW

Features


■ Functions That Support Energy-saving Analysis

● Energy Classification (First in the Industry)

Three-state Energy Classification with three-color displays lets you know where energy can be saved.

- 1) Three-state Energy Classification divides the total power consumption into stopped power, standby power, and operating power depending on the power usage conditions so that you can see where energy can be saved.
- 2) Three-state Energy Classification can be linked to three independent outputs for operating, standby, and stopped status. The criteria can be set as the threshold value of the power, current, or voltage, or as an external input. It is also possible to change the three color display.


Three-state Energy Classification

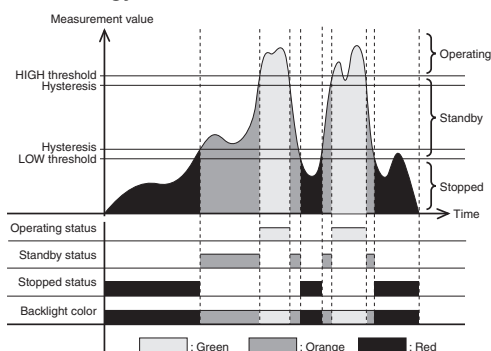


● Pulse Measurement and Conversion

- 1) Flow rates can be measured at the same time as power by inputting flow pulses. (Two inputs are supported.) To support energy-saving analysis, power consumption can be compared with the flow rate of air, gas, or other fluids with a single Unit.
- 2) Pulse inputs can be counted, or used to measure the ON time. The consumption rate of a device can be measured by dividing the power consumption with the measured number of operations or operation time.

Pulse Input Count Measurement



Pulse Input ON Time Measurement



● Simple Temperature Measurement

KM50 Power Monitors have a thermister chip built onto the panel surface for easy measurement of the panel surface temperature. The temperature display can be offset to match the room temperature to manage trends.

Energy Management with High-precision Measurements

● Total Regenerated Energy Measurement

In addition to the consumed energy (total regenerative power consumption), generated power (total regenerative energy) can also be measured.

A single Power Monitor can measure equipment that effectively uses power generated by reverse motor rotation.

● Total Reactive Power Measurement

In addition to instantaneous reactive power, the total leading or lagging power consumption can also be measured.


Together with peak power measurements, this function aids with monitoring the power distribution equipment.

● Automatic Range Switching

Automatic range switching enables high-accuracy measurements even for microcurrents.

Standby and stopped power can be accurately measured.

When measured at the distribution board, the total of the distributed values is almost the same as the base measurement.

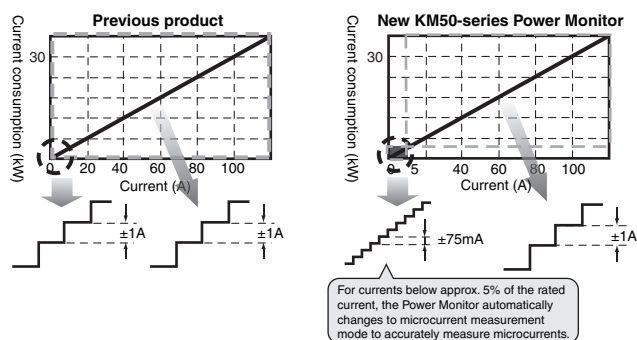

You can measure microcurrents of ± 75 mA with a CT with a rated current of 100 A. (Reference Value)

You can measure microcurrents of ± 4 mA with a CT with a rated current of 5 A. (Reference Value)

Note: Reference values are typical values. Actual values may vary.

● Inverter Compatibility

Measurements can be made on the primary side of an inverter.

Power consumption can be measured even after installing inverters which are widely used to save energy. This enables you to accurately grasp the effect obtained by introducing the inverter.


Functions That Support Saving Energy

● Conversion to Monetary Cost

The total power consumption can be converted to the equivalent monetary cost.

Energy consumption classified as standby and stopped power can also be converted to the cost.


Displaying the cost of the wasted energy can be used to support energy-saving measures.

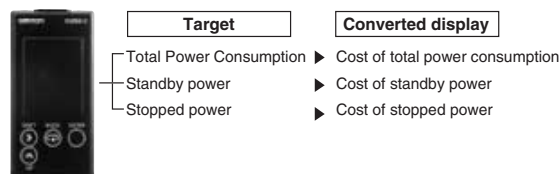

● Alarm Output

An alarm can be output when active power exceeds a certain limit. There are two outputs; a pulse output and an output for alarm selection.

Alarms can also be set up for generated power (regenerative power), current, voltage, power factor, or reactive power to assist plant monitoring.

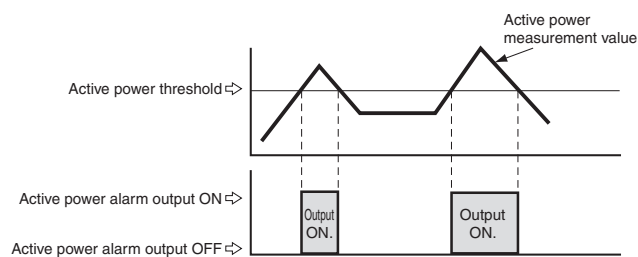

● Built-in Logging Function

The total power consumption can be saved in internal memory every 5 minutes, hour, day, or month.

Data can be saved as follows: 5-minute data for two days, 1-hour data for eight days, 1-day data for month, and 1-month data for one year.

Data Logging Cycle and Amounts

Total power consumption	Every 5 min: 48 hours of data *1
	Every hour: 25 hours of data *2
	Every day: 8 days of data
	Every month: 13 months of data
Active power, current, voltage, and maximum/minimum power factors	Every day: 8 days of data

*1. The data that is logged with a 5-minute cycle can be read out only by using RS-485 communications.

Readout is not possible with key operations on the Power Monitor.

*2. Up to 48 hours of data can be read out using communications.

Functions That Support Installation and Settings

● Direct Measurement of Three-phase, Four-wire, 400-V Line Voltage

Measurement is possible for single-phase two-wire, single-phase three-wire, three-phase three-wire, and three-phase four-wire power. You can directly measure the voltage of a three-phase, three-wire 400-V line.

● Simple Measurement

- The simple measurement function calculates the power from a fixed voltage and the measured current using a fixed power factor.
- This function can be used when the voltage cannot be input to the KM50 due to onsite conditions or wiring arrangements.
- If the Simple Measurement parameter is set to ON, the fixed voltage and fixed power factor can be set.
- The simple measurement function can be used to get an approximate power consumption of an installed circuit without wiring and measuring the voltage. Therefore, you must set the voltage and power factors to appropriate levels.
- Fixed values are used for the voltage and power factor, so the accuracy specifications do not apply.

* Set the voltage to 100 V when performing simple measurements on a single-phase, three-wire power supply.

● Incorrect Wiring Detection

Incorrect voltage wiring can be detected.

If any mistakes were made during installation, they are automatically detected, reducing the time required for checking after installation. This also reduces the risk of having to restart when a mistake is found.


Display for Faulty Wiring



● Communications

Up to 99 KM50 Power Monitors can be connected using RS-485 Modbus.

The energy use of each device can be managed with minimal wiring.

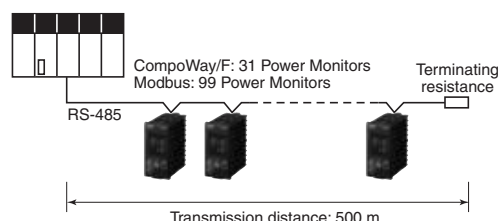

Ordering Information

● KM50-E Smart Power Monitor

Model	Applicable circuits	Power supply voltage (shared)	Dimensions	Communications	Protocol
KM50-E1-FLK <i>NEW</i>	Single-phase, 2-wire: 100 to 480 VAC Single-phase, 3-wire: 100/200 VAC Three-phase, 3-wire: 100 to 480 VAC Three-phase, 4-wire: 85 to 277 VAC	100 to 240 VAC	96 × 48 × 93 (H × W × D)	RS-485	CompoWay/F: 31 nodes, Modbus: 99 nodes (Both are supported by the same model.)

● CTs

These CTs must be used with the KM50/KM20-B40/-FLK. Do not use them with any other products.

Model	Rated primary current	Rated secondary current	Installation
KM20-CTF-5A	5 A	Special output	Installed separately
KM20-CTF-50A	50 A		
KM20-CTF-100A	100 A		
KM20-CTF-200A	200 A		
KM20-CTF-400A	400 A		
KM20-CTF-600A	600 A		

Note: CT Cables are not included with the CTs.

● CT Cable

Model	Cable length
KM20-CTF-CB3	3 m

Note: Either use the CT Cable specified by OMRON or use 1.25-B3A crimp terminals and AWG22 wire from J.S.T. Mfg. Co., Ltd.

Specifications

■ Ratings

Item		Model	KM50-E
Applicable circuit			Single-phase two-wire, single-phase three-wire, three-phase three-wire, and three-phase four-wire power
Rated power supply voltage			100 to 240 VAC, 50/60 Hz
Allowable supply voltage range			85% to 110% of rated power supply voltage
Allowable frequency range			45 to 65 Hz
Power consumption			7 VA max.
Rated input	Rated input voltage		100 to 480 VAC (single-phase, 2-wire): Line voltage 100/200 VAC (single-phase, 3-wire): Phase voltage/line voltage 100 to 480 VAC (3-phase, 3-wire): Line voltage 58 to 277 VAC (3-phase, 4-wire): Phase voltage
	Rated input current		5 A, 50 A, 100 A, 200 A, 400 A, or 600 A (primary current of Special CT) *
	Rated frequency		50/60 Hz
	Rated input power		With 5-A CT: 4 kW With 50-A CT: 40 kW With 100-A CT: 80 kW With 200-A CT: 160 kW With 400-A CT: 320 kW With 600-A CT: 480 kW
	Allowable input voltage		110% of rated input voltage (continuous)
	Allowable input current		120% of rated input current (continuous)
	Rated input load		Voltage input: 0.5 VA max. (excluding power supply) Current input: 0.5 VA max. (for each input)
Time			2010 to 2099 (Adjusted for leap year.) Accuracy: ± 1.5 min/month (at 23 °C)
Time backup period			7 days (without power supply, at 23 °C)
Ambient operating temperature			-10 to 55 °C (with no condensation or icing)
Storage temperature			-25 to 65 °C (with no condensation or icing)
Ambient operating humidity			25% to 85%
Storage humidity			25% to 85%
Altitude			2,000 m max.
Installation environment			Overvoltage category and measurement category: 2, Pollution level: 2

* A special output signal is output as the secondary current from the Special CT.

■ Performance

● Smart Power Monitor

Item		Model	KM50-E
Accuracy *	Voltage		±1.0% FS ±1 digit (at ambient temperature of 23 °C, rated input, and rated frequency). However, the accuracy is ±2.0% FS ±1 digit for the Vtr line voltage for three-phase, three-wire power and the Vrs line voltage for single-phase, three-wire power under the same conditions.
	Current		±1.0% FS ±1 digit (at ambient temperature of 23 °C, rated input, and rated frequency). However, the accuracy is ±2.0% FS ±1 digit for the phase-S current for three-phase, three-wire power and the phase-N current for single-phase, three-wire power under the same conditions.
	Active power Reactive power		±2.0% FS ±1 digit (at ambient temperature of 23 °C, rated input, rated frequency, and a power factor of 1) Reactive power formula: $\text{Reactive power} = v \times i \times \sin \theta$ * "v" is the instantaneous voltage and "i" is the instantaneous current. θ is the phase difference between the voltage and current.
	Frequency		±0.3 Hz ±1 digit (at ambient temperature of 23 °C, rated input, and rated frequency)
	Power factor		±5.0% FS ±1 digit (at ambient temperature of 23 °C, rated input, rated frequency, and power factor = 0.5 to 1 to 0.5) Power factor formula: $\text{Power factor} = \text{Active power} / \text{Apparent power}$ * $\text{Apparent power} = \sqrt{(\text{Active power})^2 + (\text{Reactive power})^2}$
	Temperature		±5 °C two hours after the power is turned ON (after setting the offset to match the ambient environment)
Low-cut current set value			0.1% to 19.9% of rated current input (in 0.1% increments)
Sampling cycle			100 ms for measurement voltage at 50 Hz and 83.3 ms for measurement voltage at 60 Hz
Temperature influence *			±1.0% FS ±1 digit (percentage of power within operating temperature range, at ambient temperature of 23 °C, rated input, rated frequency, and power factor of 1)
Frequency influence *			±1.0% FS ±1 digit (percentage of power within rated frequency ±5 Hz, at ambient temperature of 23 °C, rated input and power factor of 1)
Influence of harmonics *			±0.5% FS ±1 digit (at ambient temperature of 23 °C, error for superimposed 2nd, 3rd, 5th, 7th, 9th, 11th, and 13th harmonics for a content percentage of 30% for current and 5% for voltage of the basic wave)
Insulation resistance			1) Between all power circuits and all of the RS-485 terminals, OUT1, OUT2, event inputs, I/O commons, and transistor outputs: 20 MΩ max. (at 500 VDC) 2) Between all current and voltage inputs and all of the RS-485 terminals, OUT1, OUT2, event inputs, I/O commons, and transistor outputs: 20 MΩ max. (at 500 VDC) 3) Between all current and voltage inputs and the front case: 20 MΩ max. (at 500 VDC) 4) Between all power circuits and the front case: 20 MΩ max. (at 500 VDC)
Dielectric strength			1) Between all power circuits and all of the RS-485 terminals, OUT1, OUT2, event inputs, I/O commons, and transistor outputs: 2,800 VAC for 1 min 2) Between all current and voltage inputs and all of the RS-485 terminals, OUT1, OUT2, event inputs, I/O commons, and transistor outputs: 3,600 VAC for 1 min 3) Between all current and voltage inputs and the front case: 3,600 VAC for 1 min 4) Between all power circuits and the front case: 2,800 VAC for 1 min
Vibration resistance			Single amplitude: 0.35 mm, Acceleration: 50 m/s ² , Frequency: 10 to 15 Hz, 10 sweeps for 8 min each along three axes
Shock resistance			150 m/s ² , 3 times each in 6 directions (up/down, left/right, forward/backward)
Weight			Approx. 250 g (Power Monitor only)
Degree of protection			Front panel: IP66 (when mounted to a panel), Rear case: IP20, Terminal section: IP00
Memory backup			EEPROM (non-volatile memory), No. of writes: 1,000,000 times
Compliant standards			EN61010-1 (IEC61010-1), EN61326-1 (IEC61326-1), UL61010-1, CAN/CSA-C22.2 No.61010-1
Event inputs	Number of inputs		Two event inputs The two event inputs use the same common terminal
	Voltage input		High level: 4.75 to 30 VDC Low level: 0 to 2 VDC Input impedance: Approx. 2 kΩ
	No-voltage input		ON resistance: 1 kΩ max. OFF resistance: 100 kΩ min. ON residual voltage: 8 V max. ON current (at 0 Ω): 10 mA max.
	Minimum input time		5 ms
Transistor outputs	Number of outputs		5 open-collector outputs (two total power consumption pulse output or alarm output, and three, 3-state outputs) The total power consumption pulse output and alarm output use the same common terminal. The three, 3-state outputs use the same common terminal.
	Output capacity		30 VDC, 30 mA max. ON residual voltage: 12 V max. OFF leakage current: 100 μA max.
Communications	Communications method		RS-485 (2-wire half-duplex)
	Sync method		Start-stop
	Unit number setting		CompoWay/F: 0 to 99, Modbus: 1 to 99
	Baud rate		1.2, 2.4, 4.8, 9.6, 19.2, 38.4 kbps
	Transmission code		CompoWay/F: ASCII, Modbus: Binary
	Data length		7, 8 bits
	Stop bit length		1, 2 bits
	Vertical parity		Even, odd, or none
	Maximum transmission distance		500 m
EMC (Industrial Applications)	Maximum number of connected Power Monitors		CompoWay/F: 31, Modbus: 99
	EMI EN61326-1		Radiated RF Electromagnetic Field: CISPR 11 class A Conducted Emission: CISPR 11 class A
		EMS EN61326-1	Electrostatic Discharge Immunity : EN61000-4-2 Electromagnetic Field Immunity : EN61000-4-3 Fast Transient/Burst Noise Immunity : EN61000-4-4 Surge Immunity : EN61000-4-5 Conducted Disturbance Immunity : EN61000-4-6 Power Frequency Magnetic Field Immunity : EN61000-4-8 Voltage Dip and Interruption Immunity : EN61000-4-11

* The error of the Special CT is not included.

● CTs

Item	Model	KM20-CTF-5A	KM20-CTF-50A	KM20-CTF-100A	KM20-CTF-200A	KM20-CTF-400A	KM20-CTF-600A
Rated primary current		5 A	50 A	100 A	200 A	400 A	600 A
Secondary winding		3,000 turns				6,000 turns	9,000 turns
Application frequency		10 Hz to 5 kHz					
Insulation resistance		Between output terminal and external case: 50 MΩ min. (at 500 VDC)					
Dielectric strength		Between output terminal and external case: 2,000 VAC for 1 min					
Protective element		7.5 V clamp element					
Allowable number of connections/disconnections		100 times					
Inner diameter		10 dia.	16 dia.	24 dia.	37 dia.		
Operating temperature and humidity range		-20 to +60 °C 85% (with no condensation)					
Storage temperature and humidity range		-30 to +65 °C 85% (with no condensation)					

● CT Cable

Model	KM20-CTF-CB3
Cable length	3 m

Note: Either use the CT Cable specified by OMRON or use 1.25-B3A crimp terminals and AWG22 wire from J.S.T. Mfg. Co., Ltd.

■ Normal Usage Conditions

● Smart Power Monitor


Operating temperature range	-10 to 55 °C (with no icing)
Storage temperature range	-25 to 65 °C (with no icing or condensation)
Operating humidity range	25% to 85% (with no condensation)
Installation environment	<ul style="list-style-type: none"> • No excessive vibration or shock. • No harmful gases, including volatile, inflammable, and corrosive gases. • No influence from electrical fields or magnetic fields. • No dust. • No salt-water spray or water drops.

● CTs

Operating temperature range	-20 to 60°C (with no condensation)
Storage temperature range	-30 to 65 °C (with no condensation)

Part Names and Functions

■ KM50-E

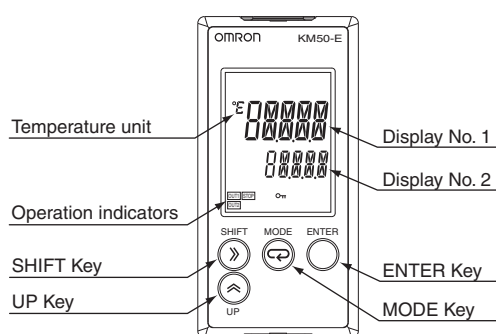

■ Display Functions

1) Display No. 1

The measured value or set data is displayed here (The text is green). When 3-state power classification is used, the text color changes according to the measurement conditions as given below.

- Operating (HIGH): Green
- Standby (MIDDLE): Yellow
- Stopped (LOW): Red

2) Display No. 2

The unit of the measured or set data, or the parameter name is displayed here.

Refer to Parameter Displays on page 14 for details.

3) Operation Indicators

- OUT1: Turns ON according to output that is set for terminal OUT1.
- OUT2: Turns ON according to output that is set for terminal OUT2.
- STOP: Lights if the power supply is turned ON when the backup power supply for the time data has expired while power was interrupted.
The time measurement function will be stopped in this state. This indicator will turn OFF when the time data is set. Measurement data cannot be logged while this indicator is lit.
- π (key indicator): Lit while the settings are protected.

4) Temperature unit

If Celsius is set as the temperature unit, C will be displayed.

If Fahrenheit is set, F will be displayed.

■ Basic Operating Procedure

Setting Example

Applicable circuit : Single-phase, 3-wire
Special CT : 5-A CT
Time : 2010/3/5 17:15

A. Check the wiring and turn ON the power supply.

[π m50e] will be displayed and data will be read from EEPROM. [wait] will be displayed for up to 16 seconds.

[e-t1] will be displayed and the STOP indicator will light the first time that the power supply is turned ON because the time is not set.

After 3 seconds, the active power will be displayed in Measurement Mode. (The STOP indicator will remain lit.)

B. Set the applicable circuit to a single-phase, three-wire circuit.

1. Press the \square Key for at least 3 seconds to go to the Applicable Circuit parameter [00.typ] in Operation Setting Mode.
2. Press the \blacktriangle Key to enable setting the parameter, press the \blacktriangle Key again to change the applicable circuit from [3p3w] to [1p3w], and then press the \circ Key to enter the setting.

C. Set the Special CT type to a 5-A CT.

1. Press the \blacktriangleright Key to move to the CT Type parameter [01.c.rg].
2. Press the \blacktriangle Key to enable setting the parameter, press the \blacktriangle Key again to change the CT type from [100a] to [5a], and then press the \circ Key to enter the setting.

D. Set the time to 2010/3/5 17:15.

The time must be set to enable logging data.

1. Press the \blacktriangleright Key to move to the Time Setting parameter [14.tim].
2. Press the \blacktriangle Key to enable setting the parameter, make sure that the year is [2010], and then press the \circ Key to enter the setting.
3. Using the \blacktriangle Key to change the digit value and the \blacktriangleright Key to change to a different digit, change the month/day from [01/01] to [03/05], and then press the \circ Key to enter the setting.
4. Using the \blacktriangle Key to change the digit value and the \blacktriangleright Key to change to a different digit, change the hour/minutes from [00-00] to [17-15], and then press the \circ Key to enter the setting. The time will be saved and the STOP indicator will turn OFF.
5. Press the \square Key for at least 3 seconds to go to the Measurement Mode and start measurements.
When you move to Measurement Mode, the settings will be saved and [save] will be displayed.

This completes the basic settings.






Mode Configuration and Operating Procedures

■ Mode Configuration

Mode			Description	Operation and setting requirements
Measurement Mode		Basic Level	Used to browse measurement data at the basic level.	Operation is required only to browse the data.
		Professional Level	Used to browse measurement data at the professional level.	Operation is required only to browse the data.
Protection Setting Mode			Used to restrict functionality.	These parameter must be set only when required.
Setting Mode	Operation Setting Mode	Basic Level	Used to set functions at the basic level.	These parameters must be set only for the initial setup.
		Professional Level	Used to set functions at the professional level.	These parameter must be set only when required.
	Communications Setting Mode		Used to set communications.	These parameters must be set only when using communications.

■ Key Operations

"Monitor status" is when set values are displayed in Protection Setting Mode or one of the Setting Modes. "Setting status" is when the set values can be changed in any of these modes.

Key	Basic usage	Mode	Status	Operating method	Operation
O ENTER Key	Switching modes Entering settings	Measurement Mode	Measurement log for current day	Press for at least 3 s	Clears the displayed maximum and minimum values for the day.
		Protection Setting Mode	Setting status	Click	Enters the set value.
		Operation Setting Mode	Monitor status	Click	Moves to Communications Setting Mode.
		Communications Setting Mode	Monitor status	Click	Moves to Operation Setting Mode.
M MODE Key	Switching modes Canceling operations	Measurement Mode	Present measurement value	Press for at least 3 s	Moves to Operation Setting Mode.
			Measurement log	Click	Moves to present measurement value.
		Setting Mode	Monitor status	Press for at least 3 s	Moves to Measurement Mode.
			Setting status	Click	Cancels setting status.
		Measurement Mode Setting Mode	Professional Level	Click	Moves to PROLV in the Basic Level.
S SHIFT Key	Moving	Measurement Mode	Present measurement value	Click	Moves to other parameters.
			Measurement log	Click	Switches the measurement log display.
		Setting Mode	Monitor status	Click	Moves to other parameters.
			Setting status	Click	Moves to another digit.
U UP Key	Moving to setting status Changing a set value	Measurement Mode	Present measurement value	Click	Moves to measurement log.
			Measurement log	Click	Moves to measurement log.
		Setting Mode	Monitor status	Click	Moves to setting status.
			Setting status	Click	Changes the set value.
		Measurement Mode Setting Mode	Basic Level with PROLV displayed	Click	Moves to Professional Level.
 +  (Hold down the M Key and press the S Key.)	Moving backward	Measurement Mode	Present measurement value	Click	Moves backward to other parameters.
			Measurement log	Click	Switches the measurement log display.
		Setting Mode	Monitor status	Click	Moves backward to other parameters.
			Setting status	Click	Moves backward to another digit.
 +  (Hold down the M Key and press the U Key.)	Changing the set value in the reverse direction	Measurement Mode	Measurement log	Click	Moves backward through the measurement log.
		Setting Mode	Setting status	Click	Changes the set value in the reverse direction.
 + O	Switching modes	Measurement Mode	Present measurement value	Press for at least 3 s	Moves to Protection Setting Mode.
		Protection Setting Mode	Monitor status	Press for at least 3 s	Moves to Measurement Mode.

Setting Mode

■ Operation Setting Mode

● Basic Level

Parameter		Setting range (Display No. 1)	Display No. 2	Default setting	Remarks
Applicable Circuit		1p2w / 1p3w / 3p3w / 3p4w	00.typ	3p3w	1p2w : Single-phase, 2-wire 1p3w : Single-phase, 3-wire 3p3w : Three-phase, 3-wire 3p4w : Three-phase, 4-wire
Special CT		5a / 50a / 100a / 200a / 400a / 600a	01.c.rg	100a	
Rated Primary Current		5 to 9999	02.sct	5	Enabled only when a 5-A CT is used.
VT Settings	VT Primary Voltage	none / 220 / 440 / 3300 / 6600 / 11000 / 22000 / 33000	03.v.rg	none	Disabled when Simple Measurement parameter is set to ON. The VT primary voltage and VT secondary voltage are set consecutively. Unit: V
	VT Secondary Voltage	110 / 220	v.rg2	110	
Low-cut Current		0.1 to 19.9	04.cut	0.6	Unit: % (Percentage of rated input current.)
Pulse Output Unit		1 / 10 / 100 / 1k / 2k / 5k / 10k / 20k / 50k / 100k	05.pl5	100	Unit: Wh
Display Refresh Period		off / 0.5 / 1.0 / 2.0 / 4.0	06.ref	1.0	OFF: Continuous refreshing Unit: s
Average Count		off / 2 / 4 / 8 / 16 / 32 / 64 / 128 / 256 / 512 / 1024	07.avg	8	
Simple Measurement Setting	Simple Measurement	off / on	08.smp	off	ON: Set the desired voltage and power factor. The frequency will be 50 Hz.
	Fixed Voltage	0.0 to 9999.9	vlt	110.0	Can be set only when Simple Measurement parameter is set to ON.
	Fixed Power Factor	0.00 to 1.00	pf	1.00	Can be set only when Simple Measurement parameter is set to ON.
Buzzer		off / on	09.bz	on	Enables or disables the buzzer that sounds for key operations.
CO ₂ Coefficient		0.000 to 99.999	10.co2	0.387	Unit: kg-CO ₂ /kWh
Conversion to Monetary Cost (Rate and Currency Settings)		0.000 to 99.999 jpy / usd / eur / cny / krw a to z / 0 to 9 / / - / _ (Space)	11.chg	10.000 jpy	The rate and display currency are set consecutively. Four digits can be used for the currency.
Pulse Conversion 1 Settings (Pulse Conversion Target, Coefficient, Decimal Point Position, and Display Unit Settings)		c-t.d / c-1.d / c-2.d / c-t.a / c-1.a / c-2.a 0000 to 9999 0000 / 000.0 / 00.00 / 0.000 a to z / 0 to 9 / / - / _ (Space)	12.cv1	c-1.d 0001 0000 m3-1	The pulse conversion target, coefficient, and display unit are set consecutively. Four digits can be used for the display unit. c-t.d : Total pulse input count c-1.d : Pulse input count 1 c-2.d : Pulse input count 2 c-t.a : Accumulated total pulse input count c-1.a : Total pulse input count 1 c-2.a : Total pulse input count 2
Pulse Conversion 2 Settings (Pulse Conversion Target, Coefficient, Decimal Point Position, and Display Unit Settings)		c-t.d / c-1.d / c-2.d / c-t.a / c-1.a / c-2.a 0000 to 9999 0000 / 000.0 / 00.00 / 0.000 a to z / 0 to 9 / / - / _ (Space)	13.cv2	c-2.d 0001 0000 m3-2	
Time Setting (Year, Month/Day, Hour/Minutes)		2010 to 2099 01/ 01 to 12/ 31 00-00 to 23-59	14.tim	2010 01/ 01 00-00	The year, month/day, and hour/minutes are set in order. Any changes are ignored if operation is canceled before completion. The new time is saved when the hour and minutes is set.
Initialize		set / max / min / integ / m.pro / log / all	15.ini	set	set : Initializes all parameters except for the Time Setting parameter. max : Initializes the Maximum value of all parameters for the day. min : Initializes the minimum value of all parameters for the day. integ : Initializes the total power consumptions. m.pro : Initializes the measured values for the day in the Professional Level of Measurement Mode. log : Initializes the entire measurement log. all : Initializes the measurement log and all parameters except for the Time Setting parameter.

Professional Level

Parameter		Setting range (Display No. 1)	Display No. 2	Default setting	Remarks
Event Input Setting		p.csp / h-on / 3-st	30.ei5	p.csp	p.csp : Specific Power Consumption h-on : Pulse Input ON Time 3-st : Three-state
Event Input 1 NPN/PNP Input Mode Setting		npn / pnp	31.pn1	pnp	npn : No-voltage input pnp : Voltage input
Event Input 2 NPN/PNP Input Mode Setting		npn / pnp	32.pn2	pnp	npn : No-voltage input pnp : Voltage input
Event Input 1 Normally Open/ Normally Closed Input Mode Setting		n-o / n-c	33.in1	n-o	n-o : Normally open n-c : Normally closed
Event Input 2 Normally Open/ Normally Closed Input Mode Setting		n-o / n-c	34.in2	n-o	n-o : Normally open n-c : Normally closed
Measurement Start Time *1		00-00 to 23-59	35.5tc	00-00	The start time must be before the end time.
Measurement End Time *1		00-01 to 24-00	36.etc	24-00	The end time must be after the start time.
Three-state Target		pwr / a / v / none	40.tgt	none	pwr : Active power a : Current v : Voltage none : Three-state Power Classification disabled If "3-st" is selected as the event input setting, none is set automatically.
Three-state HIGH Threshold		0.1 to 150.0	41.h.th *2	50.0	The HIGH threshold must be higher than the LOW threshold. The operating value depends on the criteria. Unit: % (Percentage of rated input.)
Three-state LOW Threshold		0.0 to 149.9	42.l.th *2	10.0	The LOW threshold must be lower than the HIGH threshold. The operating value depends on the criteria. Unit: % (Percentage of rated input.)
Three-state Hysteresis		0.0 to 19.9	43.hys *2	0.0	The operating value depends on the criteria. Unit: % (Percentage of rated input.)
Three-state Status Color Setting		green / orang / red	44.col	See Remarks.	Set the colors for HIGH, MIDDLE, and LOW. HIGH: green, MIDDLE: orang, LOW: red
Output Terminal 1 Function Setting		off / p.out / alarm	50.o1	p.out	p.out : Total power consumption pulse output alarm : Alarm Output If "alarm" is selected, the display moves to the alarm output OFF/ON setting.
Output Terminal 2 Function Setting		off / p.out / alarm	51.o2	alarm	p.out : Total power consumption pulse output alarm : Alarm Output If "alarm" is selected, the display moves to the alarm output OFF/ON setting.
Active Power Alarm Output (Upper and Lower Limit Thresholds, Hysteresis, OFF/ON Delays)		0.0 to 150.0 0.0 to 19.9 0.0 to 99.9	52.p.al *2	See Remarks.	The upper and lower limit thresholds, hysteresis, and OFF/ON delays are set consecutively. Upper Limit Threshold: 80.0%, Lower Limit Threshold: 0.0%, Hysteresis: 5.0%, OFF Delays: 3.0 sec, ON Delays: 0.0 sec
Regenerative Power Alarm Output (Upper and Lower Limit Thresholds, Hysteresis, OFF/ON Delays)		0.0 to 150.0 0.0 to 19.9 0.0 to 99.9	53.r.al *2	See Remarks.	The upper and lower limit thresholds, hysteresis, and OFF/ON delays are set consecutively. Upper Limit Threshold: 80.0%, Lower Limit Threshold: 0.0%, Hysteresis: 5.0%, OFF Delays: 3.0 sec, ON Delays: 0.0 sec
Current Alarm Output (Upper and Lower Limit Thresholds, Hysteresis, OFF/ON Delays)		0.0 to 120.0 0.0 to 19.9 0.0 to 99.9	54.a.al *2	See Remarks.	The upper and lower limit thresholds, hysteresis, and OFF/ON delays are set consecutively. Upper Limit Threshold: 110.0%, Lower Limit Threshold: 0.0%, Hysteresis: 5.0%, OFF Delays: 3.0 sec, ON Delays: 0.0 sec
Voltage Alarm Output (Upper and Lower Limit Thresholds, Hysteresis, OFF/ON Delays)		0.0 to 120.0 0.0 to 19.9 0.0 to 99.9	55.v.al *2	See Remarks.	The upper and lower limit thresholds, hysteresis, and OFF/ON delays are set consecutively. Upper Limit Threshold: 110.0%, Lower Limit Threshold: 0.0%, Hysteresis: 5.0%, OFF Delays: 3.0 sec, ON Delays: 0.0 sec
Power Factor Alarm Output (Upper and Lower Limit Thresholds, Hysteresis, OFF/ON Delays)		0.0 to 100 0 to 19 0.0 to 99.9	56.pf.a *2	See Remarks.	The upper and lower limit thresholds, hysteresis, and OFF/ON delays are set consecutively. Upper Limit Threshold: 100%, Lower Limit Threshold: 0%, Hysteresis: 5%, OFF Delays: 3.0 sec, ON Delays: 0.0 sec
Reactive Power Alarm Output (Upper and Lower Limit Thresholds, Hysteresis, OFF/ON Delays)		0.0 to 150.0 0.0 to 19.9 0.0 to 99.9	57.q.al *2	See Remarks.	The upper and lower limit thresholds, hysteresis, and OFF/ON delays are set consecutively. Upper Limit Threshold: 80.0%, Lower Limit Threshold: 0.0%, Hysteresis: 5.0%, OFF Delays: 3.0 sec, ON Delays: 0.0 sec
Consumed Power Save Selection		-w / var.d / var.g / var.a	60.isl	-w	-w : Total regenerated energy var.d : Total leading reactive power var.g : Total lagging reactive power var.a : Accumulative total reactive power
Automatic Rotation Settings	Automatic Rotation	off / on	61.rtt	off	Set the transition time when you set this parameter to ON.
	Transition Time	1 to 99	rtim	3	The transition time can be set only when automatic rotation is set to ON.
Measurement Parameter Display Selection		off / on	62.d.sl	See Remarks.	This setting is made individually for each parameter in the measurement mode. The default value is off for conversion to monetary cost, pulse conversion 1 and 2, total regenerative energy, total leading and lagging reactive power, and simple temperature measurement.
Display ON Time		0 to 99	63.dsp	0	0 : Always ON Unit: Minutes
Incorrect Voltage Wiring Detection		off / on	64.v-e	on	
Simple Temperature Settings	Temperature Unit	c / f	65.d-u	c	The temperature unit and temperature compensation are set consecutively.
	Temperature Compensation	-50.0 to 50.0	t.ad	0.0	c : Celsius, Unit: °C f : Fahrenheit, Unit: °F

*1. These parameters are used for the pulse input count, specific power consumption, pulse input ON time, total three-state power consumptions, and total three-state times.

*2. While you are setting the threshold and hysteresis, the operating value that is calculated from the set value (%) will be displayed.

■ Communications Setting Mode

Parameter	Setting range (Display No. 1)	Display No. 2	Default setting	Remarks
Protocol Selection	compf / modb	80.psl	compf	compf : CompoWay/F modb : Modbus
Unit Number	CompoWay/F: 0 to 99 Modbus: 1 to 99	81.u.no	1	
Baud Rate	1.2k / 2.4k / 4.8k / 9.6k / 19.2k / 38.4k	82.bps	9.6k	Unit: bps
Data Length *1	7 / 8	83.len	7	Unit: bits
Stop Bits *2	1 / 2	84.sbt	2	Unit: bits
Vertical Parity	none / odd / even	85.prt	even	
Transmission Wait Time	0 to 99	86.sdw	20	Unit: ms

*1. The data length will be 8 bits if Modbus is set as the protocol.

*2. The number of stop bits will be set automatically if Modbus is set as the protocol. You do not need to set it.

If the Vertical Parity parameter is set to "none," there will be 2 stop bits. If it is set to odd or even parity, there will be 1 stop bit.

■ Protection Level

Set value	Restrictions				
	Changing the display	Moving to the Setting Modes	Moving to Professional Level	Clearing the measurement log	Changing set values
0	○	○	○	○	○
1	○	○	○	×	×
2	○	○	×	×	×

○: Enabled, ×: Disabled

■ Segment Displays

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R
7 SEG	<i>A</i>	<i>b</i>	<i>C</i>	<i>d</i>	<i>E</i>	<i>F</i>	<i>G</i>	<i>H</i>	<i>I</i>	<i>J</i>	<i>K</i>	<i>L</i>	<i>M</i>	<i>N</i>	<i>O</i>	<i>P</i>	<i>Q</i>	<i>R</i>
11 SEG	a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r

	S	T	U	V	W	X	Y	Z	0	1	2	3	4	5	6	7	8	9
7 SEG	<i>S</i>	<i>t</i>	<i>U</i>	<i>v</i>	<i>W</i>	<i>X</i>	<i>Y</i>	<i>Z</i>	<i>0</i>	<i>1</i>	<i>2</i>	<i>3</i>	<i>4</i>	<i>5</i>	<i>6</i>	<i>7</i>	<i>8</i>	<i>9</i>
11 SEG	s	t	u	v	w	x	y	z	0	1	2	3	4	5	6	7	8	9

■ Error Displays

Error	Display	Operation	Recovery method
Time not set in KM50	e-t1	The error will be displayed at startup and the STOP indicator will light. Measurements will stop and operation will not be possible.	Set the time.
RAM error *1	e-m1	Measurements will stop and operation will not be possible.	Request hardware repairs. *2
EEPROM error *1	e-m2	Measurements will stop and operation will not be possible.	Request hardware repairs. *2
EEPROM data corrupted *1	e-m3	Measurements will stop and operation will not be possible.	Request hardware repairs. *2
Calibration error *1	e-m4	Measurements will stop and operation will not be possible.	Request hardware repairs. *2
Input voltage exceeded allowed range *3	e-s1	The error display and measured value display will alternate and measurements will continue.	Return the input signal to within the rated range.
Input current exceeded allowed range *3	e-s2	The error display and measured value display will alternate and measurements will continue.	Return the input signal to within the rated range.
Frequency input error *3	e-s3	The error display and measured value display will alternate and measurements will continue.	Return the input signal (voltage) to within the rated range.
Incorrect wiring detected *4	e-s4	The error display and measured value display will alternate and measurements will continue.	Correct the phase sequence of the input signal (voltage) wiring.

*1. If errors e-m1 to e-m4 occur, all outputs will be stopped and key operations will not be accepted.

*2. Contact your OMRON representative.

*3. An error will occur if the voltage exceeds 110% of the rated value, the current exceeds 120% of the rated value, or the frequency is not between 45 and 65 Hz.

A frequency error will not be displayed if the input voltage is 20 V or lower.

If VT is set, the secondary voltage setting will be the rated voltage.

*4. Error e-s4 will be displayed only if the Incorrect Voltage Wiring Detection Function is set to ON.


■ Troubleshooting

Problem	Description	Location to check
The voltage or current can be measured, but the power is not measured correctly.	The CT may be installed in the wrong direction.	If the measured value is negative, all of the CTs may be installed in the wrong direction. Also, if the measured value is close to 0, only one of the CTs may be installed in the wrong direction.
	The voltage phase sequence may not be correct.	The power cannot be measured correctly if the voltage phase sequence is not correct. Correct the wiring.

Connection Diagrams, Terminal Arrangement, and Communications Connections

■ Connection Diagrams

● Smart Power Monitor

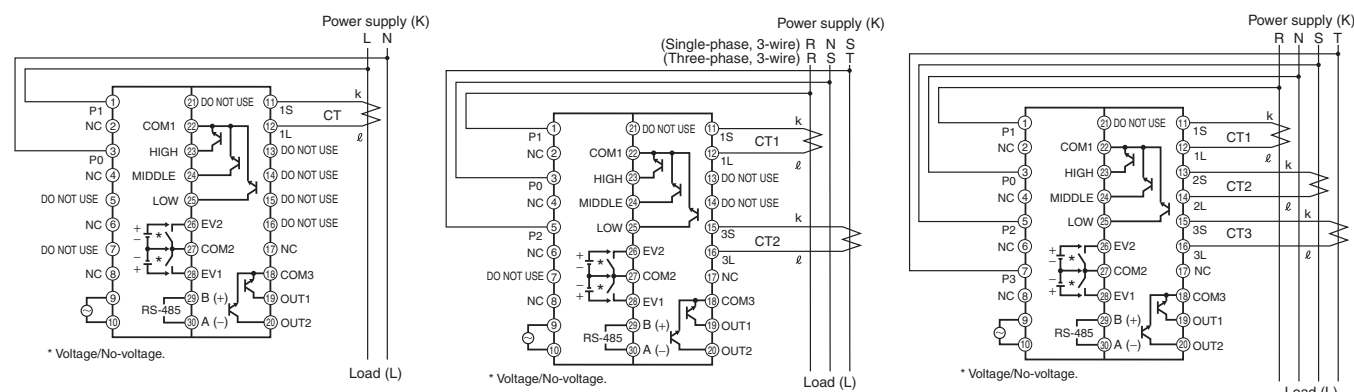


Single-phase, Two-wire Connections

Single-phase, Three-wire or
Three-phase, Three-wire Connections

Three-phase, Four-wire Connections


Note: 1. Do not ground the Special CTs. Failure may occur.
2. Use only the Special CTs. Failure may occur.

■ Terminal Arrangement

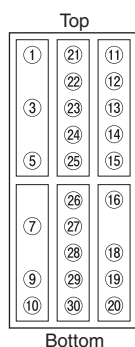


Terminal No.	Terminal name	Terminal No.	Terminal name	Terminal No.	Terminal name
1	P1 voltage	21	DO NOT USE	11	CT1S
		22	Common 1	12	CT1L
3	P0 voltage	23	Three-state HIGH output	13	CT2S
		24	Three-state MIDDLE output	14	CT2L
5	P2 voltage	25	Three-state LOW output	15	CT3S
		26	Event input 2	16	CT3L
7	P3 voltage	27	Common 2		
		28	Event input 1	18	Common 3
9	Control power	29	RS-485 B (+)	19	OUT1
10	Control power	30	RS-485 A (-)	20	OUT2

■ Communications Connections

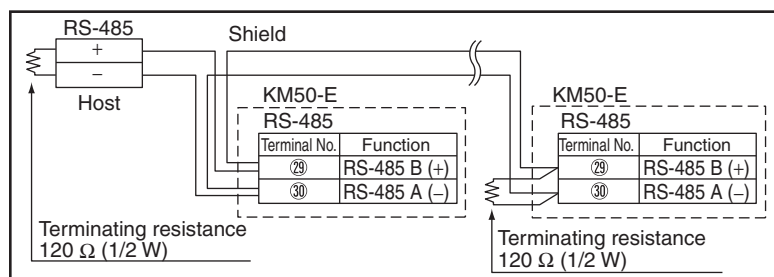


■ Special CT Connection Diagram

- One Special CT is required to measure single-phase, two-wire power. Two Special CTs are required to measure single-phase, three-wire power or three-phase, three-wire power. Three Special CTs are required to measure three-phase, four-wire power.
- All the Special CTs connected to one KM50-E Power Monitor must have the same ratings.
- Make sure that the ratings of the Special CTs and the Special CT setting in the KM50-E Power Monitor are the same.
- Check the directions of the power supply (K) and load (L) before making the connections. Correct measurements will not be possible if they are connected in the wrong directions.
- Release the locking hook and clamp the Special CT on the line. Do this for each phase. Then, press the hook firmly until you hear it lock into place.
- Make sure that the terminal cover on the secondary side of the Special CT is closed securely.
- Do not ground the Special CTs. Failure may occur.
- The Special CTs have polarity. Connect the Special CTs correctly, connecting the 1S, 2S, and 3S terminals on the KM50-E Power Monitor to the k terminals on the Special CTs and the 1L, 2L, and 3L terminals on the KM50-E Power Monitor to the ℓ terminals on the Special CTs.

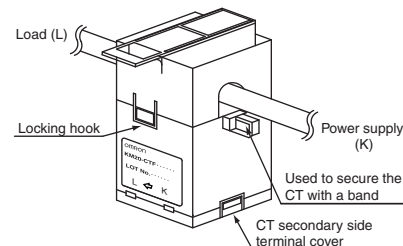

Dimensions

(Unit: mm)

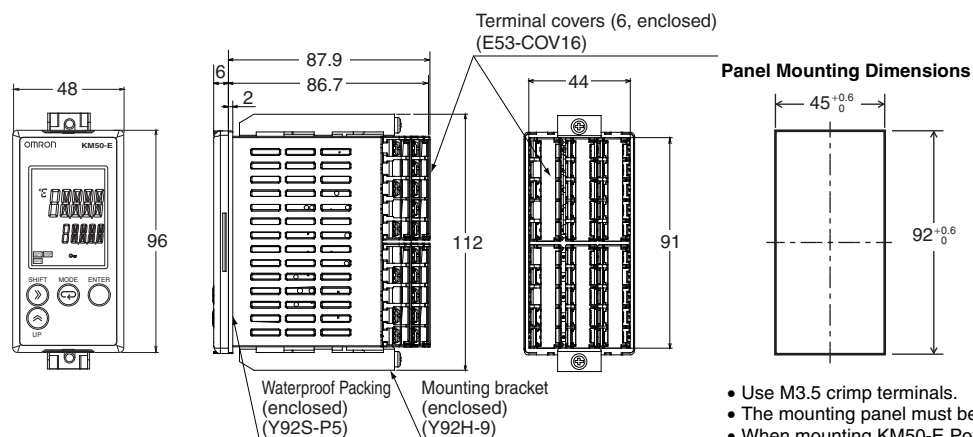

- Use M3.5 crimp terminals.
- The mounting panel must be 1 to 8 mm thick.
- When mounting KM50-E Power Monitors side by side, provide sufficient space between them.
Reference separation: 120 mm (vertical)
60 mm (horizontal)
Both of these are distances from the center of the Power Monitor.
- Make sure that the rated ambient temperature of the KM50-E Power Monitor is not exceeded when more than one Power Monitor is mounted.

Parameter Displays

State Transitions


Power ON

* This is an example for three-phase, three-wire power.

For single-phase, two-wire power, Current 2, Current 3, Voltage 2, and Voltage 3 are not displayed.

For single-phase, three-wire power, display No. 2 is different for the current or voltage (e.g., $R-S \rightarrow R-N$).

For single-phase, four-wire power, display No. 1 is different for the voltage (e.g., $V-S \rightarrow V-N$).

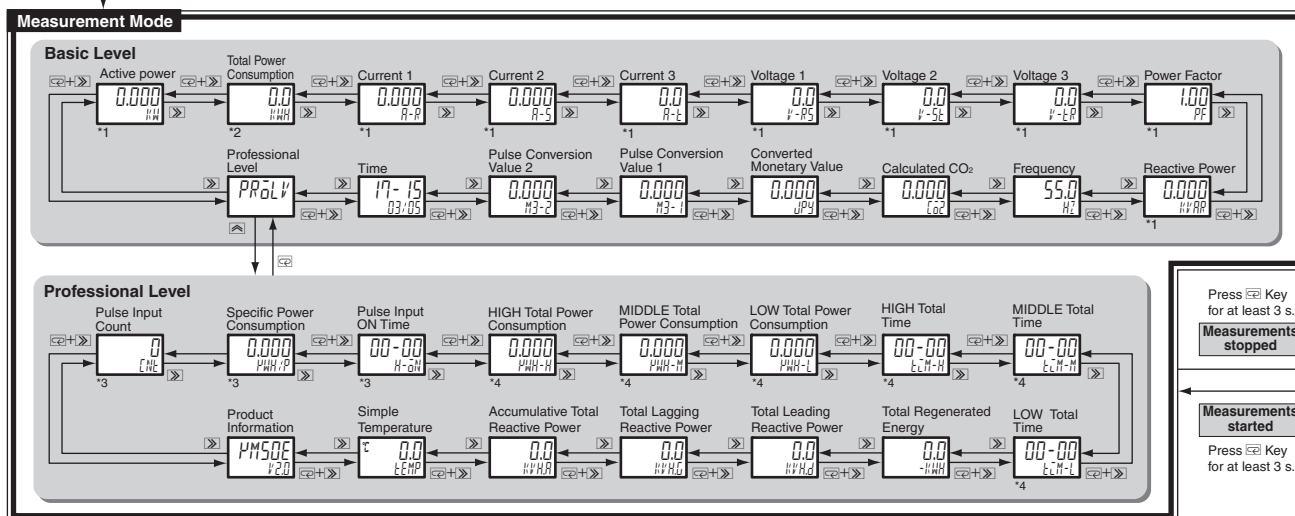


Press [F4] Key for at least 3 s.
Measurements stopped


Measurements started
Press [F4] Key for at least 3 s.

* Refer to outside the frame for *1, *2, *3, and *4.

Examples for *1, *2, *3, and *4

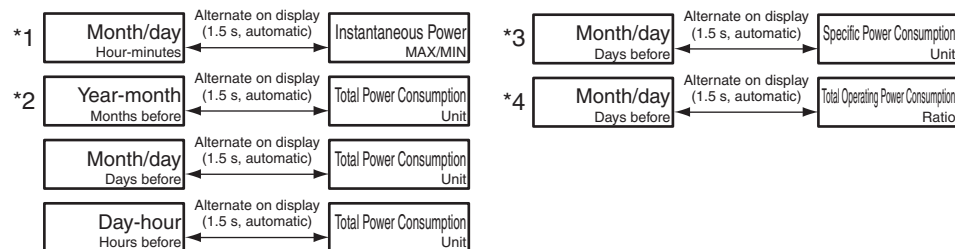


Note: The log information is not cleared automatically even if the Application Circuit parameter or other parameters are changed. Initialize (15.ini) the KM50-E Power Monitor as required.

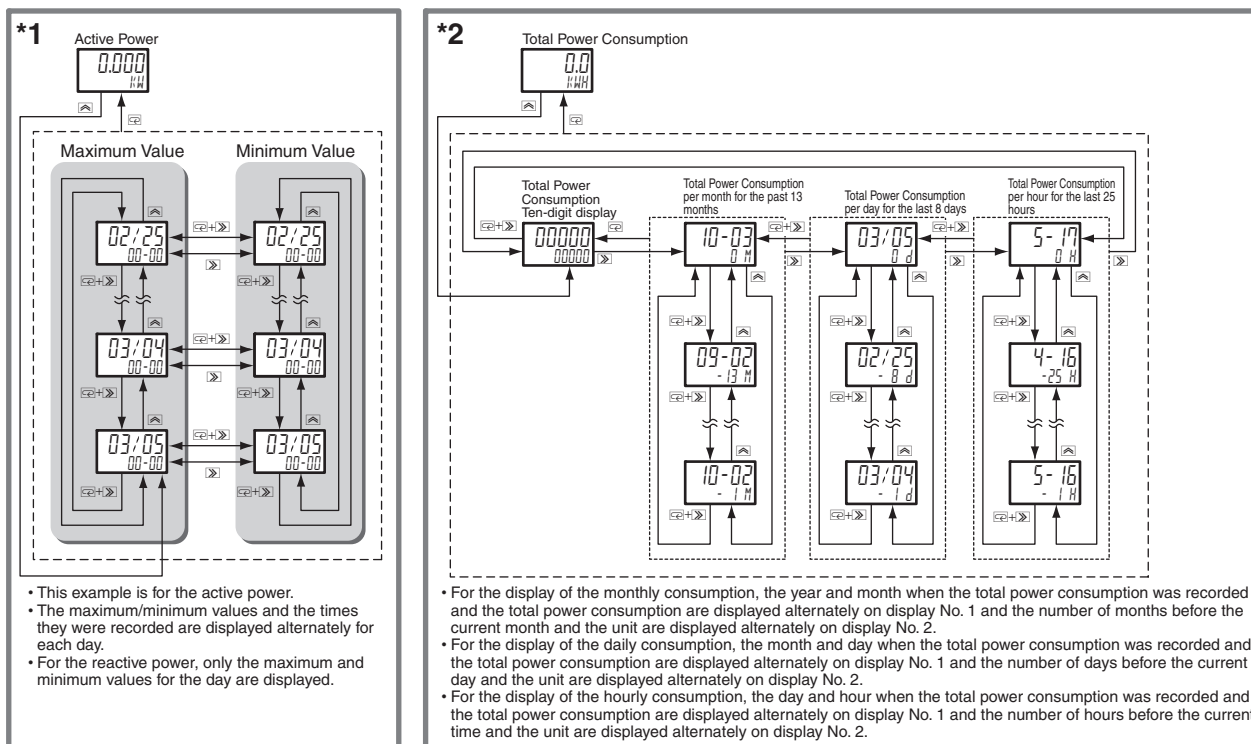


Setting Modes

Operation Setting Mode


Basic Level

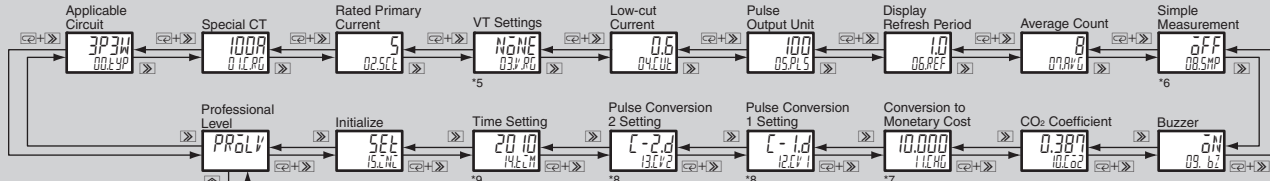

Professional Level

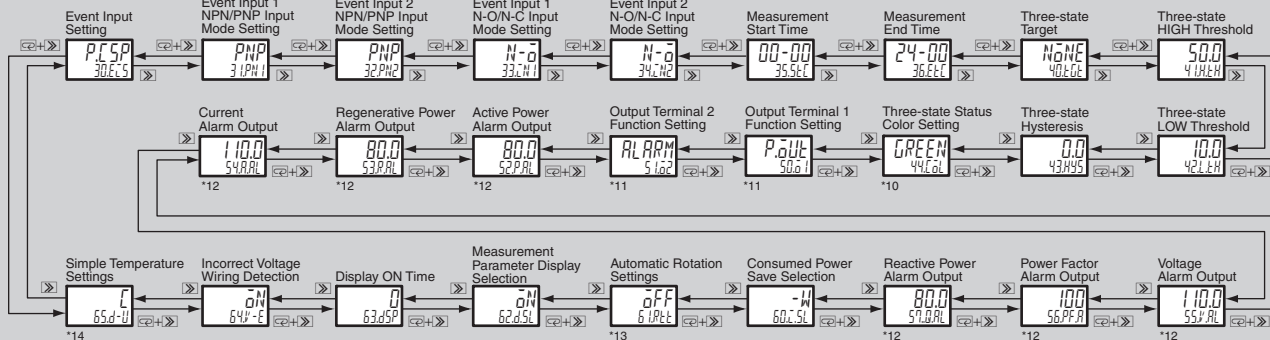


Communications Setting Mode

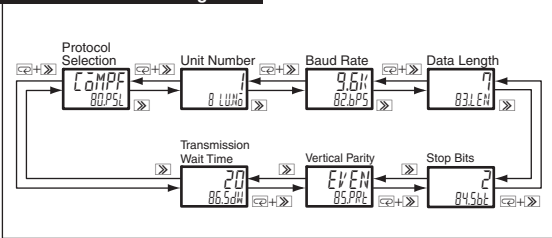


- * Refer to outside the frame for *5, and *6.
- * Refer to page 16 for *7 to *14.

*3

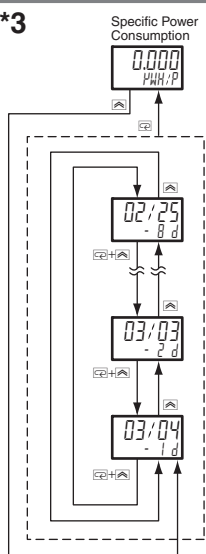


- This example is for the specific power consumption.
- The month and day when the specific power consumption was recorded and the specific power consumption are displayed alternately on display No. 1 and the number of days before the current day and the unit are displayed alternately on display No. 2.

*4

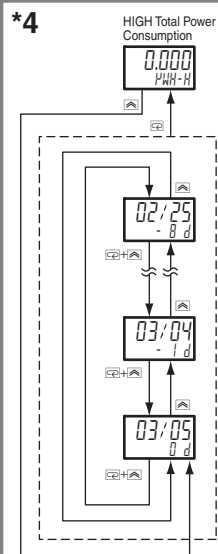


- This example is for the HIGH total power consumption.
- The month and day when the HIGH total power consumption was recorded and the HIGH total power consumption are displayed alternately on display No. 1 and the number of days before the current day and the ratio are displayed alternately on display No. 2.

*5

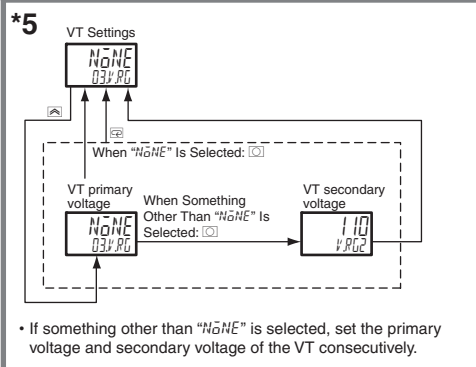

- If something other than "NONE" is selected, set the primary voltage and secondary voltage of the VT consecutively.


*6

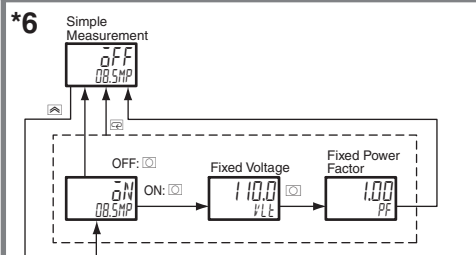

- When the simple measurement function is set to ON, set the fixed voltage value and power factor consecutively.

***7**


Conversion to Monetary Cost Setting

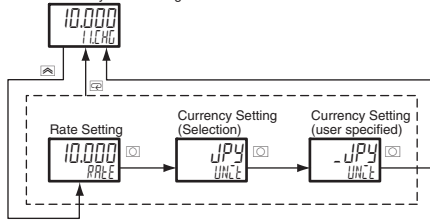

- Set the rate and currency consecutively.
- The currency can be set to a user-specified value after a currency is selected.

***8**


Pulse Conversion 1 Setting

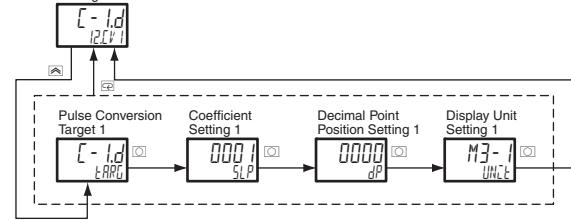

- Example of pulse conversion 1 setting.
- Set the pulse conversion target, coefficient, decimal point position, and display unit consecutively.

***9**


Time Setting

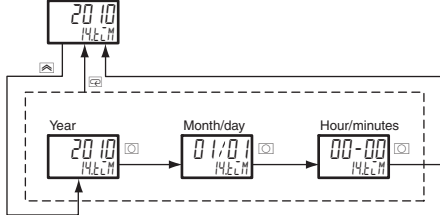

- The year, month/day, and hour/minutes are set in order.

***10**


Three-state Status Color Setting

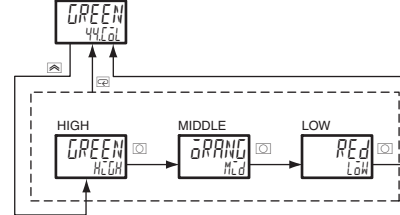

- Set the backlight colors for HIGH, MIDDLE, and LOW status consecutively.

***11**


Output Terminal 1 Function Setting

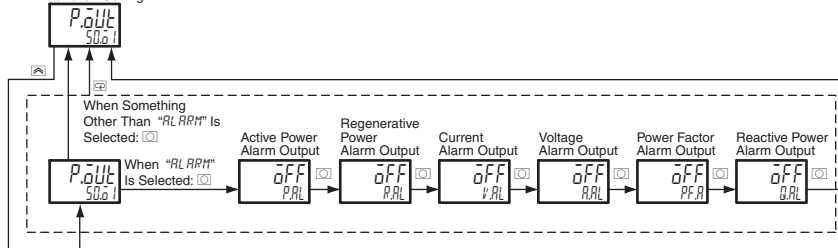

- Example of output terminal 1 function setting.
- When "ALARM" is selected, set the ON/OFF status of the alarms.

***12**


Active Power Alarm Output

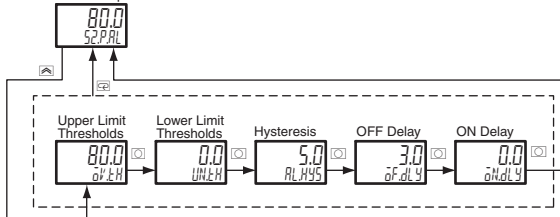

- Example of active power alarm output.
- Set the upper and lower limit thresholds, hysteresis, and OFF/ON delays consecutively.
- Display No. 2 changes from the threshold value to the calculated operating value 1.5 seconds after the upper and lower limit thresholds and hysteresis are changed.

***13**


Automatic Rotation

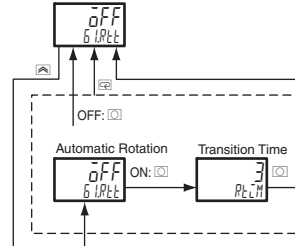

- When automatic rotation is set to ON, set the transition time.

***14**

Simple Temperature Settings

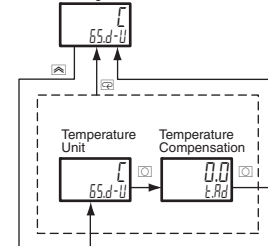


- Set the temperature unit and temperature compensation are set consecutively.

Main Functions

■ Total Power Consumption Pulse Output

To use total power consumption pulse outputs, connect terminals 18 and 19 and terminals 18 and 20 (the terminals that were set in the output terminal settings).



The pulse output cycle can be found with the following formula.


$$\text{Pulse output cycle [s]} = 3,600 [\text{s}]/\text{Power [W]}/\text{Pulse output unit [W}\cdot\text{h]}$$

Example:

If the input power is 200 [kW] and the pulse output unit is set to 10 k [W•h] for a three-phase, three-wire circuit, the output pulse cycle will be $3,600 [\text{s}]/200 [\text{kW}]/10 [\text{kW}\cdot\text{h}] = 180 [\text{s}]$. If an input power of 10 k [W] continues for one hour (3,600 s), the total power consumption will be 10 k [W•h].

If the input power is 200 k [W] and the pulse output unit is set to 10 k [W•h], 200 k [W]/10 k [W], or 20 pulses will be output. The cycle will therefore be 3,600 [s]/20 pulses, or 180 [s].

As shown in the following figure, one pulse will be output (i.e., the terminal signal will turn ON) every 180 seconds.

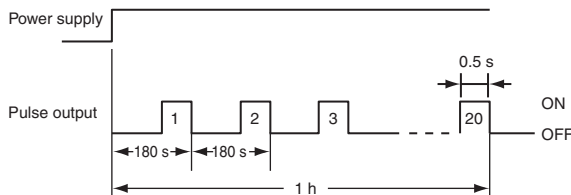


If the cycle becomes shorter than the pulse width or if the output must turn ON immediately after turning OFF, an OFF time of 100 ms will be maintained.

If the OFF time is too short, the PLC or other host may not be able to count the pulses correctly due to the program scan time. Be sure to set a suitable pulse output unit.

■ Alarm Outputs

To use alarm outputs, connect terminals 18 and 19 and terminals 18 and 20 (the terminals that were set in the output terminal settings).



The alarm turns ON if the measured value exceeds the upper limit threshold or falls below the lower limit threshold for the alarm.

If the alarm output is ON, it will remain ON until the measurement value goes below or above the hysteresis range.


The OFF delay, which holds the output ON for a set time after the alarm criteria turns OFF, and the ON delay, which holds the output OFF for a set time after the alarm criteria turns ON, can also be set. When there is an alarm, the OUT 1 or OUT2 operation indicator will light, and the present measurement value will alternate with an alarm output display.

However, the error display is given priority if an E-S1 to E-S4 error occurs.

- Note:**
1. Alarms are output when the threshold and hysteresis criteria is met, and the time set for the OFF delay or ON delay has passed.
 2. If the upper limit threshold of the alarm is set to the maximum value, the upper limit alarm function will be disabled. If the lower limit threshold is set to the minimum value, the lower limit alarm function will be disabled.

■ Three-state Outputs

To use the state transistor outputs, connect external devices between terminals 22 and 23, terminals 22 and 24, and terminals 22 and 25.

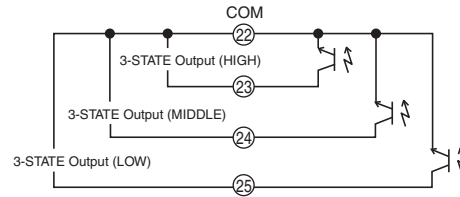

The Three-state Energy Classification of the KM50-E Smart Power Monitor divides the total power consumption into three consumptions, HIGH, MIDDLE, and LOW, based on the user-set HIGH threshold (41.h.th) and LOW threshold (42.l.th).

Three-state Energy Classification allows you to visualize the power consumption conditions to help you determine where power is being lost.

The target (40.tgt) can be set to the Active Power (pwr), Current (a), or Voltage (v). Values above the HIGH threshold will be measured as HIGH Total Power Consumption (P_{wh-h}), values below the LOW threshold will be measured as LOW Total Power Consumption (P_{wh-l}), and values between the thresholds will be measured as MIDDLE Total Power Consumption (P_{wh-m}).

In addition to dividing the total power consumption, the time at each status (HIGH/MIDDLE/LOW Total Time (tim-h/m/l)) and the ratios for each status (HIGH/MIDDLE/LOW Total Power Ratio and HIGH/MIDDLE/LOW Total Time Ratio) can also be displayed (in the Profession Level of Measurement Mode).

The backlight color will change according to the status.

Also, there are outputs for the HIGH, MIDDLE, and LOW status to enable linking external devices.

The Start Time (35.stc) and the End Time (36.etc) can be set for Three-state Energy Classification to save the data for each day.

If measurements are performed across days, it will not be saved for the first day. The data will be saved for the next day.

Classification Targets

• Active Power (pwr)

The active power is used as the criteria and the classification target and total power consumptions are saved according to the HIGH and LOW thresholds.

When measuring regenerative power, only the LOW status is detected and only the LOW time is totaled.

If the low-cut current function is enabled, the low-cut current will be considered to be a reactive power of 0.

• Current (a) or Voltage (v)

The voltage or current that is measured directly is used as the classification target and total power consumptions are saved according to the HIGH and LOW thresholds.

Note: Phases In and Vrs for single-phase, three-wire power and phases Is and Vtr for three-phase, three-wire power are not used as targets.

For three-phase, three-wire power, HIGH status is determined using an OR of phases Vrs and Vst (i.e., when either value exceeds the threshold), and the LOW status is determined using an AND of phases Vrs and Vst (i.e., when both values go below the threshold).

If the low-cut current function is enabled, the low-cut current will be considered to be a current of 0.

• When the Event Input Setting "30.eis" Is Set to "3-st"

The status of event input 1 and event input 2 are used as the criteria to total the power consumption.

Input 1	Input 2	Result
0	0	LOW
0	1	LOW
1	0	MIDDLE
1	1	HIGH

0: No input, 1: Input


- Select (**none**) to disable Three-state Energy Classification.

Hysteresis (43.hys) can be set for the HIGH and LOW thresholds. Set the hysteresis as a percentage of the rated input (between 0.0% and 19.9%).


While the hysteresis is being set as a percentage of the rating, the actual value that corresponds to the setting will be displayed on display No. 2.

Application Example

When HIGH = Operation state (green), MIDDLE = Standby state (orange), LOW = Stopped state (red)

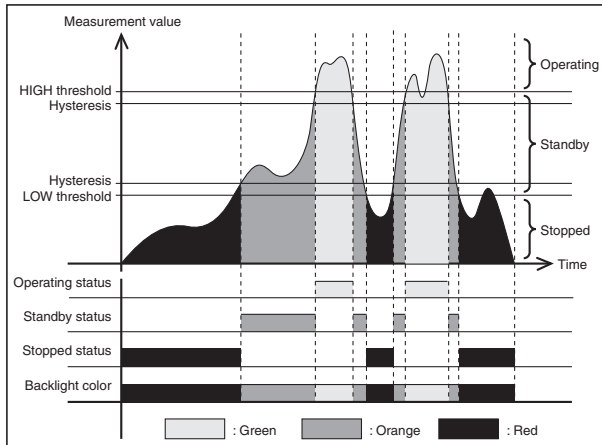


Example 1: threshold

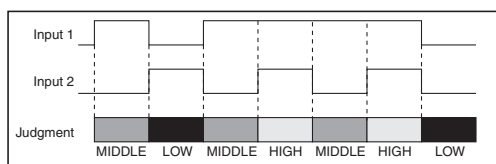

Example 2: Event Input

Event Inputs

To use event inputs, connect terminals 26 and 27 and terminals 27 and 28.

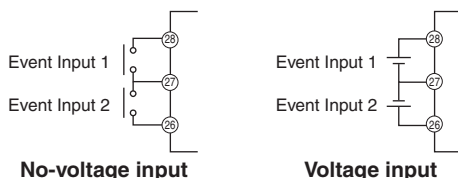

No-voltage input

Voltage input

The ON and OFF criteria can be based on the total count of the two inputs, an OR of the two inputs, or the status of the inputs.

Input count: Used for the specific power consumption.

OR: The pulse input ON time is measured.

Input status: Three-state classification of event inputs.

The inputs can be set separately to normally open or normally closed. The start and stop times for measurement can also be set.

The following values can be measured using the event inputs.

- Specific Power Consumption
The power consumption calculation function counts the number of times that the event inputs turn ON and calculate the amount of power consumption per count. The total of the number of ON signals of event input 1 and event input 2 is used as the input.
- Pulse Input ON Time Measurement
The total time that one or both of the event inputs are ON is calculated for one day and displayed.
The ON time is measured for an OR of the event input 1 and event input 2 signals.
- Three-state Classification of the Event Inputs
Power is classified as HIGH, MIDDLE, and LOW power according to the status of event input 1 and event input 2.

Either of the following input modes can be set.

- Normally Open
The event input will be considered valid when it is ON and invalid when it is OFF.
- Normally Closed
The event input will be considered invalid when it is ON and valid when it is OFF.

Measurement Log

Measurement logs can be checked.

Total power consumption (for the past 13 months, 8 days, or 25 hours), active power, current, voltage, power factor (maximum and minimum for the past 8 days), reactive power (maximum and minimum of the day), pulse input count, power consumption rate, pulse input ON time (for the last 8 days), HIGH, MIDDLE, or LOW total power consumption, HIGH, MIDDLE, or LOW total time (for the last 8 days).

Low-cut Function

When the current is less than the low-cut value (0.1% to 19.9% of the rating), this function forces the current measurement to zero.

This way, current (power) generated due to induced noise in a no-load state can be eliminated.

Low currents are detected using an AND on the phases connected to the CTs.

* Related parameter: 04.cut

Simple Measurements

If voltage cannot be input due to site conditions, a user-specified voltage and power factor can be set to determine the approximate power level.

* Fixed values are used for the voltage and power factor, so the accuracy specifications do not apply.

* The frequency cannot be measured. It is fixed at 50 Hz.

* Related parameter: 08.smp

Calculated CO₂

The measured power can be converted to CO₂ and displayed.

* The conversion coefficient depends on the region.

Check on the web site of the power company for the applicable coefficient.

* Related parameter: 10.co2

Conversion to Monetary Value

The measured power can be converted to the monetary cost and displayed.

* Set the conversion factor according to the currency.

* The user-set currency can be displayed on display No. 2.

* Related parameter: 11.chg

Pulse Conversion

The measured pulse input count can be displayed as a pulse converted value.

* Set a conversion coefficient according to what you want to display as the pulse converted value.

* Any user-set unit can be displayed on display No. 2.

* Related parameter: 12.cv1, 13.cv2

Specific Power Consumption Management

The takt power of the production line can be measured in kW•h/pulse. If the number of manufactured items is input to the Power Monitor as event input pulses, the takt power consumption can be calculated from the total power consumption and displayed for the specified period (1 day maximum).

* Related parameter:

30.eis, 31.pn1, 32.pn2, 33.in1, 34.in2, 35.stc, 36.etc

■ Total Regenerative and Reactive Power

The total regenerative power, leading reactive power, lagging reactive power, and accumulative reactive power can be calculated.

- * Total reactive power: the sum of the absolute values of leading and lagging reactive powers.
- * One item out of the four can be logged every five minutes.
- * Related parameter: **60.i.sl**

■ Automatic Rotation

This function automatically changes the measurement mode parameters.

- * The interval at which the parameters change can be set.
- * Related parameter: **61.rtt**

■ Measurement Parameter Display Selection

The display of each measurement parameter can be set ON or OFF.

- * Related parameter: **62.d.sl**

■ Energy-saving Mode

The display is turned OFF whenever there is no key operation.

- * The time it takes until the display is turned OFF can be specified.
- * Related parameter: **63.dsp**

■ Incorrect Voltage Wiring Detection

Incorrect voltage input wiring is detected.

If the wiring is not correct, "e-s4" is displayed.

- * Related parameter: **64.v-e**


■ Simple Temperature Measurements

Temperature measurement is simplified.


- * Celsius or Fahrenheit can be selected.
- * Related parameter: **65.d-u**

Wiring Precautions

- Wire signal lines and power lines separately to prevent the influences of noise.
- Use twisted-pair cables with wires of AWG24 to AWG14 (cross-sectional areas of 0.205 to 2.081 mm²). (Use a stripping length of 5 to 6 mm.)
- Use the Special CT Cable (KM20-CTF-CB3, 3 m) to connect Special CTs.
Connect the Special CT to the end with the shrinking tubes.
- Do not ground the Special CTs or the RS-485 signal line. Failure may occur.
- Use crimp terminals to wire the terminals.
- Use wires and crimping tools that are suitable for the crimp terminals.
- To extend the distance between a CT and the Unit, we recommend that you combine a commercial CT and a Special CT.

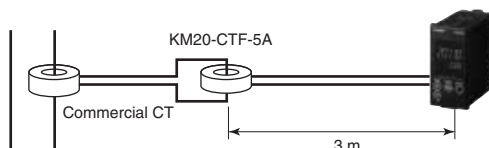











- If more than one crimp terminal is connected to the same terminal, it may not be possible to tighten the screw sufficiently. To connect more than one wire to the same terminal, connect all of the wires to one crimp terminal.
- Tightening the terminal screws to a torque of 0.69 and 0.88 N•m.
- Use the following shape of M3.5 crimp terminals.



- Do not remove the terminal blocks. Doing so may cause failure or malfunction.

Safety Precautions

 CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, or property damage.
---	--

 CAUTION	
Fire or property damage may occasionally occur. Tighten terminal screws to the specified tightening torque. The recommended tightening torque is 0.69 to 0.88 N·m. Confirm that the screws are straight (i.e., not at an angle) after tightening them.	
Minor or moderate bodily harm or property damage may occasionally occur due to explosion. Do not use the product near inflammable or explosive gas.	
Destruction or rupture may occasionally occur. Make sure that the power supply voltage is within specifications.	
Destruction or rupture may occasionally occur. The voltage input circuit and CT secondary circuit are not isolated. If a Special CT is grounded, incorrect wiring will short circuit the voltage input and the secondary circuit of the CT. To prevent failure, do not ground a Special CT. The Power Monitor uses a Special CT. Correct measurements can be made even if the CT is not grounded.	
Electrical shock may occasionally occur. Always turn OFF the power supply before connecting CTs.	
Electrical shock may occasionally occur. Do not touch any of the terminals while the power is being supplied.	
Electrical shock may occasionally occur. The voltage input circuit and CT secondary circuit are not isolated. Do not touch the secondary side of the Special CT.	
Electrical shock, minor injury, fire, or equipment malfunction may occasionally occur. Do not attempt to disassemble, modify, or repair the product.	

Precautions for Safe Use	
<ol style="list-style-type: none"> Do not store, install, or use the product in the following locations. <ul style="list-style-type: none"> Locations that are greatly affected by vibration or shock Unstable locations Outdoors or locations that are subject to direct sunlight, wind, or rain Locations where the specified range of temperature or humidity would be exceeded Locations that are subject to rapid changes in temperature or humidity where condensation or icing may occur Locations that are affected by static electricity or noise Locations that are subject to corrosive gas (particularly sulfide or ammonia gas) Locations that are excessively dusty or dirty Locations that are subject to flooding or oil Locations that are affected by electric or magnetic fields Locations that are subject to splashing brine Install the product in a panel with a panel thickness of 1 to 8 mm. If a suitable panel thickness is not used or the product is installed incorrectly, the product may come free from the mounting. Do not attempt to pull the internal part of the product out of the case. Pulling out the internal part of the product will increase the contact resistance of the internal terminals, possibly damaging measurement accuracy. Read and understand the Operation Manual before attempting to install, use, or maintain the product. Electrical shock, injury, accidents, failure, or malfunction may occur. Always check the wiring and confirm that it is correct before turning ON the power supply. Incorrect or improper wiring may result in electrical shock, injury, accidents, failure, or malfunction. 	

Precautions for Safe Use	
<ol style="list-style-type: none"> Use power supplies and wires with suitable specifications for the control power supply and the power supply for inputs and other parts of the system. Failure, burning, or electrical shock may result. Do not install the product near sources of heat, such as devices with coils or windings. Check all terminal numbers before wiring. Do not connect anything to unused terminals. Use crimp terminals that are suitable for M3.5 screws to wire the product. Install the product well separated from devices with strong high-frequency noise (such as high-frequency welders or sewing machines) or devices that generate surge. To prevent inductive noise, wire the lines connected to the product separately from power lines carrying high voltages or currents. Do not wire in parallel with or on the same cable as power lines. Other measures for reducing noise include running lines along separate ducts and using shields. Do not touch conductive metal parts on the product or the CT terminals while power is being supplied. Do not use the product for measurement on the secondary side of an inverter. Do not block the ventilation holes in or the areas around the product to ensure proper dissipation of heat. Touch grounded metal to discharge any static electricity before touching the product. Do not remove the terminal blocks from the product. Doing so may cause failure or malfunction. Do not continue to use the product if the front surface peels or becomes cracked. Water may enter the product. Install and suitably label a switch or circuit breaker that complies with relevant requirements of IEC 60947-1 and IEC 60947-3 so that the operator can immediately turn OFF the power supply. When using the product in an Overvoltage Category 3 environment, externally install varistors between the power supply and voltage measurement inputs to the product. Use only the Special CT and Special CT Cable specified by OMRON. Special CTs: KM20-CTF-5A, KM20-CTF-50A, KM20-CTF-100A, KM20-CTF-200A, KM20-CTF-400A, or KM20-CTF-600A Special CT Cable: KM20-CTF-CB3 (3 m) The Power Monitor is a Class A product (for use in industrial environments). In residential environment areas it may cause radio interference. If it causes radio interference, the user may be required to take adequate measures to reduce interference. 	

Precautions for Correct Use	
<ol style="list-style-type: none"> Make sure that all parameters are set suitably for the measurement target. This product is not a Special Measuring Instrument that has passed testing by a specified body under the Measurement Act of Japan. It cannot be used to certify power consumption under Japanese law. Do not use solvents, such as paint thinners, to clean the product. Use commercially available alcohol instead. Make sure the rated voltage is reached within 2 s after the power is turned ON. Otherwise, the product may not operate correctly. When discarding the product, properly dispose of it as industrial waste according to all applicable local ordinances. If a water-proof structure is required, install the enclosed Waterproof Packing. Depending on the application environment, the Waterproof Packing can deteriorate, shrink, or harden. We recommend that you replace it periodically. Waterproof Packing: Y92S-P5 (sold separately) Remove the protective film from the front of the product before using the product. Provide a separate power supply for the KM50 from the measurement voltage. Reception interference may occur if the KM50 is installed near radios, televisions, or other wireless devices. 	

OMRON Corporation **Industrial Automation Company**
Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters

OMRON EUROPE B.V.

Wegalaan 67-69-2132 JD Hoofddorp
The Netherlands
Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ELECTRONICS LLC

One Commerce Drive Schaumburg,
IL 60173-5302 U.S.A.
Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2),
Alexandra Technopark,
Singapore 119967
Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2009 All Rights Reserved.
In the interest of product improvement,
specifications are subject to change without notice.

Cat. No. N167-E2-01-X

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Omron:

[KM50-E1-FLK](#)