


Evaluation Board Application Note

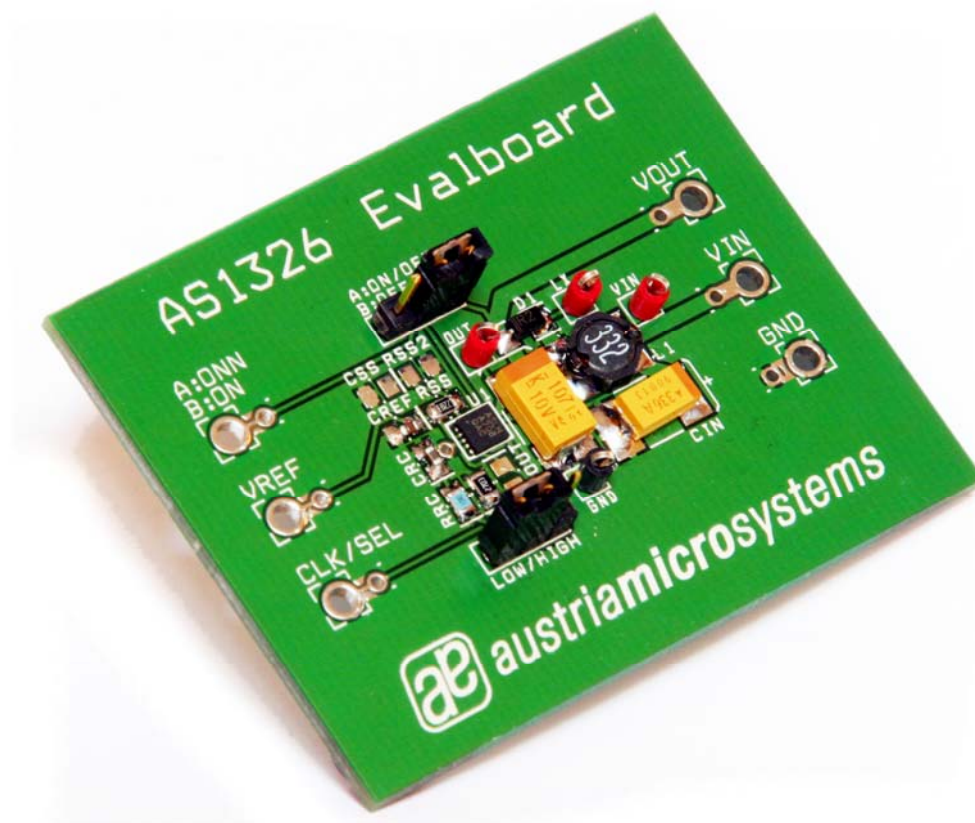

General Description

Board Description

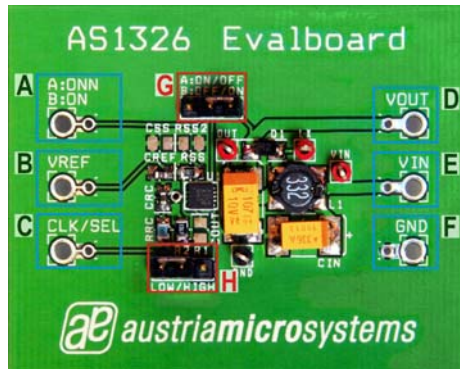


Figure 1: Board Description

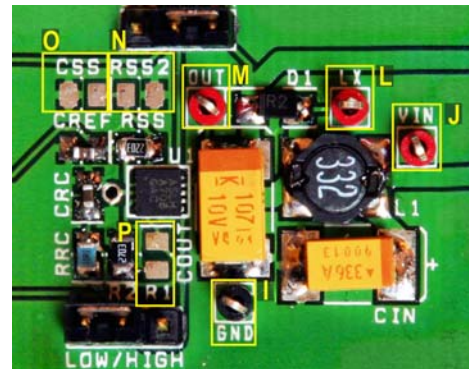








Figure 2: Board Description

Connector Description

Label	Name	Description	Info
A	A:ONN B:ON	Enable Input	AS1326A: 0=ON, 1=OFF AS1326B: 0=OFF, 1=ON
B	VREF	Internal Reference Bypass Pin	
C	CLK/SEL		0: Normal operation enabling automatic powersave mode 1: Forced PWM-mode Clock: Forced PWM-mode with the internal oscillator synchronized to this pin between 500kHz and 1.2MHz.
D	VOUT	Power Output Connector	
E	VIN	Input Voltage	Input voltage ranging from 0.7V to 5V
F	GND	Ground	

Jumper Description

Label	Name	Description	Info
G	A:OFF/ON B:ON/OFF	Enable Jumper	AS1326A:  ON  OFF AS1326B:  ON  OFF
H	LOW/HIGH	Mode Selection	 LOW Normal Operation Mode  HIGH Forced PWM Mode

Measurement Points Description

Label	Name	Description	Info
I	GND	Power Supply Connectors for VBATT and Ground.	
J	VIN	External Conductor	
L	LX	Power Output Connector	
M	OUT		

Additional Components

Label	Name	Description	Info
N	RSS2	Current Limit Resistance	$I_{LIMIT} = 1.6A \cdot RSS2 / (RSS + RSS2)$
O	CSS	Softstart Capacitance	$t_{SS} = (RSS \cdot RSS2 / (RSS + RSS2)) \cdot CSS$
P	R1	Output Voltage Resistance	$R1 = R2 \cdot (V_{OUT} / V_{FB} - 1)$

Operational sequence

This evaluation board comes with the AS1326A. The output voltage is set to the default 3.3V but can be adjusted if an additionally resistor R1 “P” is soldered on the board.

1. If not present get the [datasheet](#) for the AS1326 from www.austriamicrosystems.com. Drive the IC on the Demoboard only with the recommended settings and values as described in the datasheet.
2. Connect a +0.7V to V_{OUT} power supply (VIN “E” and GND “F”).
3. Perform measurements at the measurement points “I” to “M”.

If there are questions do not hesitate to contact us. See contact information at the end of the application note.

Optional Features

Setting the output voltage

The AS1326 has a default output voltage of 3.3V. Additionally the output voltage can be set between 2.5 and 5V via an additionally resistor R1 which can be placed at “P”. The required resistor value for a certain output voltage can be calculated as shown in equation 1.

$$R1=R2*(V_{OUT}/V_{FB}-1) \text{ (Eq1)}$$

$$R1=270k\Omega*(V_{OUT}/1.24V-1) \text{ (Eq2)}$$

Using the current limiter

The ISET pin is used to adjust the inductor current limit and to implement the soft-start feature. With pin ISET connected to pin REF, the inductor current limit is set to 1.6A. With ISET connected to a resistor-divider network from pin REF to GND, the current limit is calculated as:

$$I_{LIMIT}=1.6A*RSS2/(RSS+RSS2) \text{ (Eq3)}$$

$$I_{LIMIT}=1.6A*RSS2/(220k\Omega+RSS2) \text{ (Eq4)}$$

Setting the soft-start

On default the soft-start feature is disabled. The soft-start feature can be implemented by placing a resistor RSS (already soldered) between pin ISET and pin REF and a capacitor CSS between pin ISET and GND. At power-up, ISET is 0V and the LX current is

$$t_{ss}=RSS*CSS \text{ (Eq5)}$$


$$t_{ss}=220k\Omega*CSS \text{ (Eq6)}$$

If the current limiter resistance is also in use, the equation for the soft-start time would be:

$$t_{ss}=(RSS*RSS2/(RSS+RSS2))*CSS \text{ (Eq7)}$$

$$t_{ss}=(220k\Omega*RSS2/(220k\Omega+RSS2))*CSS \text{ (Eq8)}$$

Board schematics and layout

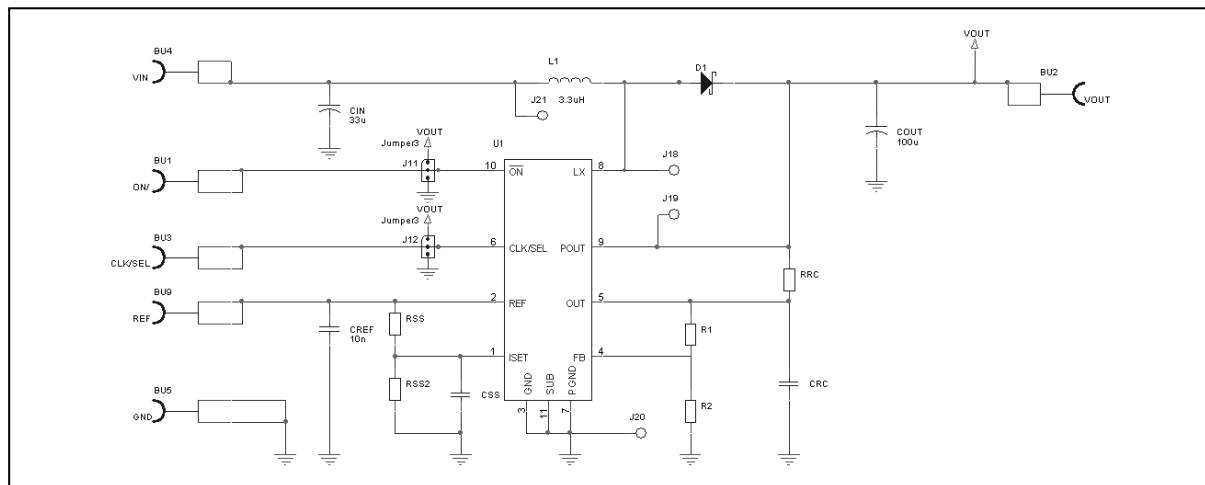

AS1326 Evalboard

The diagram illustrates the AS1326 Evalboard with the following components and connections:

- Inputs:**
 - A:ONN B:ON:** A 2-pin header.
 - A:ON/OFF B:OFF/ON:** A 2-pin header.
 - VREF:** A single-pin header.
 - CLK/SEL:** A 2-pin header.
 - LOW/HIGH:** A 2-pin header.
- Outputs:**
 - VOUT:** A single-pin header.
 - VIN:** A single-pin header.
 - GND:** A single-pin header.
- Internal Components:**
 - Resistors:** LSS, RSS2, CREF, RSS, RRC, CRC, R2, R1.
 - Capacitors:** D1, L1, C1N.
 - Other:** OUT, IN, GND.

The diagram shows the internal circuitry connecting these pins to the AS1326 chip and its associated components.

austriamicrosystems

AS1326 Evalboard Rev 1.0

www.austriamicrosystems.com

Figure 5: Bottom view

Label	Info	Type	Manufacturer
CIN	33μF, ±10%, 10V, 150mΩ	TPSC336K010R0150	AVX
COU	100μF, ±10%, 10V, 50mΩ	T495D107M010ATE050	Kemet
or	82μF, ±20%, 6.3V, 18mΩ	A700V826M006ATE018	Kemet
L1	3.3μH, 46mΩ, 1.8A	MOS6020-332	Coilcraft
RSS	220kΩ		
R1	270kΩ		
RCC	10Ω		
CRC	330nF		
RCC	10nF		

Copyright

Copyright © 1997-2007, austriamicrosystems AG, Schloss Premstaetten, 8141 Unterpremstaetten, Austria-Europe. Trademarks Registered ®. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

All products and companies mentioned are trademarks or registered trademarks of their respective companies.

Disclaimer

Devices sold by austriamicrosystems AG are covered by the warranty and patent indemnification provisions appearing in its Term of Sale. austriamicrosystems AG makes no warranty, express, statutory, implied, or by description regarding the information set forth herein or regarding the freedom of the described devices from patent infringement. Austriamicrosystems AG reserves the right to change specifications and prices at any time and without notice. Therefore, prior to designing this product into a system, it is necessary to check with austriamicrosystems AG for current information.

This product is intended for use in normal commercial applications. Applications requiring extended temperature range, unusual environmental requirements, or high reliability applications, such as military, medical life-support or lifesustaining equipment are specifically not recommended without additional processing by austriamicrosystems AG for each application. For shipments of less than 100 parts the manufacturing flow might show deviations from the standard production flow, such as test flow or test location.

The information furnished here by austriamicrosystems AG is believed to be correct and accurate. However, austriamicrosystems AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of austriamicrosystems AG rendering of technical or other services.



Contact Information

Headquarters

austriamicrosystems AG
A-8141 Schloss Premstätten, Austria
T. +43 (0) 3136 500 0
F. +43 (0) 3136 5692

For Sales Offices, Distributors and Representatives, please visit:
<http://www.austriamicrosystems.com/contact>

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[ams OSRAM:](#)

[AS1326A-TD_EK_ST](#)