

## HTB

### 1/4" x 1 1/4" and 5 mm x 20 mm Panel-mount fuse holders

RoHS





#### Product features


- For 1/4" x 1 1/4" and 5 mm x 20 mm fuses
- All holder bodies have the option of using 1/4" x 1 1/4" or 5 mm x 20 mm carriers
- Withstands 15 to 20 Lb-In torque to mounting nut when mounting fuse holder to panel
- High temperature, flame retardant, Thermoplastic meets UL 94V0

#### Mounting Dimensions - in (mm)

HTB-2, -3, -4, -5, and -6



HTB-8, and -9



#### Ordering Information

Packing (Blank) - Std. BK/ - Bulk	Product Symbol	Fuse Carrier I — 1/4" x 1 1/4" M — 5 x 20mm
Body Configuration and Mounting Knob Holders 2 — Low Profile (Rear Panel Hex-Nut) 4 — High Profile *6 — (Front Panel Hex-Nut) 8 — Low Profile (Snap-In) Screwdriver Slotted Holders 3 — Low Profile 5 — High Profile 9 — Low Profile (Snap-In)	Rear Terminal Configuration 2 — Solder / 3/16" Quick-Connect (In-Line) 4 — Solder / 3/16" Quick-Connect (Right Angle) 6 — 1/4" Quick-Connect (In-Line) 8 — 1/4" Quick-Connect (Right Angle)	

\*Profile varies with panel thickness. Holder installs thru rear of panel.

#### Agency information

- UL Recognized: IZLT2, E14853
- CSA Component Acceptance: Class 6225-01, File 47235
- CE

#### Specifications

Product Code	UL Rating (amps)	CSA Rating (amps)	Voltage Rating	Fuse Size	Quick Connect
HTB-X2I	20	16	250	1/4" x 1 1/4"	3/16"
HTB-X4I	20	16	250	1/4" x 1 1/4"	3/16"
HTB-X6I	20	16	250	1/4" x 1 1/4"	1/4"
HTB-X8I	20	16	250	1/4" x 1 1/4"	1/4"
HTB-X2M	16	16	250	5 x 20mm	3/16"
HTB-X4M	16	16	250	5 x 20mm	3/16"
HTB-X6M	16	16	250	5 x 20mm	1/4"
HTB-X8M	16	16	250	5 x 20mm	1/4"

#### Maximum Panel Thickness


Body Type	Inch	mm
HTB-2	0.30	7.62
HTB-3	0.30	7.62
HTB-4	0.125	3.18
HTB-5	0.125	3.18
HTB-6	0.30	7.62
HTB-8	0.125	3.18
HTB-9	0.125	3.18

#### Replacement Parts

HTB-2, -3, -4, -5 and -8


BK/1A4287-1  
Plastic Nut

HTB-2, -3, -4, and -5


BK/1A4806-2  
Metal Nut

HTB-6


BK/1A3322  
Metal Nut







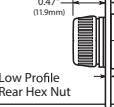
S	P
Splash Proof Cap with O-Ring (IP53 rating) (Optional on Knob Holders Only)	FUSE CARRIER ONLY
-R	
RoHS Compliant	

Packaging Code Prefix	Description
Blank	10 fuse holders packed into a carton
BK	100 fuse holders packed into a cardboard shelf package










Powering Business Worldwide

Dimensions - in (mm)

Knob Type Carrier	Maximum Panel Thickness	Terminal Options				Carrier Options	
		Solder/ 3/16" Quick-Connect		1/4" Quick-Connect		1/4" x 1 1/4" ("I" Equals Inches)	5 x 20mm ("M" Equals Metric)
		In-Line	Rt. Angle	In-Line	Rt. Angle	Knob	Knob
							
Common Dimensional Data: Length (Knob Type) - 1.69 (42.9mm) Plus In-Line Terminal NOTE: Plus In-Line Terminal		0.34" (8.7mm)	0.33" (8.3mm)	0.47" (11.9mm)	0.45" (11.5mm)	3	—
Low Profile Rear Hex Nut	HTB-2	0.30" 7.62mm	0.09" NOM. (2.4mm)	1.125" (28.6mm)	0.47" (11.9mm)	3	—
High Profile Rear Hex Nut	HTB-4	0.125" 3.18mm	0.01" (0.25mm)	0.69" (17.5mm)	0.92" (23.4mm)	3	—
Front Hex Nut	HTB-6	0.30" 7.62mm	0.09" (2.4mm)	1.125" (28.6mm)	0.47" (11.9mm)	3	—
Low Profile Snap-In	HTB-8	0.125" 3.18mm	0.01" (0.25mm)	0.69" (17.5mm)	0.92" (23.4mm)	3	—

Fuseholders and fuse carriers may be ordered separately.

Dimensions - in (mm)

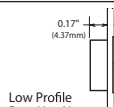Screwdriver Type Carrier	Maximum Panel Thickness	Terminal Options				Carrier Options	
		Solder/ 3/16" Quick-Connect		1/4" Quick-Connect		1/4" x 1/4" ("I" Equals Inches)	5 x 20mm ("M" Equals Metric)
		In-Line	Rt. Angle	In-Line	Rt. Angle	Screwdriver	Screwdriver
							
Common Dimensional Data: (Screwdriver Slotted) 1.75" (44.5mm) NOTE: Plus In-Line Terminal		0.34" (8.7mm)	0.33" (8.3mm)	0.47" (11.9mm)	0.45" (11.5mm)	3	—
Low Profile Rear Hex Nut	HTB-3	0.30" 7.62mm	0.09" NOM. (2.4mm)	1.125" (28.6mm)	0.47" (11.9mm)	3	—
High Profile Rear Hex Nut	HTB-5	0.125" 3.18mm	0.01" (0.25mm)	0.69" (17.5mm)	0.92" (23.4mm)	3	—
Low-Profile Snap-In	HTB-9	0.125" 3.18mm	0.01" (0.25mm)	0.69" (17.5mm)	0.92" (23.4mm)	3	—

Fuseholders and fuse carriers may be ordered separately.

Life Support Policy: Eaton does not authorize the use of any of its products for use in life support devices or systems without the express written approval of an officer of the Company. Life support systems are devices which support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.

Eaton reserves the right, without notice, to change design or construction of any products and to discontinue or limit distribution of any products. Eaton also reserves the right to change or update, without notice, any technical information contained in this bulletin.

**Eaton**  
**Electronics Division**  
1000 Eaton Boulevard  
Cleveland, OH 44122  
United States  
www.eaton.com/electronics

© 2019 Eaton  
All Rights Reserved  
Printed in USA  
Publication No. 2119  
July 2019

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

## Eaton:

[BK/HTB-34I](#) [BK/HTB-34M](#) [BK/HTB-38I](#) [BK/HTB-38M](#) [BK/HTB-36M](#) [BK/HTB-36I](#) [BK/HTB-32M](#) [BK/HTB-32I](#)  
[BK/HTB-26M](#) [BK/HTB-26I](#) [BK/HTB-22M](#) [BK/HTB-22I](#) [BK/HTB-28I](#) [BK/HTB-28M](#) [BK/HTB-24I](#) [BK/HTB-24M](#)  
[BK/HTB-58I](#) [BK/HTB-58M](#) [BK/HTB-54I](#) [BK/HTB-54M](#) [BK/HTB-52I](#) [BK/HTB-52M](#) [BK/HTB-56I](#) [BK/HTB-56M](#)  
[BK/HTB-96M](#) [BK/HTB-96I](#) [BK/HTB-92I](#) [BK/HTB-92M](#) [BK/HTB-98I](#) [BK/HTB-98M](#) [BK/HTB-94I](#) [BK/HTB-94M](#)  
[BK/HTB-24](#) [BK/HTB-28](#) [BK/HTB-26](#) [BK/HTB-22](#) [BK/HTB-88I](#) [BK/HTB-88M](#) [BK/HTB-84I](#) [BK/HTB-84M](#) [BK/HTB-82M](#)  
[BK/HTB-82I](#) [BK/HTB-86M](#) [BK/HTB-86I](#) [BK/HTB-42M-SP](#) [BK/HTB-24I-SP](#) [BK/HTB-42I-SP](#) [BK/HTB-44M-SP](#)  
[BK/HTB-22M-SP](#) [BK/HTB-44I-SP](#) [BK/HTB-62M-SP](#) [BK/HTB-48I-SP](#) [BK/HTB-26M-SP](#) [BK/HTB-26I-SP](#) [BK/HTB-46I-](#)  
[SP](#) [BK/HTB-66M-SP](#) [BK/HTB-62I-SP](#) [BK/HTB-28I-SP](#) [BK/HTB-22I-SP](#) [BK/HTB-46M-SP](#) [BK/HTB-36M-R](#) [BK/HTB-](#)  
[64I-R](#) [BK/HTB-34M-R](#) [BK/HTB-52I-R](#) [BK/HTB-52M-R](#) [BK/HTB-54I-R](#) [BK/HTB-54M-R](#) [BK/HTB-56I-R](#) [BK/HTB-56M-](#)  
[R](#) [BK/HTB-48I-R](#) [BK/HTB-62M-R](#) [BK/HTB-46I-R](#) [BK/HTB-64M-R](#) [BK/HTB-66I-R](#) [BK/HTB-82I-R](#) [BK/HTB-86I-R](#)  
[BK/HTB-86M-R](#) [BK/HTB-88I-R](#) [BK/HTB-88M-R](#) [BK/HTB-62I-R](#) [BK/HTB-34I-R](#) [BK/HTB-22M-R](#) [BK/HTB-24I-R](#)  
[BK/HTB-24M-R](#) [BK/HTB-26I-R](#) [BK/HTB-26M-R](#) [BK/HTB-28I-R](#) [BK/HTB-28M-R](#) [BK/HTB-48M-R](#) [BK/HTB-32M-R](#)  
[BK/HTB-22I-R](#) [BK/HTB-36I-R](#) [BK/HTB-38I-R](#) [BK/HTB-42I-R](#) [BK/HTB-44I-R](#) [BK/HTB-44M-R](#) [BK/HTB-32I-R](#) [HTB-](#)  
[92I-R](#) [HTB-38M-R](#) [HTB-46M-R](#)